

Programmable Terminals

NS Series

NS, the HMI brand you can rely on



» Machine Management

NS, the HMI brand you can rely on

Machine Control at Your Fingertips. On-screen Machine Management.

Expanding markets in emerging countries, short product cycles, and diversifying customer needs are just some of the factors that create drastic changes for the production industry. To win in severe global market competition, you have to continue to grasp industry changes quickly, understand user needs accurately, and provide diverse forms of added value. OMRON will help you handle ever-changing customer needs with the three keywords of the NS Series.

Let Your Machines Evolve

Best Match

OMRON has provided even greater compatibility with OMRON PLCs and components to provide an advanced design process that lets you achieve appealing machines.

Machine Management


The NS Series transforms machine HMIs from simple operation panels and turns them into machine management tools.

Proven Reliability

999999 999999

The NS-series PTs have a proven track record that will take your machines to a higher level of reliability.



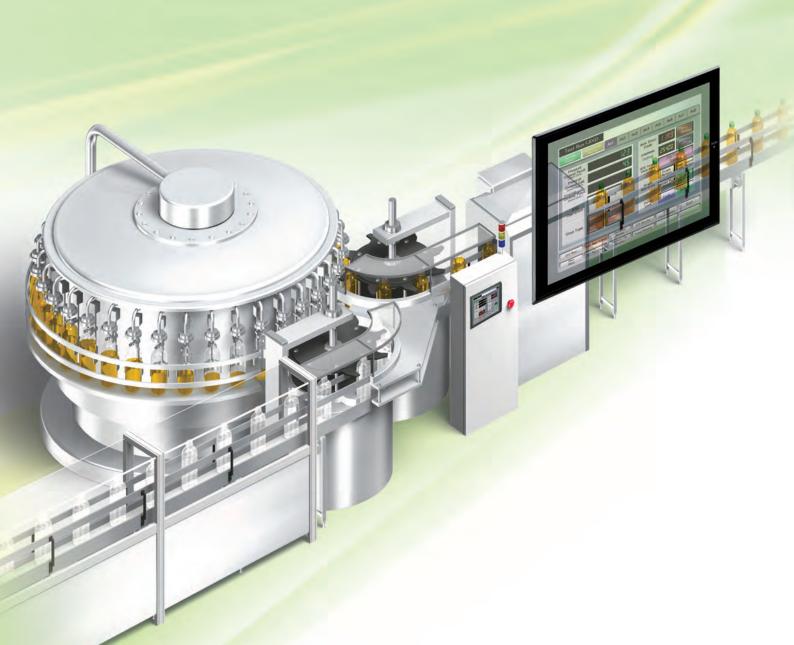



The Best Match Possible

The amount of work and cost of connecting to OMRON PLCs and components have been greatly reduced. The results is an incredible range of features that is possible only when unifying to one manufacturer.



Machine Management Tool

The machine designer can easily implement PLC troubleshooting, machine troubleshooting, settings for servo drives, temperature controllers, and other control components, status monitoring of connected devices, and uploading/downloading of parameters.



Proven Reliability

In the ten years since initial marketing, OMRON has globally supplied numerous HMI solutions with the highly reliable NS Series at over 200 sales and service centers around the world.



NS Series Lineup

This powerful lineup showcases OMRON's unique value. Choose from 3 types to match your application and requirements.

NS Series

Standard Models

Plentiful screen variations and diverse functions allow use in a wide variety of applications.



NSH Series

Hand-held Models



Equipped with a red switch for an emergency stop input. Emergency stop (3 inputs)



A hand-held version of the NS5 is now available to perform operations at the production site.

RS-232C/422A

Memory Card

Equipped with a gray switch for a stop input. Emergency stop (3 inputs) Hand-held PT Cable



NSJ Series

Integrated Controller Models PT is unified with the Controller into one package to greatly help standardize equipment and reduce size.



Software CX-Designer

Set Designer

Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it.

NS-Runtime



This software enables PLC communications from a personal computer by manipulating PT screens created using the CX-Designer.

A Revolutionary Best Ma

The NS-series PTs provide revolutionary compatibility with the road-proven CS/CJ-series the new NJ/NX-series Controllers to achieve even greater added value in user machines.



EtherNet/IP

The NJ/NX-series Machine Automation Controllers Revolutionize Productivity

You can create a flexible, high-speed, high-precision system based on the NJ-series Machine Automation Controllers. Use tags to access any memory areas, or troubleshoot machines and systems by using the NS-series PTs to make the most of the strengths of the NJ/NX-series Controllers and to manage machines.

EtherCAT

Abort

5003

500

alleti

Reset and

| Present Image: Commod Desit Commod Substance Commod Desit Commod Cutter/s Present Use Commod Cutter/s Commod Desit Commod Desit Commod Desit Operation ← Stop Type Immediate | Commit Posit Commit Suit Present Commit Suit Somed Suits Freat Use Commit Desit Commit Suits JOG Operation Fined Suits Doce | (Direct) | Memory Op. | Ax1 | Axa |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|------------|---------------|-----|
| Commd Posit Come Units Present Commd Spat Some Units Comma Units Comma Units JOG Operation ← → | Commd Posit Dense luit Present Commel Spid Domed luits JOG Operation Stop Type | - | | | |
| Commit Sind Commit Units Commit Units Commit Units JOG Operation | Comnd Spd Jomet Units/ Preset Use Connol Posit Doned Units JOG Operation ← → Stop Type Immediate Stop Type | Comnd Posit | | | le |
| Connel Posit JOG Operation \leftarrow \rightarrow Recent | Commd Posit JOG Operation ← → Stop Type Immediate Decet Stop Type Immediate | | | | |
| Operation | Operation Stop Type Inmediate Stop | Comnd Posit | | | |
| | Stop Type Stop | | + | \rightarrow | - |
| | | Stop Type | | | |

tch PLCs and

The CS/CJ-series PLCs for the Reliability of a Proven Track Record

Features are provided to easily connect to CS/CJ-series PLCs to take advantage of their proven track record.

Many features that do not require screen creation or programming support everything from design through maintenance to take advantage of the compatibility of OMRON PLCs and PT and to serve as the face of your machines.



.

1


TREND SCREEN

10-

B180 -

Power Support for All User

From conceptual designs through commissioning, operation, and maintenance, the NS

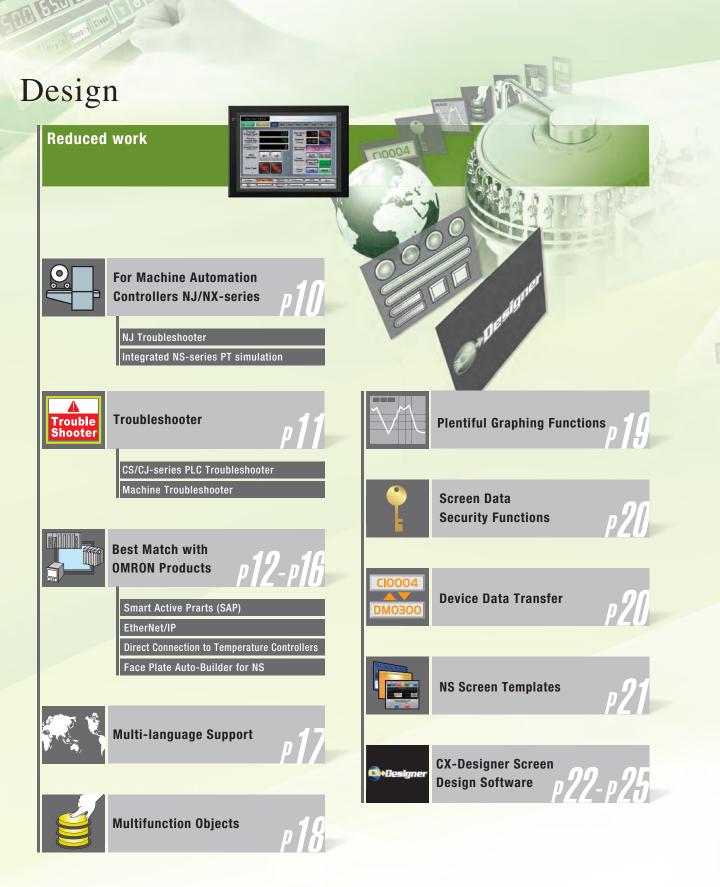

SAD

Needs

Series supports every user need.

Startup/Operation



.

NJ/NX Controller

For Machine Automation Controllers NJ/NX-series

Use Integrated NS-series PT simulation or NJ troubleshoot by using the NS-series PTs to make the most of the strengths of the NJ/NX-series Controllers and to manage machines.

NJ Troubleshooter

Controller Errors

Standard Feature for NJ/NX-series Controllers

Errors are automatically detected and displayed on-screen along with corrective actions for the CPU Unit function modules, EtherCAT slaves, and CJ-series Units that are connected in the NJ/NX-series Controller. Whenever an error might occur, you can recover normal operation quickly to reduce downtime without using user manuals or Support Software on a computer.

User-defined Errors

No Work Is Required to Create Alarm Screens.

Frames for alarm screens are provided as standard features in the NS-series PTs. You do not need to create screens to complete alarm screens. Management of the meanings of alarms is unified on the Controller, so you do not have to register, add, or correct addresses on the NS-series PTs.



Integrated NS-series PT simulation


Improved debugging efficiency

"Integrated simulation" of Sysmac Studio enables offline debugging of the screen data for the NS-series PTs and sequence program for the NJ/NX-series on the computer.

* Sysmac Studio version 1.02 or higher (CX-Designer version 3.41 or higher) is required.





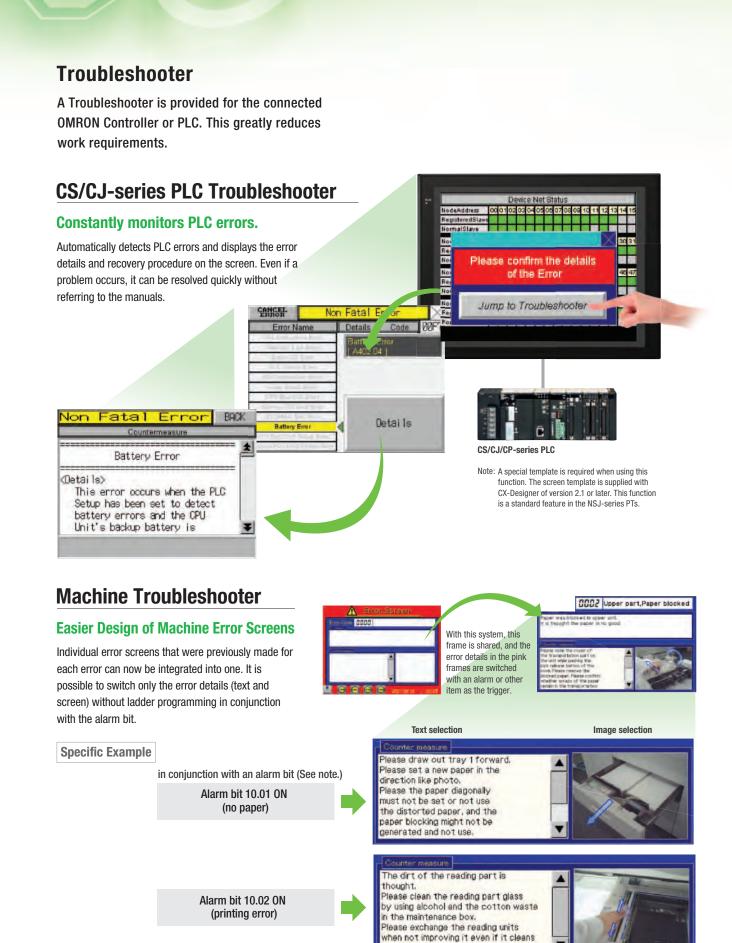

Note: Alarms, PLC/PT memory, and other items can be selected for the switching trigger.

STOP

Specifications


Desigr

Best Match with OMRON Products

NS Series is the most suitable HMI for the system that comprises OMRON components. The advantage is the "compatibility (reducing programming and screen data creation work)" which will reduce the amount of designing work.





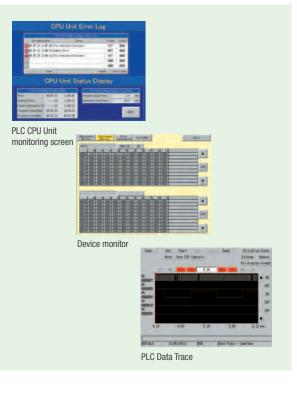






Temperature Controllers

PLC

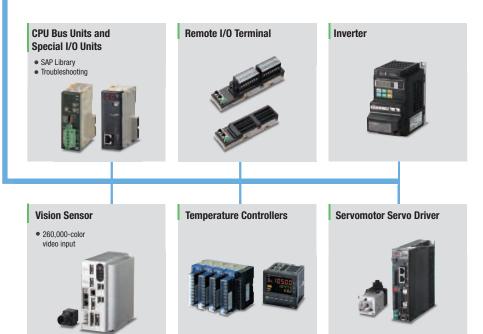

Smart Active Parts (SAP Library)

Dramatically reduces the effort required to create ladder programming and screens.

More than 3,000 Library parts (Smart Active Parts) are available, which can directly access OMRON PLCs and components. The objects can just be pasted from the Smart Active Parts (SAP Library) Library to the screen; it is completely unnecessary to create screens and ladder programming.

SAP Library, Temperature Controller Parts CX-Designer Screen Design Software





Support tool objects can be incorporated to check for errors and make settings, even without a computer.

Plenty of support tool objects (the Tool Function SAP Library) are available, which can be easily incorporate support tool functions in the NS-series PT. Just paste the support tool objects in the screen to check for errors and make settings, even without a computer.



CPU Bus Unit and Special I/O Unit Troubleshooting Can Be Also Performed with the SAP Library.

A Troubleshooter SAP Library is available to troubleshoot each Unit in the PLC. When an error occurs in a Unit, the Troubleshooter SAP Library provides an easy-to-understand explanation of the cause of the error as well as the countermeasures.

Note: The Troubleshooter SAP Library is included as a standard feature for the CX-One and CX-Designer. For details, refer to page 56. Successive development for Ethernet Units and MC Units is planned for the future. The Temperature Controller's setting and monitor screens are completed in no time.



<image><complex-block><complex-block><complex-block><complex-block><complex-block>

Example screens using support tool objects (Tool Function SAP Library)

Troubleshooter SAP for a Position Control Unit



Hand-held PT

NS-Runtime

Startup/Uperation


Maintenance

EtherNet/IP


Support for data structures

This special feature is made possible by combining an OMRON CJ2/NJ/NX PLC with an NS-series PT. The data structures that you define on the Programming Tool can be used on the CX-Designer simply by dragging and dropping them.

Note: When connecting to each controller with EtherNet / IP, check the version of CX-Designer and NS on page 15 "Connectable Devices".

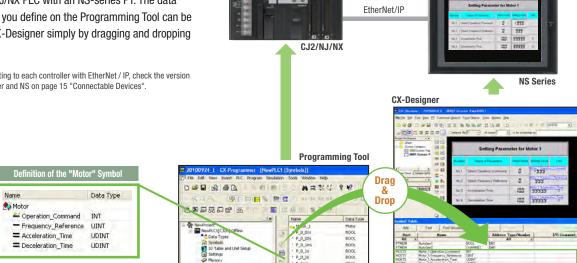


Tag access

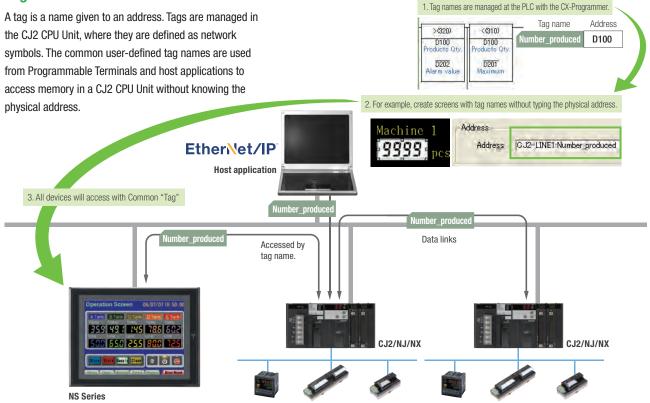

Simultaneous and parallel engineering


STOP

The host applications can be designed using the tag names of the PLC and PT. Parallel development will shorten the design time.

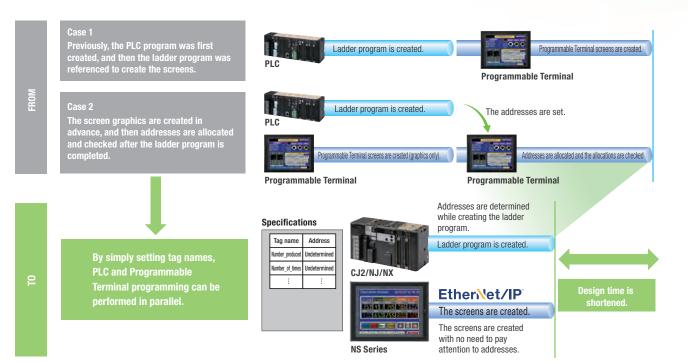

Minimize side effect of address changes

It is possible to access memory with tags, so the PT and host application are not affected even if the address of data in the PLC is changed.

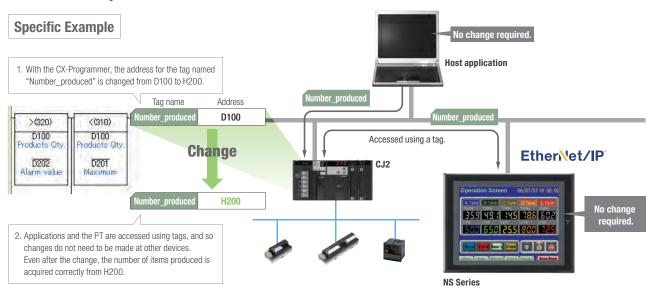

Design

System Configuration | Ordering Information


Specifications

Direct Connection to Temperature Controllers

Connect OMRON Temperature Controllers directly to the NS-series PT.

OMRON Temperature Controllers can be connected directly to the NS-series PT's RS-232C port. Data does not pass through the PLC, so ladder programming is not required. Also, there are plenty of objects in the SAP Library for Temperature Controllers, and Temperature Controller screens can be created easily just by pasting objects from the SAP Library to the screens.

Note: An RS-422A Serial Adapter is needed to connect directly to a Temperature Controller. Refer to page 53 for a list of the Temperature Controllers that can be connected. A Conversion Unit is not required to connect to the RS-422A/485 serial interface of the NS15.

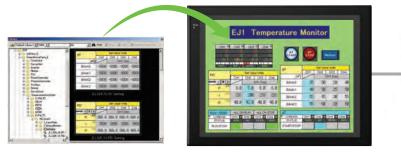

CJ1W-CIF11 RS-422A Serial Adapter





OMRON Temperature





Face Plate Auto-Builder for NS

NS Series

Screens for Loop Controllers can be easily and automatically created.


Significantly reduces the effort required to combine a Loop Controller with an NS-series PT.

Easy automatic generation of faceplates, such as faceplates for PV monitoring and SV setting, as well as tuning screens, such as screens to set and autotune PID constants.

A total of 17 function blocks are supported, with eleven function blocks, such as Ratio Setting and Motor Manipulators newly supported (version 3 of higher).

Comments are automatically entered for automatically assigned unit and scale settings when a project is generated (version 3 and higher).

SYSMAC CS/CJ-series Loop Controller

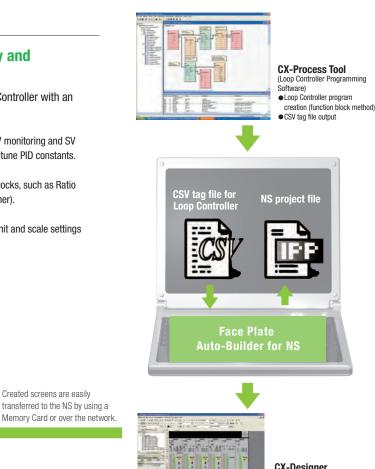

CX-Designer (NS screen creation software) Editing created data Creation of other required screens

Note: Refer to the PLC-based Process Control Catalog (Cat. No. P051) and the Loop-control CPU Unit Catalog (Cat. No. R128) for details on Loop Controllers.

Created screens are easily

Multi-language Support

Support 42 languages and switch the language of the labels among up to 16 languages.

Unicode is supported and 42 Asian and European languages can be combined in screens. Also, it is possible to switch between up to 16 labels using the label switching function, so it is possible to support up to 16 languages in a single screen just by specifying the language to be displayed in each label.

Multi-language CSV data

| Name of Concernments | | | |
|--------------------------|----------------------|-------------------------------------------|----------------------------|
| UTTRA CA Van hard Parent | fame data tender man | | |
| 0 | | 2 4 11 11 m 4 m + 0 | |
| | | | |
| And | 1 2 2 4 8 8 B B B | N . 10 B B _ + B - | 1 · · · |
| All | | | |
| 0 | 16 | | |
| D Betting Screen | 0.2.84 | 실망 환번 | Electriking Des Sofernes |
| Maritoring Maker | 室町御役立 | 모니티 걸렸 | Diservisionung Des Wartsat |
| E TARGET | Date (II | 410 | 2001 |
| ALARM MAN | 御林上団像 | 문로 상관적 | WARNER OF MANDER MA |
| E ALARM NEN | 聖祖下印信 | 信息 的复数 | WARRANG MENUTE |
| 5 OPERATION QUANTITY | 10.00 壁 建二酸 | 正物切装装 | TATITANUO BIIINTAT |
| E MANUAL OPERATION | 中部線印刷量 | 해수실 고객생 | HAVDBET RIED |
| COPERATION MAX | 接起數量預度上單值 | 法劳动利益机 分野市 | BET FRED MAXDAUM |
| W. OPERATION MIN | 编织数量探索下即度 | <u>고</u> 약 약 방 및 또 위 한 같 | INCT FRIDE MENANUM |
| B Pulse | 推冲 | 14 A | D-gade |
| 0 Pulse | 新序 | 4A | Depute |
| PLAN | 11/中 | 響会 | Singada |
| 2 Pulse | 新冲 | 第 合 | Provin |
| 5 Pulle | 8.0 | 著台 | Draw III |
| # Pulse | 80.9 | 「 単 ム ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ ・ | linguite. |
| S RUNUSTOP | 开始/律 | 唐代/亚州 | DURCHLAUF WWW.SOHLAG |
| 6 JALITO/MANUAL | 四38.《半册 | 府長式寺長 | ALITOMATISCHI // MANUELL |
| T INITIALIZE | 使な数値の期に | 体研究条件数 | INTIALIZIEREN |

The labels' text attributes can also be reflected when importing

When screen data is imported, text attributes can be applied to the specified labels and attributes such as the font and text color can be reflected to other languages labels.

Impor


NS Series

STOP



Multi-language conversion has become much easier.


The screen data in the source language is exported to a CSV file and sent to a translation agency by e-mail for translation. Later, the translated CSV file is just imported to easily provide multi-language support.

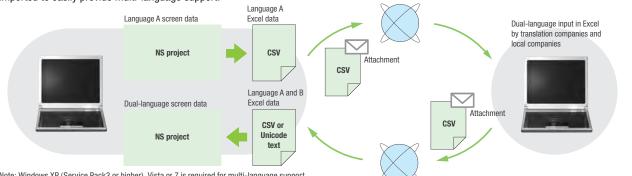

Note: Windows XP (Service Pack3 or higher), Vista or 7 is required for multi-language support.

Multi-language System Messages. **Eight Languages Supported as Standard Feature**

The system program of NS-series PTs supports Chinese and European languages. All eight languages are a standard feature, including Chinese (traditional and simplified), Spanish, Italian, German, and French, in addition to the previous Japanese and English. Along with maintenance menus, messages for communications errors, communications settings, and screen transfers can be displayed in any of eight languages. Maintenance can be performed in the desired language. The language can be easily set using the NS-series PT or screen data.

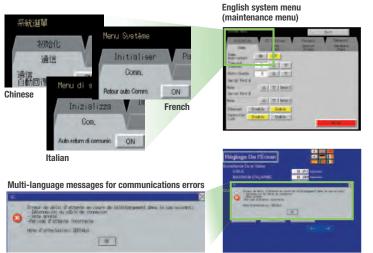

Startup/Uperation

Maintenance

NS-Runtime

Hand-held P1

Features

Network

Multifunction Objects


Execute up to 32 functions with one Multifunction Object Multifunction Objects support Write Bit, Write Word, object control, and etc

Multifunction Objects combine the functions of multiple objects into one object. Multiple functions can be executed by pressing one button without using troublesome macros. Setup is easy. For example, a setting can be made on-screen using the Support Software to turn ON a bit to start a machine, set a value, and then change the screen.


Easy On-screen Setup with Support Software!




Multifunction execution with one object

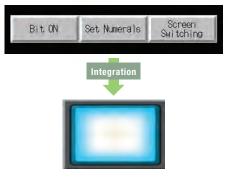


Execute multiple functions with one button.

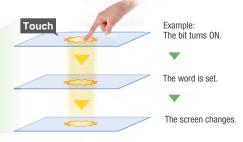

ON!

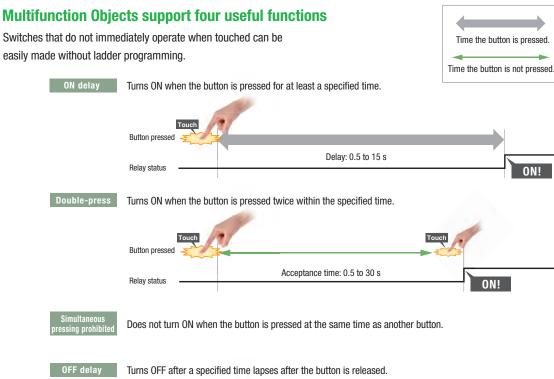




Plentiful Graphing Functions

Data Log Graph (Trend Graph)

Up to 128 data can be collected in the cycle of 500ms. Logging data is stored as a CSV file in the Memory Card inserted in the NS-series PT.

Logging data is stored as a CSV file in the Memory Card mounted in the NS-series PT. The data stored in the Memory Card can be read or deleted from the screen.

A log can be saved automatically, without any programming, just by selecting the Save the data periodically Option in the Data Log Setting Window.

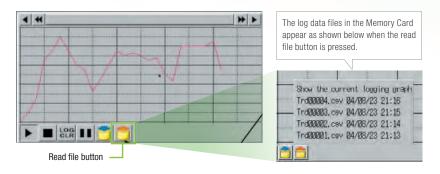

Suffixes are automatically added to file names set in the CX-Designer.



Logging data for each day (43,200 points) is saved in the Memory Card in CSV format. L0G001.CSV 04/06/04 10:00 L0G002.CSV 04/06/05 10:00 L0G003.CSV 04/06/06 10:00 L0G004.CSV 04/06/07 10:00 L0G005.CSV 04/06/08 10:00 L0G006.CSV 04/06/09 10:00

It is possible to make a one-week log by automatically saving the data seven times.


Line Graph Function

The data logged by the PLC can be displayed in overlapping graphs, so a device's operation can be compared for evaluation and analysis. In addition, up to 1,000 words of consecutive data can be displayed as a line graph, data can be displayed together, and any region can be magnified.

(1) Graphs can be superimposed.

| | Data Trace | MEMU |
|--------------------|-------------------------------|------------|
| Luad Data Start | Change points 1000 500 100 | |
| 550 | | No. |
| and and a second | | uno finnom |
| | | |
| 1 | | **** |
| 0 | ~ | |


(2) The display can be magnified.

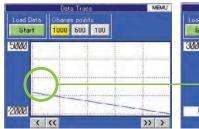



Continuous Line Function

Any position from the host (PLC) can be plotted as a graph. A graph can be plotted in any position by specifying the X and Y coordinates of the vertices. Also, the graph can be moved on the screen by specifying the movements from the PLC.

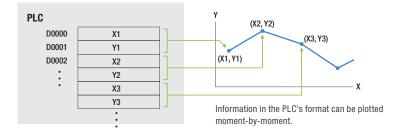

Specifications

799 481 145 188

Screen Data Security Functions

Protect important screen data with a password.

If password protection is set in the data transfer security settings when the screen data is designed, a password must be entered to download or upload the screen data, so important screen data can be protected.



If a password has been set, the password is required to transfer screen data (download or upload) with the Memory Card.

Security password



A password between 4 and 64 characters long can be set. The download/upload will start if the user inputs the password that was set when the screen was designed. (Password input will be disabled if the wrong password is input 3 times in a row.)





Device Data Transfer

Easy Data Exchange between the PLC and Components

For example, temperature controller alarm values can be transferred to the DM Area of the PLC's CPU Unit. No communications programming or macros are required.

Multi-vendor Support

Devices from multiple vendors are supported. Data can be easily exchanged with PLCs from other companies and Modbus devices.

Easy Settings

To make the settings, simply specify the device and addresses of the transfer source and transfer destination in the CX-Designer. Settings can be made using the same procedure as for setting the addresses for normal components.


Easier Operation when Combining SAP Library Objects

SAP data can also be exchanged. SAP data can be exchanged by checking the address of the SAP data in the dialog box of the SAP object pasted in the CX-Designer and specifying that address as the transfer source address.


Note 1: EtherNet/IP tags are not supported.

Note 2: CX-Designer version 3.1 or higher is required. NS system version 8.2 or higher is required.


Multi-vendor Support



company

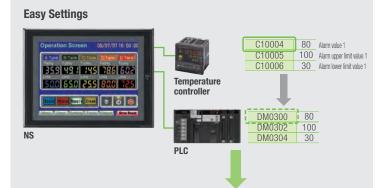

CX-Designer Select Device Data Transfer Setting from the PT Menu.



NS Screen Templates

The CX-Designer of version 3.5 or higher provides the palette to display objects and templates. Refer to the next page for details of the palette.

Even Simpler


STOP

Templates can be read into the screen by just dragging and dropping thumbnails displayed on the palette.

The template consisting of multiple screens allows multiple screens to be read by dragging and dropping it once.

The Address Setting Dialog Box that is displayed to read templates is useful for changing addresses all at once.

Easy Reading from Palette

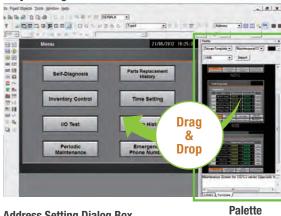

Address Setting Dialog Box


POP (default)

.

Even More Beautiful

The refined templates enable you to use the NS Series with the screens that have a sense of unity in design.

Three different types of templates besides default screens are provided. The design can be changed easily with "Theme Name" that is displayed when dragging and dropping.

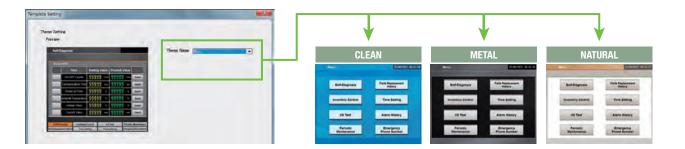

"Cool" Objects

Backgrounds, buttons, labels, message boxes, and other objects are also provided for various themes. 99999 99995 99999 99999 99999 99999 \$9999 \$9999 55555 55555 99999 99999 99999 99999 99999 99999



Design

21

CX-Designer, Screen Design Software

User-friendly Screen Creation

Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it. Quickly create the required screen by dragging and dropping objects. OMRON' s unified development environment lets you drastically reduce the work required to create screens.

Note: The same type of Project Workspace and Output Window as in the CX-Programmer are provided for the user interface.

All addresses and comments can be managed using a single Symbol Table.

Shows a list of addresses, names, and comments used in project screen data. Addresses, names, and I/O comments for the CX-Programmer can also be imported.



• Reusing screens from other projects is easy with


· Settings for alarms, data logs, communications, and other functions can be easily accessed.

the CX-Designer.

Improved Icons and Help

Objects and templates can be selected easily from the palette.

Easy-to-use, well-designed, and super-beautiful objects and templates can be read into the screen by dragging and dropping. Templates can be chosen from four different designs.

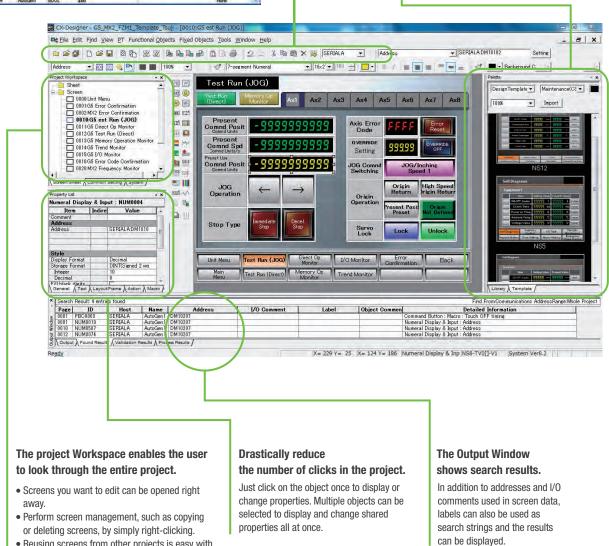


22

Palette

Switches, lamps, and templates are registered in the palette. Just drag and drop them on the new or existing screen to add.

Note. CX-Designer version 3.5 or higher is required.

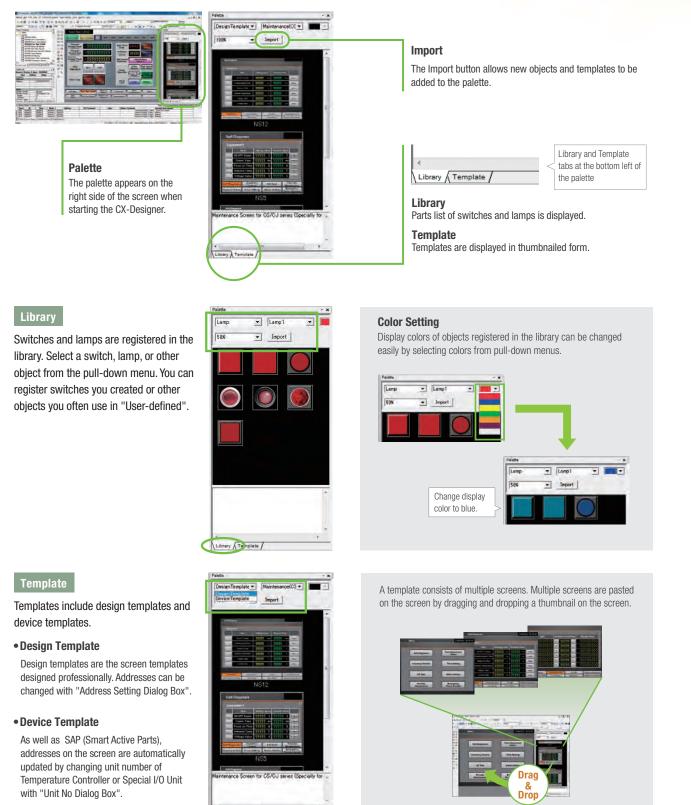

Startup/Operation

Maintenance

NS-Runtime

Hand-held PT

Features


Network


Specifications

System Configuration Ordering Information

Reading Another Project's Screens and Objects

Resources from another project can be easily reused by just selecting the screen or objects that you want to read and dragging and dropping it, so screens can be created intuitively.

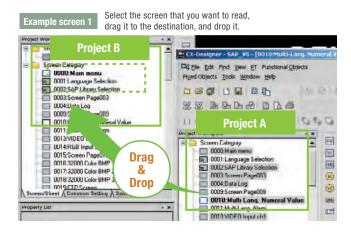

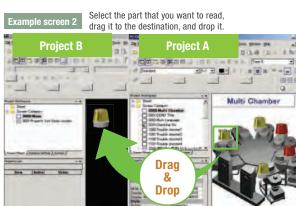


mon (France Results) Valenties Results / Nilson (Test) Laurant/France)

Reading CAD Files

It is possible to import DXF files by dragging and dropping them. The files are read as a diagram, and so less capacity is used than with images. It is also easy to customize the diagram by changing the shape or color.

The screen data and ladder program can be checked simultaneously in the computer.

The CX-Designer and CX-Programmer interconnects the test functions in the computer through the CX-Simulator. The screens and ladder program checks are performed simultaneously, which significantly increases debugging efficiency. The CX-Programmer also has a new button for integrated simulation. And, work efficiency is further improved with the ability to keep required work screens pinned on front and to zoom in or out as desired.

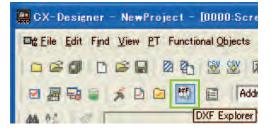

Croce version 2.0 on computer

Startup/Operation

Maintenance

NS-Runtime

Hand-held PT


Features

Network

System Configuration

Ordering Information

Specifications

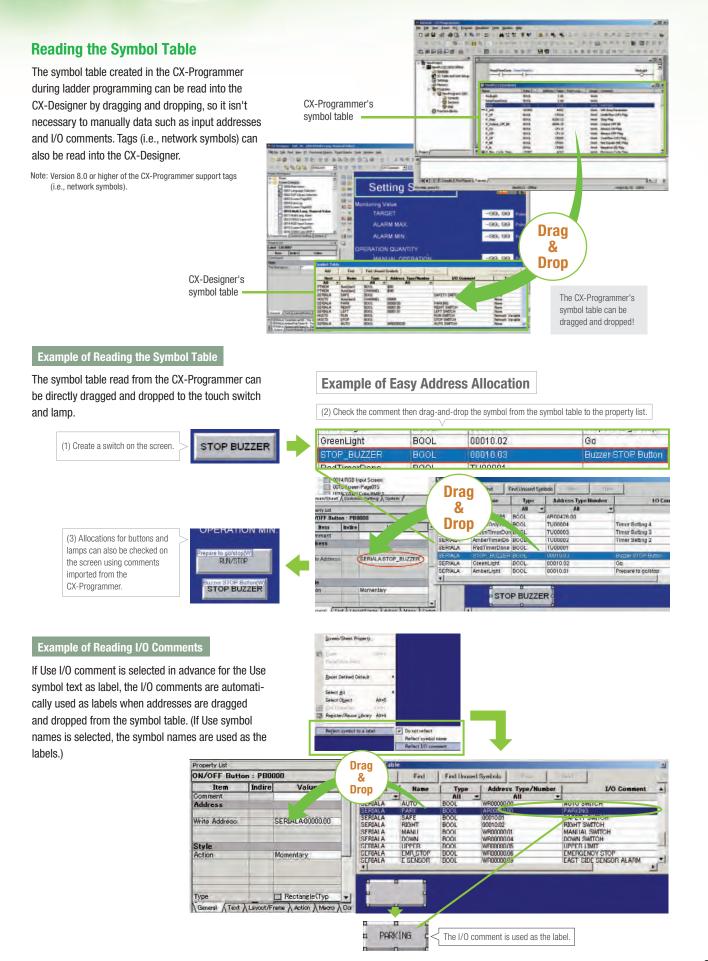

STOP

Startup/Operation 481 45

260,000-color Video Display

Equipment and workpiece movements can also be displayed in beautiful video

NS-CA001 Video Input Unit


Four video inputs or CCD cameras can be connected and up to four images can be displayed simultaneously if the image size is 320x240 pixels. The NS-CA001 cannot be used with the NS5 or the NS15.

NS-CA002 RGB/Video Input Unit

There is an analog RGB input terminal in addition to the two video input terminals. Either of the video signals or the analog RGB signal can be displayed on the NS-series PT. The NS-CA002 cannot be used with the NS5.

Note: Video input cannot be used with the NS15. Only RGB input can be used.

Also Compatible with OMRON Vision Sensors.

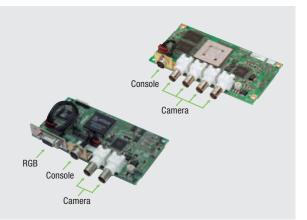



Analog RGB Output

The NS screen is seen by another monitor.

The NS15 screen (XGA) can be displayed on an on-site display that has RGB inputs.

Note: Only NS15



FTP Function

STOP

You can partially replace text and pictures from your computer.

FTP (File Transfer Protocol) has been added! Texts, lists, and recipes can be replaced with the put/get command from your computer! You can even replace BMP files from your computer easily.



Replace he wafer Handle Replace the wafer 200209 txt 200209.txt with gloves the wafer on.

User Security Functions

Operator access rights and the operating format can be set to one of five password levels.

Each operator can be given one of 5 password levels using the User Security (level authentication) function. A password level can be set for each object, so various objects can be made inoperable or hidden based on the operator's access level.



managed in 5 levels. Passwords can be up to 16 Level 3 characters long and the access rights increase as the Level 4 level number increases. Level 5

Operator passwords are

Level 1

Level 2

The operator cannot manipulate objects with a password level (authentication level) higher than the operator's login level.

LED backlight

NS5 color-type models (SQ/TQ models), NS8 models, NS10 models, NS12 models, NS15 models with LED backlight are newly released.*

LED backlight allows backlight brightness adjustment of up to 32 levels. The brightness can be adjusted from the operation screens, and the RUN indicator changes its luminance according to the settings of the backlight brightness; it is favorable for ship and vessel applications.

*LotNo.15Z0 or later of NS5 color-type models, LotNo.28X1 or later of NS8 models, LotNo.11Y1 or later of NS10 models, LotNo.14Z1 or later of NS12 models, LotNo.31114K or later of NS15 models.

Conventional three-level adjustment

OK

| PTM | | (2/8) | - | 11 |
|-------------------|------|-------|----|----|
| タッチスイ | ッチ入力 | | 10 | - |
| ON | OFF | 1 | | |
| ブザー音 | | | | |
| UN | UFF | ERR | ON | |
| バックライ | ト輝度 | | | |
| | 中編度 | 低鋼度 | 0 | |
| Constraint of the | | - | - | _ |
| | | | | |

New 32-level adjustment

| | | (2/8) | |
|-------|------|----------|-----|
| タッチスィ | ッチステ | 首 | |
| リザー音 | UPP | 1 | |
| TN | THE | ERR 0 | |
| バックライ | UPP- | ENK U | a. |
| | | AT AT AL | |
| 心輝度 | 中緯度 | 低輝度 | 記錄階 |

| タッチスイッチ入力音 (N) OFF プザー音 | PT動作 | | (2/8) ← | 終了 |
|-------------------------------|---------------------------|------|---------|----|
| ON OFF ERRION | タッチスイ ON ブサー音 DN | ッチ入力 | 8 | |

Desigr

Specifications


Maintenance

Comparison

The on-site NS screen can be compared with the computer screen.

The comparison function of the CX-Designer enables the following comparison. CX-Designer project \rightleftharpoons Project in the computer CX-Designer project \rightleftharpoons NS project



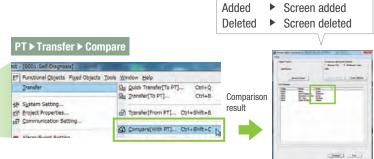

Same

Different

Same in screen

Different in screen

Single Port Multi Access (SPMA)

Note: Communications across network layers can be performed.


Transfer ladder program data to the PLC via the PT. Perform online editing via the PT.


Computer (Serial/USB) → NS-series PT (Ethernet) → PLC (Ethernet or Controller Link) → PLC

Transfer screen data via the PLC.

Computer (Serial) →

PLC (Ethernet or Controller Link) → NS-series PT

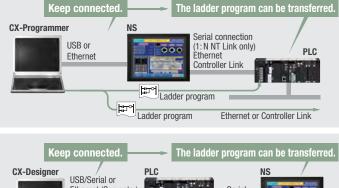



CX-Designer

USB relay cable

(IP65 oil-proof type) (sold separately: NS-USBEXT-1M)

Commercially available USB

cable

NS

Using a USB relay cable greatly improves debugging at equipment startup.

Use a USB relay cable to enable performing maintenance from in front of the control panel.

Easy Automatic Connection

A search is automatically made for the PLCs connected to the PT and the results are displayed using the automatic online connection function in the CX-Programmer. Just select a PLC from the list to connect. This function is also supported for PLCs over network layers.

CX-Programmer



- Note 1: SPMA can be used in CS/CJ-series PLCs with lot number 030201 or later.
- Note 2: SPMA via a PLC is not supported when a CP-series PLC is connected. (SPMA via an NS-series PT is supported with a CP-series PLC.)
- Note 3: CX-Programmer version 8.2 and higher support automatic online connection via the PT. NS system version 8.2 or higher is required.



CX-Programme




PLCs registered to the PT are automatically searched for. Make the connection simply by selecting from the PLC list.

PLC Data Trace

The PLC data trace function can be used without a computer.

The PLC Data Trace function is built into the PT in addition to the Ladder Monitor and Device Monitor. A bit's status and operation can be viewed in a time chart just by setting the desired PLC bit's address in the PT. It is also now possible to display word data, save data in CSV files, and save time chart screens in BMP files.

- Note 1: There are differences between this Data Trace function and the CX-Programmer's Data Trace function. Refer to the NS-series Programmable Terminal Programming Manual (Cat. No. V073) for details.
- Note 2: The PLC data trace function cannot be used with the 5.7-inch model.
- Note 3: The PLC data trace function is not supported for connection with a CP1F/CP2F PLC

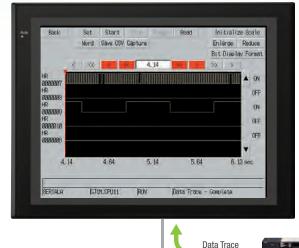

CS/CJ/CP-series PLC

Operating log

What Was Touched When? can be recorded.

Functionality has been improved with the addition of a log to record operators' use of the panels. It is now possible to record and display the time, date, and operation details for buttons (i.e., hardware switches) pressed on the control panel in addition to operations on the touch panel. The operation log can be saved in a CSV file on a Memory Card mounted in the NS-series PT.



Desigr

Specifications

Maintenance

Ladder Monitor

The ladder program can be monitored without a computer.

Ladder programs with I/O comments can be monitored on the PT's screen and the ladder program can also be edited with the Programming Console function.



CS/CJ/CP-series PL

Also meets the requirements of users who need to display devices onsite

Switch Box Function


The operator can check the PLC status by displaying just the I/O comments and status.

Device Monitor Function

Displays the device's contents, allowing settings to be input and checked and making startup operations more efficient.

so no extra work to show I/O comments

Read I/O comments directly from the PLC. I/O comments do not have to be stored in a Memory Card.

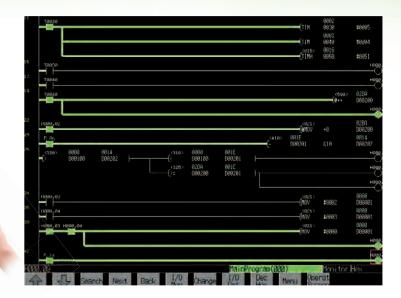


Switch Box Function

Bartow Bartow Bartow Bartow Bartow Bartow 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10


| HISTY | | HNITS | CH | | |
|--------------|------------------|-------------------|-------------------------------------------------|----------------------------------------------------------------------------------------------------------|--|
| | 4 C | 4 . 10 . 1 | 46. 07 | 40 10 | |
| | 2003 0403 52 | ST 1 1983 1 (144) | 1000 0007 | 200 2002 | |
| 200125 2000 | | | 1996 1996 | | |
| 38.2 330 | 200120013 | 255 922 922 | 1306 306 | | |
| 200.22 2000 | 336 336 3 | 20 1920 922 | 1 1000 1 1000 | 3002 300P | |
| | 200100018 | 261.9930 1.993 | | 1002 1002 | |
| ABC 280 | 300 1000 10 | 10 1000 1000 | | 340 340 | |
| 100 C 100 C | 300130013 | 10 100 1000 | 1936 1936 | 200 2000 | |
| 330.01 3302 | 00001000010 | 101 1 2008 1 2008 | 1 0000 1 0000 | | |
| | | | | | |
| ment and | 000 000 0 | | 1 1000 10000 1 10000 10000 | | |
| I sue iscard | | | 100010001 | | |
| anne Jane I | 3000 1 3300 1 3X | and 1 anne 1 anne | ane ane | | |
| | 3000 1 3300 1 3X | and 1 anne 1 anne | | | |
| | | | | | |
| | | and 1 anne 1 anne | | AUE 2000 | |
| | | | | AGE 2000 | |
| | | | | AUE 2000 | |
| | | | | AGE 2000 | |
| | | | 1960 906 1966 1976 1976 1976 1976 1976 1976 197 | AUC AUG C C C AUG AUG AUG AUG AUG AUG AUG AUG AUG AUG AUG AUG AUG AUG AUG AUG | |

Device Monitor Function

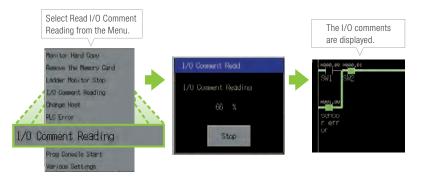


Easy checking the alarm bit and shortens searching time.


When an alarm occurs, touch the message to automatically search for the alarm bit (output bit) for the alarm. This enables you to quickly check the alarm address and investigate why the bit turned ON.

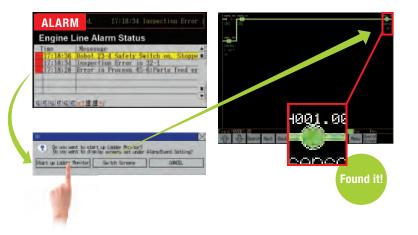

"Find Back", "Find Next", useful Function Supported by the NS-series.

Reduced Time to Investigate Which Output or Input Is Causing the Problem.

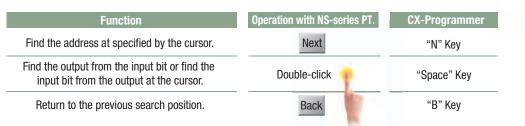

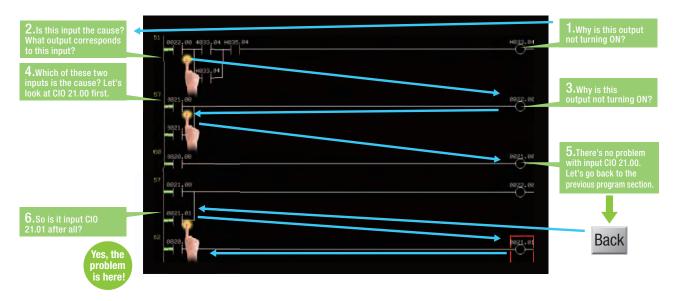

Force-setting and force-resetting are possible

Locations that have been force-set are displayed in pink and can be checked at a 2. Select the address 3. Select the Forced Set Option and glance. 1.Select the input bit for which the output will be forced ON. by touching the panel. then press the Update Button. Change 18 4818,82 start

Minor changes in values of timers or counters can be made without Support Software.

Check and Change I/O While You View the Ladder Diagram on the I/O Monitor

Display and change the present value by specifying the address. It is also possible to force-set/reset bits with the I/O monitor.



4. Forced ON

| Change Value | |
|--------------------|-------------|
| Objet Addr 4810,88 | ForceCancR1 |
| | |
| | |
| | Update |
| | |
| | Cancel |
| | |

Startup/Operation


NS-Runtime

NS-NSRCL (NS-Runtime)

Achieve machine/line monitoring and data logging on your office computer.

Machine Viewer

Machine monitoring in an office environment. There is no need to create complex host applications. Moreover, when an alarm occurs, a PDF file can be displayed as maintenance information. NS Series screens can be reused on the computer, and screens can be also newly created independently of touch panels at the production site.

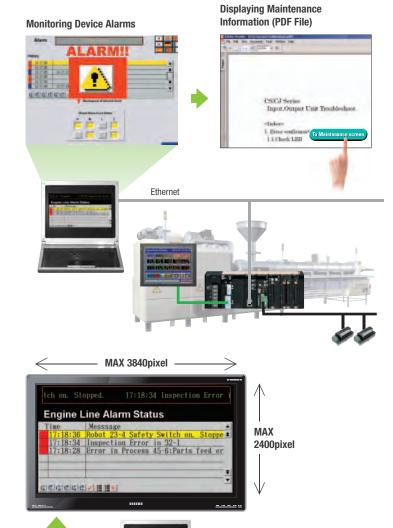


Wide Screen

Computer output can be displayed on another wide-screen monitor. XGA (1,024 x 768 dots) and up to a a maximum screen size of 3,840 x 2,400 is supported. Alarms occurring in devices or the line can be monitored.



Log large amounts of data using a personal computer. Data can be logged through background processing, with up to 160,000 points stored in one file. The logged data is stored in CSV format, and data can be displayed on data log graphs.

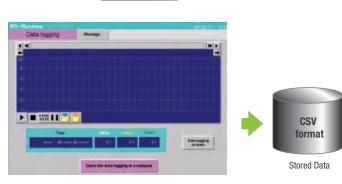

Note: The resolution that can be displayed depends on the computer. An input function for displaying the computer screen is required at

the display monitor

Example: 160,000 Points

Monitor output

Data can be logged for approximately 7.4 days, assuming data is logged every two seconds for 12 hours a day. By using automatic file saving, data logging can be continued even longer than 7.4 days.

Recipe Handling

Checking machine data or switching processes from a host computer is easy. Parameter groups in the PLC can be transferred together to a computer, and the transferred data can be checked and edited in CSV format, e.g., using Excel. The edited data can then be transferred together back to the PLC.

В


CJIG

D4JL

E5CN.

FSSJ



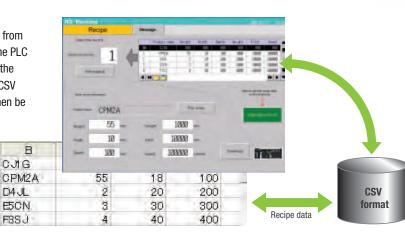


Easy Installation

To get started, just install the NS-Runtime in the computer and place the screen data in the applicable folder. NS/NSJ-series screens and NS-Runtime screens can all be managed using one single tool.

Note: The NS-Runtime will operate in a computer environment even if the CX-Designer installed is not installed. The hardware key (USB dongle) that is supplied with the NS-Runtime is required for operation.




Screen Data

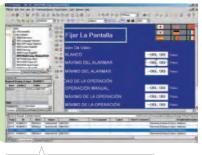

Screen designer: CX-Designer (CX-One)

Application Startup Function

User applications can be started from NS-Runtime. Applications can be started simply by pressing buttons on the screen.

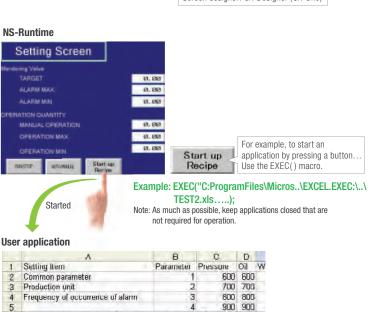

Write to PLC

Print

Note 1: If the screen data is converted for the NS Series, NS-Series PT system versions must be 8.1 or earlier. The screen data of system version 8.2 can not be converted for the NS-Runtime. Note 2: Do not use this product for 24-hour operation in an FA environment. OMRON shall not be responsible if the computer or application does not operate properly due to noise or other causes. OMRON shall not be responsible for any problems that may be caused by any applications other than OMRON products.

Read from PLC


6

Design

Specifications

NSH5 Series

A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's have a complete set of functions that can be used at the production site, such as the SAP Library, multi-language support, and Programming Console functions.

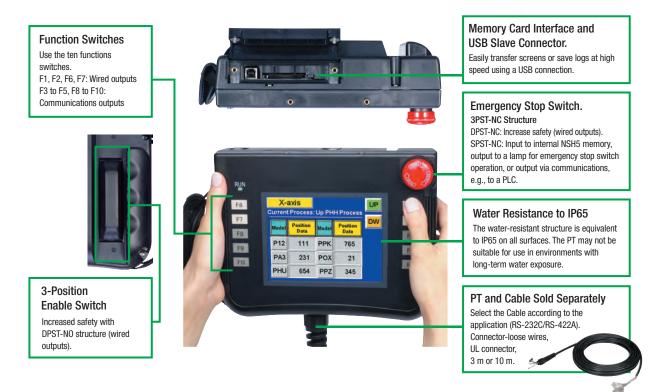

Precautions for Emergency Stop Switches

When using a hand-held NSH5 that will be installed and removed from a control panel or Removable Box, always use the specified Stop Switch (Gray/NSH5-SQG10B-V2) to conform to Safety Standards (EN 60204-1).

Options

Removable Box

A separate external circuit is not required because the Removable Box has been configured so that the emergency stop switch line will not turn OFF (i.e., so that the emergency stop circuit will operate) even when the NSH5 is removed.

Visor

Use when the NSH5 is in direct sunlight.

Mounting Bracket

Use to attach the NSH5 to a control panel.









Programmable Terminals NS Series

Even Simpler Equipment Operation with Outstanding Synergy.



5.7 inches Color TFT STN monochrome

• 5.7 to 12.1 inch sizes are available.

points, and much more.

eight languages.

Corporation.

even without the actual hardware.

transferred from a single port!

• Connectable PLCs and devices appear one after another.

Features

10.4 inches Color TFT

have a complete set of functions that can be used at the production site.

understand explanation of the cause of the error as well as the countermeasures.

15 inches Color TFT

A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's

OMRON provides a development environment that requires with no programming and no screen designing. • When an error occurs in a Unit in the OMRON PLCs, the Troubleshooter SAP Library provides an easy-to-

Ladder Monitor come as a Standard Feature. The ladder program can be monitored onsite without a laptop!
 Ladder monitor lets you monitor PLC program status, search for addresses or instructions, monitor multiple I/O

Provides the FA integrated tool package "CX-One" for a Screen Design Software Integrated Simulation come as a

Standard Feature. The integrated simulation function simulates ladder programs and screen data simultaneously

Screens support 42 languages and the Support Software supports eight. System messages can be displayed in

Single Port Multi Access (SPMA) come as a Standard Feature. The ladder program and screen data can be

Has become connectable with the PLCs of Mitsubishi Electric Corporation and the Inverters of OMRON

The Smart Active Parts(SAP Library) makes it easy to connect to OMRON PLCs and components,

12.1 inches Color TFT

8.4 inches

Design

Startup/Operation

Maintenance

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows is registered trademarks of Microsoft Corporation in the USA and other countries.

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.


OMRON

1

NS Series

Network

Provides serial NT Link communications supporting both 1:1 and 1:N connections. The NT Link has more efficient communications than Host Link and its capabilities are especially apparent in applications with multiple PTs connect to the PLC. The NS-series PTs can also support communications with multiple PLCs and multiple NS-series PTs through Controller Link and Ethernet connections, so the network can be configured freely to match the requirements and scale of the application. In addition, using the NS-Runtime makes it possible to monitor machine status and log data from the host.

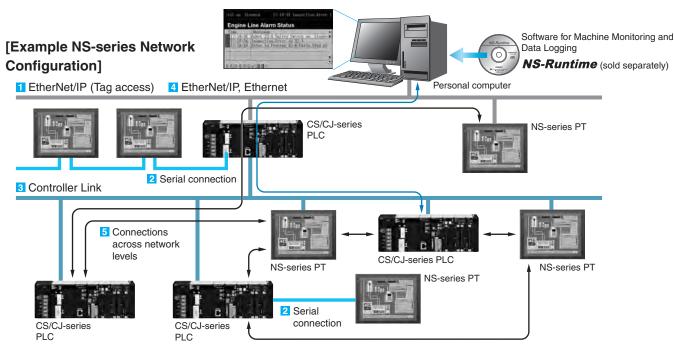


Configuration of CJ2 series, NJ series and NX series

1 EtherNet/IP Connection (Tag accesses)

If an Ethernet-compatible NS-series PT is used, the PT can connect to a Controller with built-in EtherNet/IP and an Option Unit is not needed to connect at the PT.



Design

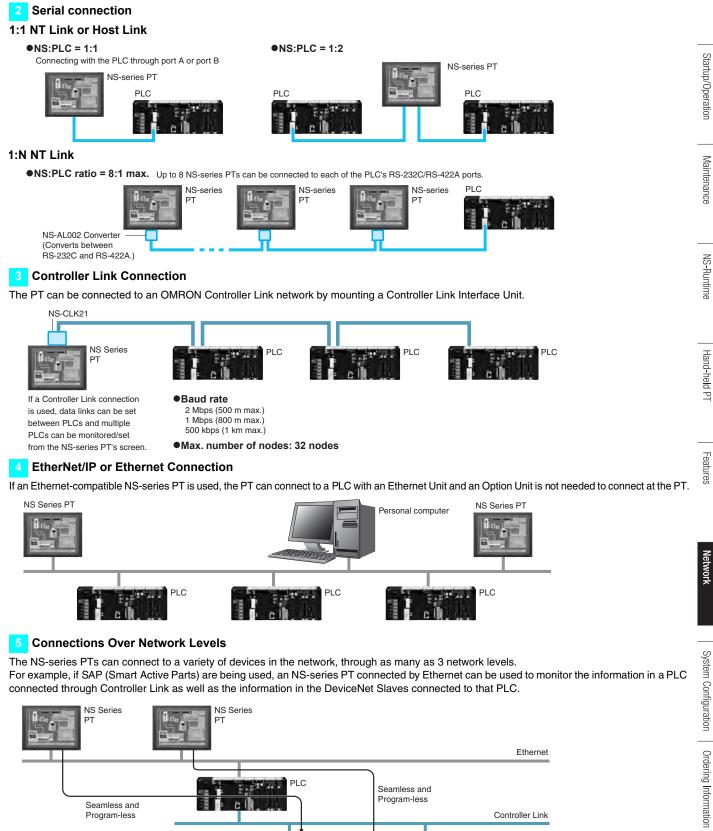

PLC

Configuration of CS series, CJ series and CP series

Program-less

Controller Link

DeviceNet


PLC

3

OMRON

System Configuration

NS5/NS8/NS10/NS12/NS15

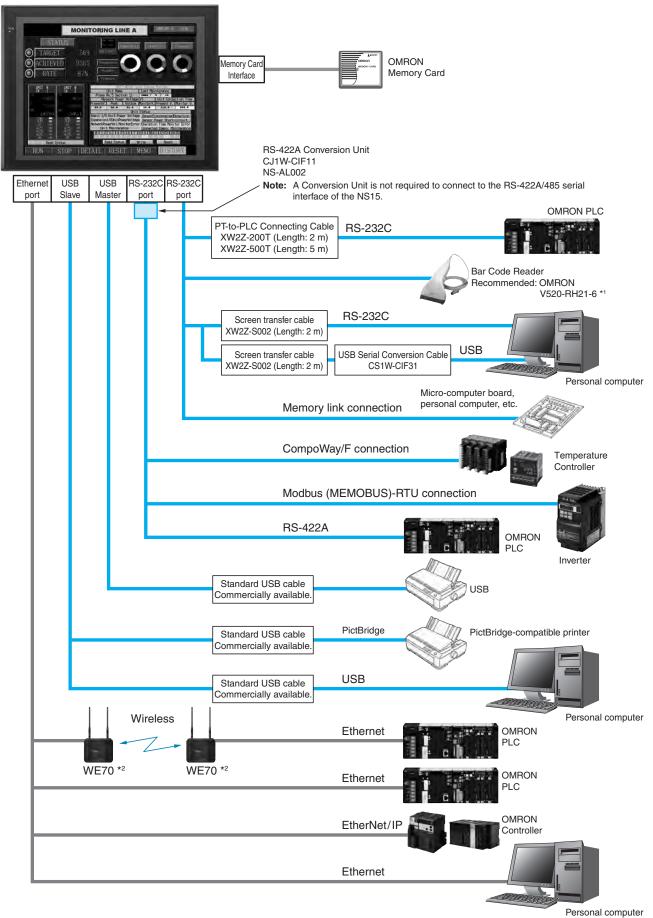

***1.** Bar Code Reader (V520-RH21-6) was discontinued at the end of August 2016. ***2.** Wireless (WE70) is final order entry date at the end of June 2020.

Design

Startup/Operation


Maintenance

NS-Runtime

| | Controller Link Interface Unit | Controller Link | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|-----------------|------------------|
| NAIE 875 | NS-CLK21 | | ≣ ⊢ c III |
| All and a second | Video Input Unit | NTSC/PAL | PI |
| The second secon | NS-CA001 | | Vision |
| TELEVISION DESCRIPTION | RGB/Video Input Unit | NTSC/PAL | Sensor |
| RON STOP DETAIL RESET MEND DUSTORS | NS-CA002 | | |
| Expansion bus | | RGB output | |
| interface | | HOB Output | |

Note: Video Input Units and RGB Video Input Units cannot be used with some models.

Multi-vendor

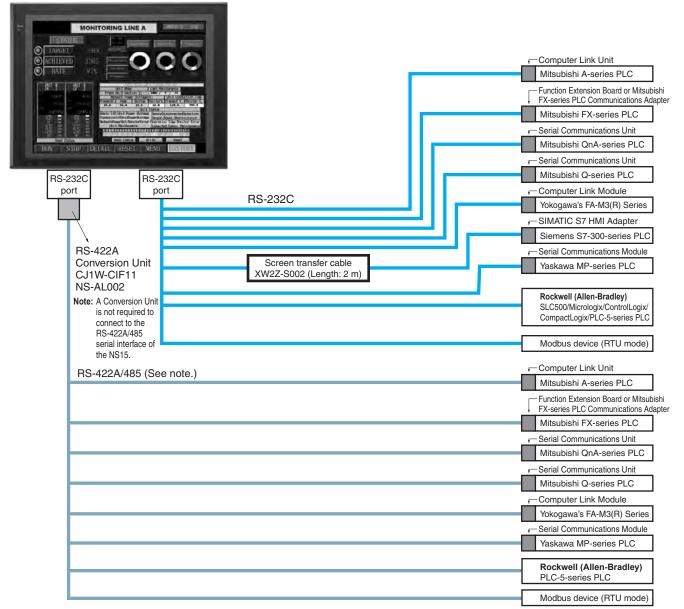

Note: Whether an RS-422A or RS-485 connection is supported depends on the device that you are connecting to. For details, refer to the Connectable Devices page or NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection (Cat.V092). Hand-held PT

NSH5 Hand-held PT USB Commercially available USB cable. Memory USB Slave Card interface OMRON Personal computer **NSH5 PT** Memory Card **RS-232C** PLC cable RS-232C RS-232C Connecting Cable for the NSH5 NSH5-232CW-3M (Length: 3 m) RS-232C Connecting Cable for the NSH5 NSH5-232CW-10M (Length: 10 m) RS-422A PLC cable **RS-422A** RS-422A Connecting Cable for the NSH5 NSH5-422CW-10M (Length: 10 m) RS-232C PLC cable RS-232C RS-232C Connecting Cable for the NSH5 NSH5-232UL-3M (Length: 3 m) RS-232C Connecting Cable for the NSH5 **UL-listed Cables** NSH5-232UL-10M (Length: 10 m) **RS-422A** PLC cable RS-422A RS-422A Connecting Cable for the NSH5 NSH5-422UL-10M (Length: 10 m) USB Commercially available USB cable. Memory USB Slave Card interface OMRON NSH5 PT Personal computer Memory Card Removable Box Connected Removable Box RS-232C n C cable RS-422A RS-232C Connecting Cable for the NSH5 NSH5-232CN-3M (Length: 3 m) RS-232C Connecting Cable for the NSH5 NSH5-232CN-10M (Length: 10 m) System Configuration (Removable Box Connected) Up to eight NSH5s can be connected at a time. NSH5 (See note.) PLC RS-232C connection (Cable length: 3 or 10 m) Removable Box Control panel RS-422A connection (Total cable length: 500 m max.) Up to 15 Removable Boxes can be connected.

Note: Before removing the NSH5 from the Removable Box,

be sure to first turn OFF the power supply key on the Removable Box.

Ordering Information

International Standards

- The standards are availabled as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

Programmable Terminals

| Product name | | Specification | s | | Model | Standards | up/(|
|--------------|--------------------------|---------------------------------|--------------|---------------------------------------|----------------|-------------------|-----------------|
| Product name | Effective display area | Number of dots | Ethernet | Case color | Model | Standards | artup/Operation |
| | | | No | lvory | NS5-SQ10-V2 | | atio |
| | 5.7-inch *2 TFT color | | INO | Black | NS5-SQ10B-V2 | | _ |
| NS5-V2 *1 | LED backlight | | Yes | lvory | NS5-SQ11-V2 | | |
| | | $320 \times 240 \text{ dots}$ | Tes | Black | NS5-SQ11B-V2 | UC1, CE, N, L, | 2 |
| | 5.7-inch *2 | 320 × 240 0015 | No | lvory | NS5-TQ10-V2 | UL Type4 | Maintenance |
| | High-luminance | | INO | Black | NS5-TQ10B-V2 | | enar |
| | TFT color | | N | lvory | NS5-TQ11-V2 | | lce |
| | LED backlight | | Yes | Black | NS5-TQ11B-V2 | | |
| NS8-V2 | | | NI- | lvory | NS8-TV00-V2 | | |
| | 8.4-inch *2 | | No | Black | NS8-TV00B-V2 | UC1, CE, | |
| | TFT LED backlight | $640 \times 480 \text{ dots}$ | Yes | lvory | NS8-TV01-V2 | N, L | -SN |
| | | | | Black | NS8-TV01B-V2 | - | NS-Runtime |
| | | 640 × 480 dots | 480 dots Yes | lvory | NS10-TV00-V2 | | time |
| 1040.1/0 | 10.4-inch *2 | | | Black | NS10-TV00B-V2 | - | |
| NS10-V2 | TFT LED backlight | | | lvory | NS10-TV01-V2 | | |
| | | | | Black | NS10-TV01B-V2 | - | |
| | | | | lvory | NS12-TS00-V2 | UC1, CE, | Hai |
| NS12-V2 | 12.1-inch *2 TFT | 800×600 dots | No | Black | NS12-TS00B-V2 | N, L, UL Type4 | Hand-held PT |
| NS12-V2 | LED backlight | 800×600 dots | Yes | lvory | NS12-TS01-V2 | OL Type4 | leld |
| | | | Yes | Black | NS12-TS01B-V2 | | PT |
| N045 V0 | 15-inch | | N | Silver | NS15-TX01S-V2 | | |
| NS15-V2 | TFT | $1,024 \times 768 \text{ dots}$ | Yes | Black | NS15-TX01B-V2 | | |
| NSH5-V2 *1 | 5.7-inch | $320 \times 240 \text{ dots}$ | No | Black (Emergency stop button: Red) | NSH5-SQR10B-V2 | UC, CE | Features |
| Hand-held | TFT | 520 × 240 001s | NO | Black (Stop button: Gray) | NSH5-SQG10B-V2 | _ 00, 0E | res |

*1. As of July 2008, the image memory has been increased to 60 MB.

*2. Lot No. 15Z0 or later of NS5 color-type models, Lot No. 28X1 or later of NS8 models, Lot No. 11Y1 or later of NS10 models, Lot No. 14Z1 or later of NS12 models, LotNo.31114K or later of NS15 models.

NS-Runtime

| Product name | Specifications | | | Model | Standards |
|--------------|------------------------------------------------------------|-------------|----|------------|-----------|
| | | 1license | | NS-NSRCL1 | |
| NS-Runtime | NS-Runtime Installer, PDF manual, hardware key (See note.) | 3 licenses | CD | NS-NSRCL3 | |
| | | 10 licenses | 1 | NS-NSRCL10 | |

Note: A hardware key (USB dongle) is required for NS-Runtime operation.

System Requirements

| Item | Specifications | | | |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| OS * | Windows 7 (32-bit/64-bit version)/Windows 8 (32-bit/64-bit version)/Windows 10 (32-bit/64-bit version) | | | |
| CPU Celeron, 1.3 GHz or higher (Recommended) | | | | |
| | HDD: 50 MB min., RAM: 512 MB min. (Windows 7: 1 GB min.). 50 MB is required for the Runtime alone. (An additional 280 MB is required if CX-Server is not already installed.) | | | |

* Ver. 1.30 or later of NS Runtime do not support Windows XP (Service Pack 3 or higher) and Windows Vista.

Design

Software

How to Select Required Support Software for Your Controller

The required Support Software depends on the Controller to connect. Please check the following table when purchasing the Support Software.

| Item | Omron PLC System | Omron Machine Automation Controller System | | |
|---------------------------------------------------|-----------------------------------|--------------------------------------------|--|--|
| Controller CS, CJ, CP, and other series NJ-series | | NJ-series and NX-series | | |
| Programmable Terminals | NS-series | NS-series with an Ethernet port | | |
| Software | FA Integrated Tool Package CX-One | Automation Software Sysmac Studio | | |

●FA Integrated Tool Package CX-One

| | | | n | | |
|-------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|-------|----------------|-----------|
| Product name | Specifications | Number of licenses | Media | Model | Standards |
| FA Integrated Tool Package CX-One Ver.4.⊡ | The CX-One is a comprehensive software package that integrates Support Software for OMRON PLCs and components. CX-One runs on the following OS. Windows XP (Service Pack 3 or higher, 32-bit version) / Windows Vista (32-bit/ 64-bit version) / Windows 7 (32-bit/64-bit version) / Windows 8 (32-bit/64-bit version) / Windows 8.1 (32-bit/64-bit version) / Windows 10 (32-bit/64-bit version) CX-One Version 4 includes CX-Designer Ver.3 For details, refer to the CX-One catalog (Cat. No. R134) | 1 license * | DVD | CXONE-AL01D-V4 | - |

* Multi licenses (3, 10, 30, or 50 licenses) and DVD media without licenses are also available for the CX-One.

Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

| | Specifications | | | | |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|-------------------------------------|------------------|-----------|
| Product name | | Number of licenses | Media | Model | Standards |
| | The Sysmac Studio provides an integrated development environment to set up, program, debug, and maintain NJ/NX Series CPU Units, NY-series Industrial PC, Controllers and other Machine Automation Controllers, as | - (Media only) | Sysmac Studio (32-bit) DVD | SYSMAC-SE200D | _ |
| Sysmac Studio Standard Edition Ver.1.□ | well as EtherCAT slaves. Sysmac Studio runs on the following OS. Windows 7 (32-bit/64-bit version) / Windows 8 (32-bit/64-bit version) / - Windows 8.1 (32-bit/64-bit version) / Windows 10 (32-bit/64-bit version) *1 The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer). Refer to your OMRON website for details. | - (Media only) | Sysmac Studio (64-bit) DVD | SYSMAC-SE200D-64 | _ |
| | | 1 license *2 | _ | SYSMAC-SE201L | _ |

Note: To connect the NJ5 Controller, NS system version 8.5 or higher is required. CX-Designer version 3.3 or higher is also required. To connect the NJ1/NJ3 Controller, NS system version 8.61 or higher is required. CX-Designer version 3.4 or higher is also required. To connect the NX7 Controller, NS system version 8.9 or higher is required. CX-Designer version 3.64 or higher is also required. To connect the NX1 controller, NS system version 8.96 or higher is required. CX-Designer version 3.70 or higher is also required. To connect the NX1 controller, NS system version 8.96 or higher is required. CX-Designer version 3.70 or higher is also required. To connect the NX1 controller, NS system version 8.93 or higher is required. CX-Designer version 3.70 or higher is also required.

*1. Model "SYSMAC-SE200D-64" runs on Windows 10 (64 bit).

*2. Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

Cable

| Product name | Specifications | | Model | Standards |
|-------------------------------|--------------------------------------------------------------------|---------------|----------------|-----------|
| able *1 | Screen transfer cable for DOS/V (CX-Designer \leftrightarrow PT) | Length: 2 m | XW2Z-S002 | - |
| ~ | USB-Serial Conversion Cable | Length: 0.5 m | CS1W-CIF31 | Ν |
| | USB relay cable | Length: 1 m | NS-USBEXT-1M | |
| | RS-422A cable (loose wires + D-Sub 9-pin) | Length: 10 m | NSH5-422CW-10M | _ |
| NSH5 Cables | RS-232C cable (loose wires + D-Sub 9-pin) | Length: 3 m | NSH5-232CW-3M | |
| | RS-232C cable (loose wires + D-Sub 9-pin) | Length: 10 m | NSH5-232CW-10M | |
| UL-compliant NSH5 Cable | RS-422A cable (loose wires) | Length: 10 m | NSH5-422UL-10M | |
| | RS-232C cable (loose wires + relay cable) | Length: 3 m | NSH5-232UL-3M | CU |
| | RS-232C cable (loose wires + relay cable) | Length: 10 m | NSH5-232UL-10M | |
| | PT connection: 9 pins | Length: 2 m | XW2Z-200T | |
| T-to-PLC | PLC connection: 9 pins | Length: 5 m | XW2Z-500T | |
| Connecting Cable *2 | PT connection: 9 pins | Length: 2 m | XW2Z-200T-2 | |
| | PLC peripheral port | Length: 5 m | XW2Z-500T-2 | |
| ISH5 Removable Box | RS-232C Cable (connectors) | Length: 3 m | NSH5-232CN-3M | _ |
| Cable | HS-2320 Gable (connectors) | Length: 10 m | NSH5-232CN-10M | |
| ISH5 Removable Box | - | | NSH5-AL001 | |
| NSH5 Wall-mounting Bracket | - | _ | | |
| NSH5 Visor | - | | NSH5-ATT01 | |

Use a standard USB cable to connect the NS series PT to a PictBridge-compatible printer. USB cable type depends on the printer.
 *2. To connect the NS series PT to NJ series Controller, using a commercially available 10/100-BASE-TX twisted-pair cable. For detail, refer to the NS series SETUP MANUAL (Cat. No.V083).

Features

Options

| Pro | duct name | Specifications | | Model | Standard |
|------------------------|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|--------------|----------|
| Video Input Unit | A.S. | Inputs: 4 channels Signal type: NTSC/PAL | | NS-CA001 | |
| | | Input channels: 2 video channels and 1 RGB channel *1 Signal type: NTSC/PAL | | NS-CA002 | UC1, CE |
| Controlle Unit | er Link Interface | For Controller Link Communications | NS-CLK21 | UC1, CE | |
| RS-422A Adapter | | Transmission distance: 500 m total length Note: Use this model when connecting PT models without a V Note: PT models with the V suffix can also be connected. | NS-AL002 | _ | |
| | | CJ1W-CIF11 | UC1, N, L, CE | | |
| | | | NS15 | NS15-KBA04 | |
| | Anti-reflection Sheets | NS12/10 | NS12-KBA04 | | |
| | | (5 surface sheets) | NS8 | NS7-KBA04 | |
| | | | NS5 | NT30-KBA04 | |
| Sheet/Co | over *2 | Protective Covers (5 pack) (anti-reflection coating) | NS12/10 | NS12-KBA05 | |
| | | | NS8 | NS7-KBA05 | |
| | 4 | (and relied of obtaing) | NS5 | NT31C-KBA05 | |
| | | Protective Covers (1 cover included) (Transparent) | NS15 | NS15-KBA05N | |
| | | Protective Covers | NS12/10 | NS12-KBA05N | _ |
| | | (5 covers included) | NS8 | NS7-KBA05N | |
| | | (Transparent) | NS5 | NT31C-KBA05N | |
| | | NT625C/631/631C Series to NS12/10 Series | | NS12-ATT01 | |
| | | NT625C/631/631C Series to NS12/NS10 Series (Black) | | NS12-ATT01B | |
| Attachme | ent | NT610C Series to NS12/10 Series | | NS12-ATT02 | |
| | | NT620S/620C/600S Series to NS8 Series | | NS8-ATT01 | |
| | | NT600M/600G/610G/612G Series to NS8 Series | NS8-ATT02 | | |
| Memory | | 128 MB | | HMC-EF183 | |
| Card | | 256 MB | | HMC-EF283 | |
| | | 512 MB | | HMC-EF583 | |
| Memory | Card Adapter | | | HMC-AP001 | CE |
| Replacen | nent Battery | Battery life: 5 years (at 25°C) | | CJ1W-BAT01 | |
| Bar Code | e Reader *3 | CCD handheld bar code reader (RS-232C interface) | | V520-RH21-6 | |

*1. One screen cannot display two video inputs simultaneously.
*2. A Chemical-resistant Cover (NT30-KBA01) is available only for the NS5.
*3. Bar Code Reader (V520-RH21-6) was discontinued at the end of August 2016.

Design

General Specifications

NS5/NS8/NS10/NS12/NS15

| Series | NS5-V2 | NS8-V2 | NS10-V2 | NS12-V2 | NS15-V2 | | | | | | |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------|-------------|--|--|--|--|--|
| Rated power supply voltage | 24 VDC | | | | | | | | | | |
| Allowable voltage range | 20.4 to 27.6 VDC (24 VDC | ; ±15%) | | | | St | | | | | |
| Power consumption | 15 W max. | max. 25 W max. 45 W max. | | | | | | | | | |
| Ambient operating temperature | Note: The ambient opera the mounting angle Mounting angle of • When no Expansi • When a Video Inp operating tempera | ar. 25 W max. 45 W max. 0°C (See note on the next page.) 90° The ambient operating temperature is subject to the following restrictions according to the mounting angle. 90° Mounting angle. 90° • When no Expansion Units are mounted, the operating temperature range is 0 to 45°C. 90° • When a Video Input Unit or a Controller Link Interface Unit is mounted, the ambient operating temperature is 0 to 35°C. 90° Mounting angle of 30 to 90° to the horizontal: Operating temperature range of 0 to 50°C > | | | | | | | | | |
| Storage temperature | –20 to 60 °C *1 | | | | | Maintenance | | | | | |
| Ambient operating humidity | Humidity 20 to 90%RH (0 20 to 60%RH (40 to 50 °C | 0 to 90%RH (0 to 40 °C) No condensation Humidity 20 to 90%RH (0 to 50 °C) No condensation Humidity 20 to 90%RH (0 to 50 °C) No condensation Humidity 20 to 90%R (0 to 40 °C) RH (40 to 50 °C) No condensation However, in an environment exceeding 40 °C/85%RH, continuous operation 240 h No condensation 20 to 60%RH (40 to 50 °C) 20 to 60%RH (40 to 50 °C) 20 to 60%RH (40 to 50 °C) | | | | | | | | | |
| Operating environment | No corrosive gases. | | | | | | | | | | |
| Noise immunity | Conforms to IEC61000-4-4 | 4, 2 kV (power lines). | | | | | | | | | |
| Vibration resistance (during operation) | 10 to 57 Hz, 0.075 mm an | plitude, 57 to 150 Hz, 9.8 r | n/s² 30 min each in X, Y, . | and Z directions | 5 to 8.4 Hz, 3.5 mm single amplitude, 8.4 to 150 Hz, 9.8 m/s ² 10 min times each in X, Y, and Z directions | NS-Runtime | | | | | |
| Shock resistance (during operation) | 147 m/s ² 3 times each in c | lirection of X, Y, and Z | | | | | | | | | |
| Weight | 1.0 kg max. | 2.0 kg max. | 2.3 kg max. | 2.5 kg max. | 4.2 kg max. | Ξ | | | | | |
| Degree of protection | | 5 oil-proof type and NEMA4 ble in locations with long-te | | | | Hand-held | | | | | |
| Ground | Ground to 100 Ω or less. | | | | | Ple | | | | | |
| Battery life | 5 years (at 25 °C): Replac | e battery within 5 days after | the battery runs low (ind | licator lights orange). | | - | | | | | |
| Applicable standards | Certified for conformance | to UL 508, UL 1604, EMC [| Directive, NK, and LR Sta | ndards. | | | | | | | |

***1.** Operate the PT within the temperature and humidity ranges shown in the right diagram. ***2.** Support for NS5, NS10, NS12 and NS15.

NSH5 Hand-held PT

| Series | NSI | 15-V2 | etwork |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|----------------------|
| Туре | 5.7-inch Color TFT | (Hand-held Version) | |
| Case color | Black | | |
| Built-in Ethernet port | No | | |
| Model | NSH5-SQR10B-V2 (Emergency stop button: Red) | NSH5-SQG10B-V2 (Stop button: Gray) | |
| Rated power supply voltage | 24 VDC | | Sys |
| Allowable voltage range | 20.4 to 27.6 VDC (24 VDC ±15%) | | tem |
| Power consumption | 10 W max. | | Cor |
| Ambient operating temperature | 0 to 40°C | | System Configuration |
| Storage temperature | -20 to 60°C | | lion |
| Ambient operating humidity | 35% to 85% (0 to 40°C) with no condensation | | 0r |
| Operating environment | No corrosive gases. | | deri |
| Noise immunity | Common mode: 1,000 Vp-p (between power supply terminals and Normal mode: 300 Vp-p Pulse width: 100 ns to 1 μ s, Rise time: 1-ns pulse | panel) | Ordering Information |
| Vibration resistance (during operation) | 10 to 57 Hz, 0.075 mm amplitude, 57 to 150 Hz, 9.8 m/s ² 30 min ea | ach in X, Y, and Z directions | ation |
| Shock resistance (during operation) | 147 m/s 2 3 times each in direction of X, Y, and Z | | Sp |
| Weight | 1 kg max. | | ecif |
| Degree of protection | Equivalent to IP65. | | icat |
| Ground | Ground to 100 Ω or less. | | Specifications |
| Battery life | 5 years (at 25°C): Replace battery within 5 days after the battery ru | ns low (indicator lights orange). | |
| Applicable standards | Certified for conformance to UL 508, EMC Directive, and EN 60204 | -1. | |

Humidity (%RH) 95% 80%

60%

40%

35% 20% 10%

80

60

Features

Ne

Operation

Temperature (°C)

Storage

30 40 50

Temperature (°C)

NS Series

Performance/Specifications

NS5

| Series | | | | | NS | 5-V2 | | | 1 | |
|----------------------------------|----------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|--------------------|---------------------|------------------|------------------|--------------|--|
| Model | | NS5-SQ10-V2 | NS5-SQ11-V2 | NS5-SQ10B-V2 | NS5-SQ11B-V2 | NS5-TQ10-V2 | NS5-TQ11-V2 | NS5-TQ10B-V2 | NS5-TQ11B-V2 | |
| Built-in Ether | net port | No | Yes | No | Yes | No | Yes | No | Yes | |
| Case color | | Ivory Black Ivory | | | | | | Black | | |
| Display devic | e | TFT color LCD | | | | Color High-lum | inance TFT *1 | | | |
| Effective disp | olay area | Width 115.2 \times h | eight 86.4 mm (5 | 5.7 inches) | | | | | | |
| Display color | s | 256 colors | | | | | | | | |
| Number of do | ots | 320 dot horizon | tal $	imes$ 240 dot ver | tical | | | | | | |
| View angle | | U | op: 80°, Bottom: | 60° *5 | | | | | | |
| Screen data o | apacity | 60 Mbytes | | | | | | | | |
| Image data (BMP or JPG | • / | 32,768 colors | | | | | | | | |
| Memory Card | | Supported | | | | | | | | |
| Ladder Monit | | Not supported | | | | | | | | |
| Video Input U | | Not supported | | | | | | | | |
| Controller Lir Unit (Wired) s | support | Not supported | | | | | | | | |
| | Service life * 3 | 75,000 hours m | in. | | | | | | | |
| Backlight *2 | Brightness adjustment | Three-level or 3 | 2-level brightnes | s adjustment fro | m the touch pane | el screen. * 4 | | | | |
| - | Backlight error detection *5 | Error is detected | d automatically, a | and the RUN ind | icator flashes gre | een as notification | n. | | | |
| | Method | Matrix resistive | Matrix resistive membrane type | | | | | | | |
| Touch panel (matrix type) | Number of switches/ resolution | 300 (20 horizontal $	imes$ 15 vertical) 16 $	imes$ 16 dots for each switch | | | | | | | | |
| iype) | Input | Pressure-sensitive | | | | | | | | |
| | Service life | 1,000,000 touch | operations. | | | | | | | |
| | Labels | Can be specifie | d in CX-Designe | r. Font, style, an | d size can be spe | ecified. | | | | |
| Display text | Numerals, alarms, and character strings | Scalable Gothic: Magnification: 6 to 255 points Rough: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Standard: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Fine: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Fine: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Call of the state of the stat | | | | | | | | |
| | Supported languages (42 languages) | Japanese, simp Finnish, Norweg Bulgarian, Bela | Scalable Gothic, rough, standard, and fine can be used for 42 languages. Japanese, simplified Chinese, traditional Chinese, Korean, English, French, German, Italian, Portuguese, Spain, Swedish, Dutch, Finnish, Norwegian, Basque, Catalan, Danish, Albanian, Croatian, Czech, Hungarian, Polish, Romanian, Slovak, Slovenian, Bulgarian, Belarusian, Russian, Serbian, Macedonian, Ukrainian, Georgian, Icelandic, Afrikaans, Faroese, Indonesian, Greek, Turkish, Estonian, Latvian, Lithuanian, Thai (supported only with scalable Gothic font) | | | | | | | |
| | Color | 256 colors | | | | | | | | |
| Text | Font style (only when vector font is specified) | Bold or italic | | | | | | | | |
| attributes | Vertical alignment | Top, center, or | pottom | | | | | | | |
| | Horizontal alignment | Left-justified, ce | ntered, or right-ji | ustified | | | | | | |
| Flicker | Objects supporting flicker | Functional objects: | | up to 10 types of three flicker type | | r settings. The fli | cker speed and f | licker range can | be set. | |
| Numeral units settings | s and scale | 1.000 max. | | | | | | | | |
| Alarm/event | settings | 5,000 max. | | | | | | | | |
| Expansion in | terface | For Expansion | nterface Units (E | Beginning with ur | its produced in F | eb. 2018, conne | ctors are not mo | unted) | | |

*1.NS5-TQ series (high luminance TFT) luminance is better than that of NS5-SQ series by about 110 cd/m².

*2. Contact your nearest OMRON representative to replace the backlight.

*3. This is the estimated time before brightness is reduced by half at room temperature and humidity. It is not a guaranteed value. The service life will be dramatically shortened if PT is used at low temperatures. For example, using the PT at temperatures of 0°C will reduce the service life to approximately 10,000 hours (reference value).

*4. Lot No. 15Z0 or later of NS5 models.

*5. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other errors.

Backlight error detection indicates that all backlights (2) are OFF.

12

NS8/NS10/NS12/NS15

| | | | | 3-V2 | | | | 0-V2 | | | | 2-V2 | | _ | 5-V2 |
|------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|---------------------------------------------------------------|------------------------------------------------------|------------------------------------|----------------------------------------------------------------|---------------------------------------|---------------------------------------|-------------------------------------|----------------------------|-----------------------|-----------------------|-------------------------------------------|-----------------------|
| Model | | NS8- TV00- V2 | NS8- TV01- V2 | NS8- TV00B -V2 | NS8- TV01B -V2 | NS10- TV00- V2 | NS10- TV01- V2 | NS10- TV00B -V2 | NS10- TV01B -V2 | NS12- TS00- V2 | NS12- TS01- V2 | NS12- TS00B -V2 | NS12- TS01B -V2 | NS15- TX01S- V2 | NS15- TX01B- V2 |
| Built-in Ether | net port | No | Yes | No | Yes | No | Yes | No | Yes | No | Yes | No | Yes | Yes | Yes |
| ase color | | lvory | | Black | | lvory | | Black | | lvory | | Black | | Silver | Black |
| isplay devic | e | High-de | finition TF | T color L | CD | High-de | efinition TI | FT color L | CD | High-de | finition TI | T color L | CD | High-defin color LCD | |
| ffective disp | olay area | Width 17 (8.4 inch | | ight 128.2 | 2 mm | Width 2 (10.4 in | $211.2 \times he$ | ight 158.4 | 4 mm | Width 2 (12.1 in | | ight 184.5 | 5 mm | Width 304 228.1 mm (15 inche | |
| isplay colors | S | 256 colo | ors | | | | | | | | | | | | • |
| umber of do | ots | | | | ot vertical | | _ | | | vertical | | $1 \times 600 d$ | ot | $1,024 dot \times 768 dot$ | vertical |
| /iew angle | | Left/righ Bottom: | t: 80°, To 60° *3 | p: 80°, | | Left/rigi Bottom | nt: 70°, To : 65° *3 | p: 65°, | | Left/righ Bottom: | nt: 80°, To 80° *3 | p: 80°, | | Left/right: 70°, Botto | |
| Screen data c | capacity | 60 Mbyt | es | | | | | | | 1 | | | | | |
| mage data | imana) | 32,768 0 | colors | | | | | | | | | | | | |
| BMP or JPG Memory Card | | Support | ed | | | | | | | | | | | | |
| adder Monite | | Support | | | | | | | | | | | | | |
| ideo Input U | Jnit support | Support | ed (Image | e displave | ed via vide | eo input | is 260,000 |) colors) | | | | | | (Only RGE | 3 input is |
| Controller Lin | hk Interface | | | . , | | | | , | | | | | | enabled.) | |
| Unit (Wired) s | | Not sup | ported | | | Suppor | ted | | | | | | | | |
| | Service life * 2 | 50,000 ł | nours min | ì. | | | | | | | | | | | |
| | Brightness adjustment | Three-le | evel or 32 | -level brig | htness a | djustmer | nt from the | e touch pa | anel scree | en. * 3 | | | | | |
| Backlight *1 | Backlight | | | | | | | | | | | | | | |
| | error | Error is | detected | automatio | cally, and | the RUN | l indicato | r flashes g | green as i | notificatio | n. | | | | |
| | detection *4 | | | | | | | | | | | | | Analog res | viotivo |
| | Method | Matrix re | esistive m | nembrane | type | | | | | | | | | membrane | |
| Fouch panel | Number of | 768 (32 | horizonta | 1×24 ve | rtical) | 1 200 (| 40 horizor | $tal \times 30$ v | (ertical) | 1 900 (| 0 horizor | ntal $	imes$ 38 v | (ertical) | Resolution | : 1,024 |
| matrix type) | switches/ resolution | | | each swite | | | dots for e | | | | | each swite | | (horizonta (vertical) |) × 1,024 |
| | Input | Pressure-sensitive | | | | | | | | | | | | | |
| - | Service life | | | operation | s. | | | | | | | | | | |
| | Labels | | • | | - | | e, and size | | specified. | | | | | | |
| Display text | Numerals, alarms, and character strings | Rough: Standar Fine: Ma | e Gothic: Magnifica d: Magnif agnificatic ent displa | ation: 1 ication: 1 on: 1 | ×1, 1×2, 2 ×1, 1×2, 2 ×1, 1×2, 2 | 2×1, 2×2, 2×1, 2×2 2×1, 2×2, | 255 points 3×3, 4×4 , 3×3, 4×4 3×3, 4×4 umerals, d | , 8×8 , 8×8 , 8×8 | times | | | | | | |
| Display lext | | - | | - | | | an be use | | | 3. | | | | | |
| | Supported languages (42 languages) | Japanes Finnish, Bulgaria | se, simplif Norwegia In, Belaru | fied Chine an, Basqu sian, Rus | ese, tradit ue, Catala ssian, Ser | ional Ch an, Danis bian, Ma | inese, Ko sh, Albania cedonian | rean, Eng an, Croati , Ukrainia | lish, Fren an, Czecl In, Georgi | ich, Gern h, Hunga ian, Icela | rian, Polis ndic, Afrik | sh, Romai | nian, Slov | ain, Swedis /ak, Sloven donesian, G | an, |
| | Color | | | i, Latvian, | Linuania | an, inai | (supporte | u only wit | III SCAIADI | e Gothic | iont) | | | | |
| Text | Font style (only when vector font is specified) | 256 colors Bold or italic | | | | | | | | | | | | | |
| attributes | Vertical alignment | Top, cer | nter, or bo | ottom | | | | | | | | | | | |
| | Horizontal | Left-justified, centered, or right-justified | | | | | | | | | | | | | |
| | alignment | Functional objects: Select from up to 10 types of registered flicker settings. The flicker speed and flicker range can be set. Fixed objects: Select from three flicker types. | | | | | | | et. | | | | | | |
| Flicker | Objects supporting | | | Select | | | | | | | | | | | |
| Numeral units | Objects supporting flicker | | ojects: | Select | | | | | | | | | | | |
| lumeral units ettings llarm/event s | Objects supporting flicker s and scale settings | Fixed ot 1.000 m 5,000 m | ojects: ax. ax. | | | | | | | | | | | | |
| Flicker Numeral units settings Alarm/event s Expansion int | Objects supporting flicker s and scale settings | Fixed ot 1.000 m 5,000 m | ojects: ax. ax. | Select terface U | | | | | | | | | | | |
| lumeral units ettings Jarm/event s xpansion int 1. Contact y 2. This is the The servic the servic | Objects supporting flicker s and scale settings | Fixed of 1.000 m 5,000 m For Exp MRON re before camatica kimately | ax. ax. ansion In epresent brightn Illy short 10,000 | terface U tative to ess is re ened if F hours (re | nits replace educed b 2T is use eference | by half a d at low value). | at room to v tempera | atures. F | or exam | iple, usii | ng the P | T at temp | perature | s of 0 °C v | |

*4. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other errors. Backlight error detection indicates that all backlights (2) are OFF.

*5. An analog touch panel is used with the NS15. Do not press the touch panel in two or more places simultaneously.

If the touch panel is pressed in two or more places simultaneously, it may activate a switch between the points that are pressed.

Specifications

Communications

NS5/NS8/NS10/NS12/NS15

| | | Interface | One ATA-Compact Flash interface slot | | | | | | |
|--------------------------------------------------|----------|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|--|--|
| Memory Card | | Functions | Used to transfer and store screen data, store logging data, and store history data. (Alarm/Event History, Operation Log, and Error Log generated during Macro execution). | | | | | | |
| | | Connector | Conforms to EIA RS-232C. D-Sub female 9-pin connector 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time. | | | | | | |
| Serial Communications | Port A | Functions | Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs), 1:1 NT Links, or Host Link (connections with C Series or CVM1/CV-series PLCs) Direct access to Temperature Controllers using Smart Active Parts: CompoWay / F and bar code reader connections (Read directly from display.) | | | | | | |
| | | Connector | Conforms to EIA RS-232C. D-Sub female 9-pin connector. 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time. | | | | | | |
| | Port B | Functions | Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs) or 1:1 NT Links (connections with C Series or CVM1/CV-series PLCs) Direct access to Temperature Controllers using Smart Active Parts: CompoWay / F and bar code reader connections (Read directly from display.) | | | | | | |
| | | USB rating | USB1.1 | | | | | | |
| USB | | | TYPE-B (Slave) | | | | | | |
| SLAVE Specifications | | Functions | Connection with the CX-Designer (for screen data transfers) Connecting to a PictBridge-compatible Printer Recommended printers: EPSON: PM-G4500, PX-G5300, PX-5600, EP-901F Canon: PIXUS MX7600, PIXUS iP100, PIXUS iX5000 | | | | | | |
| | | USB rating | USB1.1 | | | | | | |
| USB HOST | | Connector | TYPE-A (Host) | | | | | | |
| Specifications *1 | | Functions | Connection with a printer (for hard copies) Recommended printers: EPSON: PX-G930 | | | | | | |
| Built-in Ethernet Specifications *2 | | Conformance standards | Conforms to IEEE 802.3/Ethernet (10 Base-T/100 Base-TX). | | | | | | |
| Specifications 2 | | Functions | Host (PLC) access and connection with the CX-Designer (for screen data transfers) | | | | | | |
| 0 | | Baud rate | 2 M/1 M/500 K bps | | | | | | |
| Controller Link (W type) Specifications *3 | irea- | Transmission path | Shielded twisted-pair cable (special cable) | | | | | | |
| opcomoutione c | | Functions | Host (PLC) access and data links | | | | | | |
| | | Resolution | NS-CA001: 320×240, 640×480, 800×600 dots NS-CA002: User-defined size | | | | | | |
| Video Input Specif *4 | ications | Input signal | NS-CA001: NTSC composite video or PAL NS-CA002: NTSC composite video or PAL | | | | | | |
| | | Number of video inputs | NS-CA001: Number of cameras: 4 max. NS-CA002: 2 cameras + RGB | | | | | | |

Connectable Devices

Supported OMRON PLCs

| | DLO madal nama | | RS-232C *1 | | Eth | nernet | | |
|------------|-----------------|-------------|-------------|---------------|---------|----------------|--------------------|------------------------|
| PLC series | PLC model name | 1:1 NT Link | 1:N NT Link | Host Link | FINS *2 | EtherNet/IP *3 | Controller Link *4 | |
| | CQM1 | Yes | No | Yes | No | No | No | - |
| | CQM1H | Yes | Yes | Yes | No | No | Yes | 0 |
| | CPM1 | Yes | No | Yes | No | No | No | o manage o por service |
| | CPM1A | Yes | No | No | No | No | No | 0 |
| 0 0 · | CPM2A | Yes | No | Yes | No | No | No | 5 |
| C Series | CPM2C | Yes | No | Yes | No | No | No | |
| | C200HS | Yes | No | Yes | No | No | No | |
| C200H | C200HE (-Z) | Yes | Yes | Yes | No | No | Yes | ÷ |
| | C200HG (Z) | Yes | Yes | Yes Yes No No | Yes | | | |
| | C200HX (-Z) | Yes | Yes | Yes | No | No | Yes | Maintenance |
| CVM1/CV | CV500/1000/2000 | Yes | No | Yes | Yes | No | Yes | nce |
| Series | CVM1 | Yes | No | Yes | Yes | No | Yes | |
| | CS1H | No | Yes | Yes | Yes | Yes | Yes | |
| CS Series | CS1G | No | Yes | Yes | Yes | Yes | Yes | |
| | CS1D | No | Yes | Yes | Yes | Yes | Yes | Ċ |
| | CJ1H | No | Yes | Yes | Yes | Yes | Yes | |
| | CJ1G | No | Yes | Yes | Yes | Yes | Yes | |
| CJ Series | CJ1M | No | Yes | Yes | Yes | Yes | Yes | |
| | CJ2H | No | Yes | Yes | Yes | Yes *5 | Yes | |
| | CJ2M | No | No Yes | Yes | Yes | Yes *5 | Yes | |
| | CP1H | No | Yes | Yes | Yes | Yes | No | Ģ |
| 0 D 0 · | CP1L | No | Yes | Yes | Yes | No | No | ŝ |
| CP Series | CP1E | No | Yes | Yes | No | No | No | |
| | CP2E | No | Yes | Yes | Yes | No | No | - |
| NJ Series | NJ5/NJ3/NJ1 | Yes *6 | Yes *6 | Yes *6 | No | Yes *7 | No | |
| NX Series | NX7/NX1/NX1P | No | No | No | No | Yes *8 | No | |

Note: Including models whose production were discontinued.

*1. To connect a NS with a PLC via a RS-422A connection, OMRON's NS-AL002, or CJ1W-CIF11 RS-232C/RS-422A Converter can be used to convert the RS-232C port on the NS to RS-422A.

*2. A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an Ethernet port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in Ethernet port, or add an Ethernet Unit.

***3.** A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an EtherNet/IP port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in EtherNet/IP port, or add an EtherNet/IP Unit.

*4. Install a Controller Link Interface Unit on the NS. A Controller Link Unit is necessary for the PLC.

*5. For CJ2, CX-Designer version 3.2 or later, and NS system version 8.4 or later are required.

***6.** Mount a Serial Communications Unit on the NJ-series Controller. A NS can access only to the Controller's memory used for CJ-series unit. ***7.** When using a EtherNet/IP Unit to connect the NJ-series Controller, NJ Troubleshooter is not supported.

For NJ5, CX-Designer version 3.3 or later, and NS system version 8.5 or later are required.

For NJ3, CX-Designer version 3.3 or later, and NS system version 8.5 or later are required. For NJ3, CX-Designer version 3.4 or later, and NS system version 8.61 or later are required. Moreover, the multidimensional array is supported in the combination with NJ.

*8. For NX7, CX-Designer version 3.64 or later, and NS system version 8.9 or later are required. For NX1P, CX-Designer version 3.70 or later, and NS system version 8.93 or later are required. For NX1, CX-Designer version 3.70 or later, and NS system version 8.96 or later are required. Moreover, the multidimensional array is supported in the combination with NX. Features

| PLC series | PLC model name | Ladder Monitor | Device Monitor/ Switch Box | PLC Data Trace | SPMA | SAP | EtherNet/IP Tag access (Network symbols) | PLC Troubleshooter | NJ Troubleshooter Integrated NS-series PT simulation *4 |
|-------------------|-----------------|-------------------|-------------------------------|-------------------|--------|--------|---------------------------------------------------|-----------------------|---------------------------------------------------------------------|
| | CQM1 | No | No | No | No | No | No | No | No |
| | CQM1H | No | No | No | No | No | No | No | No |
| | CPM1 | No | No | No | No | No | No | No | No |
| | CPM1A | No | No | No | No | No | No | No | No |
| C series | CPM2A | No | No | No | No | No | No | No | No |
| | CPM2C | No | No | No | No | No | No | No | No |
| | C200HS | No | No | No | No | No | No | No | No |
| | C200HE (-Z) | No | No | No | No | No | No | No | No |
| | C200HG (-Z) | No | No | No | No | No | No | No | No |
| | C200HX (-Z) | No | No | No | No | No | No | No | No |
| CVM1/CV series | CV500/1000/2000 | No | No | No | No | No | No | No | No |
| | CVM1 | No | No | No | No | No | No | No | No |
| | CS1H | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| CS series | CS1G | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CS1D | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CJ1H | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CJ1G | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| CJ series | CJ1M | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CJ2H | Yes | Yes | Yes | Yes | Yes | Yes | Yes | No |
| | CJ2M | Yes | Yes | Yes | Yes | Yes | Yes | Yes | No |
| | CP1H | Yes | Yes | Yes | Yes *1 | Yes | No | No | No |
| | CP1L | Yes | Yes | Yes | Yes *1 | Yes | No | No | No |
| CP series | CP1E | No | No | No | Yes *1 | No | No | No | No |
| | CP2E | No | No | No | Yes *1 | No | No | No | No |
| NJ series | NJ5/NJ3/NJ1 | No | Yes *2 | No | No | Yes *3 | Yes | No | Yes |
| NX Series | NX7/NX1/NX1P | No | No | No | No | No | Yes | No | Yes |

Function Comparison

Note: Including models whose production were discontinued.

*1. The SPMA relaying a PLC is not supported.
*2. Only Device Monitor function is supported. Monitoring function that uses tags (variables) is not supported.
*3. The SAP for CJ-series Special I/O Units and CPU Bus Units that can be used with NJ-series Controller is supported.

***4.** Sysmac Studio version 1.02 or higher (CX-Designer version 3.41 or higher) is required.

Design

Connectable Inverters

| S-485 terminal on the Inverter) S-485 connector on the Inverter) S-485 terminal on the Inverter) | RS-485 (2-wire) | 1:N |
|--------------------------------------------------------------------------------------------------------|---------------------------------------------------|-------------------------------------------------------------|
| 1 | RS-485 (2-wire) | 1:N |
| S-485 terminal on the Inverter) | | |
| | | |
| Controllers | | |
| | eries PT* | |
| | e Controllers be connected directly to an NS-s | e Controllers be connected directly to an NS-series PT*. |

Connectable Temperature Controllers

| Unit name | Series | Model | Remarks | |
|------------------------------------------------|---------------------------------|---------------------------------------------------------------------|-----------------|-------------|
| Modular Temperature Controller | EJ1 | EJ1-EDU End Unit | | · |
| Modular Temperature Controller | E5ZN | E5ZN-SCT24S Terminal Unit | | Ma |
| Digital Controllor | E5AC | E5AC-000SM-000 | | Maintenance |
| Digital Controller | E5EC | E5EC-000SM-000 | | nano |
| | | E5CNT-FLK Multi-input (Thermocouple/Resistance Thermometer) Type | | ce |
| | E5AN/E5EN/E5CN (Basic Model) | E5CN-DDDL-FLK Analog Input Type | | |
| | | E5ENT-FLK Multi-input (Thermocouple/Resistance Thermometer) Type | SAP screens are | NS |
| | | E5EN-DDDL-FLK Analog Input Type | available. | -Rur |
| Temperature Controller (Digital Controller) | | E5ANT-FLK Multi-input (Thermocouple/Resistance Thermometer) Type | | NS-Runtime |
| (g | | E5AN- | | |
| | E5AN-H/E5EN-H/ | E5CN-H | | |
| | E5CN-H | E5EN-H | | |
| | (Advanced Model) | E5AN-H | | fanc |
| | E5GN | E5GN-DDTC-FLK Thermocouple Input Type | | Hand-held |
| | LOGIN | E5GN-DDP-FLK Resistance Thermometer Input Type | | eld PT |

Note: Including models whose production were discontinued.

* The NS-Runtime cannot be connected directly to a Temperature Controller.

Features

Network


| Connecting to | Another | Company's | s PLC |
|---------------|---------|-----------|-------|
|---------------|---------|-----------|-------|

| Manufacturer | Series | CPU | Communication Unit/Adapter/Board | Connection diagram | |
|----------------------|-----------------|--------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|--------------------------------|-----|
| | A Series | A1SHCPU A2USCPU A2USHCPU-S1 | Computer Link Unit A1SJ71UC24-R A1SJ71UC24-PRF | RS-232C, - RS422A/485 *1 | 1:1 |
| | | A2ACPU | Computer Link Unit AJ71UC24 | N34227/403 I | |
| | FX Series | FX0N FX1S FX1N FX1NC FX2N FX3UC FX3G | Communication special adapter FX3U-232-ADP FX2NC-232ADP FX0N-232-ADP Communication expansion board FXD-232-BD | RS-232C, RS422A/485 *1 | 1:1 |
| Mitsubishi Electric | | Q00CPU Q01CPU | RS-232C port on the CPU Module | RS-232C | 1:1 |
| | Q/QnA Series | Q00CPU Q01CPU Q00JCPU Q02CPU Q02HCPU Q06HCPU Q12HCPU Q03UDCPU Q03UDCPU Q06UDHCPU Q13UDHCPU | Serial Communications Module QJ71C24N-R2 QJ71C24N-R4 QJ71C24N | RS-232C, RS-485 (4-wire) *2 | 1:N |
| | | Q2ASCPU Q2ASCPU-S1 Q2ASHCPU Q2ASHCPU-S1 | Serial Communications Module A1SJ71QC24N | | |
| | | F3SC23-1F | CPU built-in RS-232C port | RS-232C | |
| Yokogawa Electric | FA-M3(R) Series | F3SP21-0N F3SP28-3S F3SP58-6S F3SP67-6S | Personal Computer Link Module F3LC11-1F F3LC12-1F F3LC12-2F | RS-232C, RS-422A/485 *1 | 1:1 |
| Siemens | S7-300 Series | CPU313 CPU315-2DP CPU317-2PN/DP | SIMATIC S7 HMI Adapter 6ES7 972-0CA1□-0XA0 | RS-232C | 1:1 |
| | SLC500 | SLC5/03 SLC5/04 SLC5/05 | RS-232C port on the CPU Module | RS-232C | 1:1 |
| Rockwell | MicroLogix | MicroLogix 1500 | RS-232C port on the CPU Module | RS-232C | 1:1 |
| (Allen-Bradley) | ControlLogix | Logix5555 | RS-232C port on the CPU Module | RS-232C | 1:1 |
| | CompactLogix | 1769-L31 | RS-232C port on the CPU Module | RS-232C | 1:1 |
| | PLC-5 | PLC-5/20 | RS-232C port or RS-485 port on the CPU Module | RS-232C/RS-485 (4-wire) | 1:N |

*1. To connect using RS-422A/485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required.
*2. To connect using RS-485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required. Up to 32 sequencers can be connected when using RS-485.

Component Names and Options

NS15

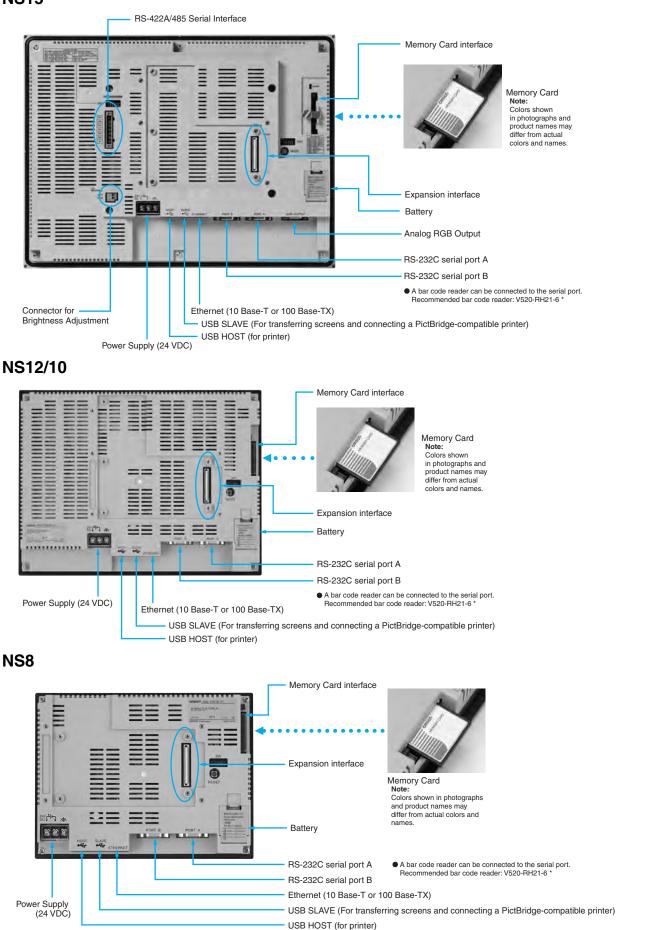

*Bar Code Reader (V520-RH21-6) was discontinued at the end of August 2016.

Startup/Operation

Maintenance

NS-Runtime

Hand-held PT

Features


Network

System Configuration

Ordering Information

Specifications

NS5

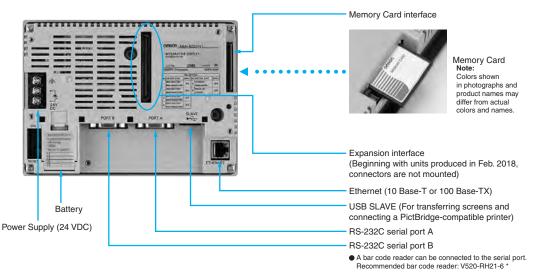

* Bar Code Reader (V520-RH21-6) was discontinued at the end of August 2016.

NSH5



Optional Products



Video Input Unit NS-CA001 (with Cover)



Communications Cable XW2Z-S002



RGB/Video Input Unit NS-CA002 (with Cover)



Protective Cover/Anti-reflection Sheet for NS-series PT NS-KBA0 (N) NT30/NT31C-KBA05 (N)



Controller Link Interface Unit NS-CLK21 (with Cover)



USB Serial Conversion Cable CS1W-CIF31



RS-422A Adapter CJ1W-CIF11



USB relay cable (IP65 oil-proof type) NS-USBEXT-1M




RS-232C/RS-422A Conversion Unit NS-AL002




NS Series

Dimensions



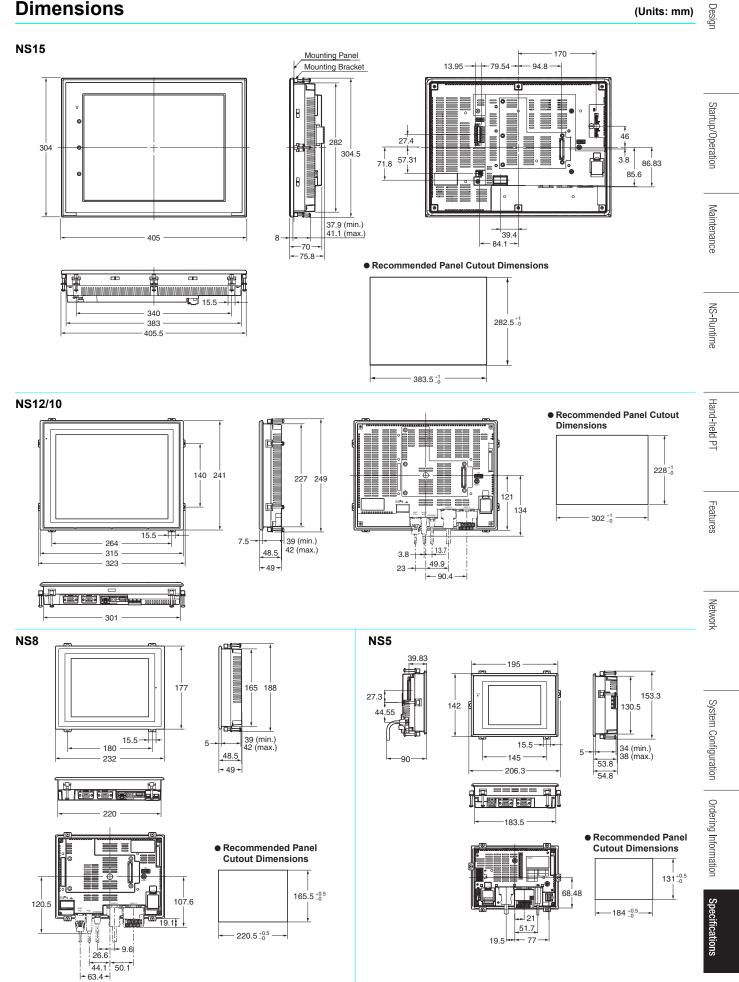

Hand-held NS5

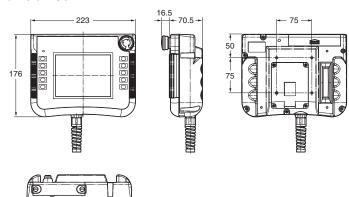

NS-CLK21 NS-CA002 NS-CA001 **Controller Link Interface Unit** Video Input Unit Video Input Unit 81.3 | | (102.7) 81.3 (102.7) **a** 151.5 9.6‡ 21.4 (183) 9.6 যুত্ত 21.4 - 164 · -5 164 -5 (169) (169) 31.5 (1.9) -127.3 (1.9)97 (22.3) -5 164 20.4 120.4 11 • 50.3 + 9.7 - 68.3 --- 86.3 ---(169) 10.6 39.3 (1.9) 10.8 (33.9) - 57.3 -. . - 82.8 --104.3 - 118.3 -95.6

Related Manuals

| Cat. No. | Model | Manual |
|----------|------------------------|----------------------------------------------------------------------------------------|
| V083 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals SETUP MANUAL |
| V073 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals PROGRAMMING MANUAL |
| V099 | NS-CXDC1-V3 | CX-Designer Ver.3. USER'S MANUAL |
| V082 | NS | NS-Series Ladder Monitor OPERATION MANUAL (Ladder Monitor I/O Comment Extracting Tool) |
| V086 | NS-CA002 | NS-Series RGB and Video Input Unit OPERATION MANUAL |
| V090 | NSH5 | NSH5-Series Hand-held Programmable Terminal OPERATION MANUAL |
| V098 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals HOST CONNECTION MANUAL (Host Link) OPERATION MANUAL |
| V085 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals HOST CONNECTION MANUAL |
| V092 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection |
| V075 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals Macro Reference |
| V093 | NS-NSRCL | NS-NSRCL NS-Runtime Software USERS MANUAL |

OMRON

OMRON AUTOMATION AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • automation.omron.com

OMRON CANADA, INC. • HEAD OFFICE Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • automation.omron.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE Ciudad de México • 52.55.5901.4300 • 01.800.386.6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE San Pedro Garza García, N.L. • 81.12.53.7392 • 01.800.386.6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE Eugenio Garza Sada, León, Gto • 01.800.386.6766 • mela@omron.com **OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE** São Paulo, SP, Brasil • 55 11 5171-8920 • automation.omron.com

OMRON ARGENTINA • SALES OFFICE Buenos Aires, Argentina • +54.11.4521.8630 • +54.11.4523.8483 mela@omron.com

OTHER OMRON LATIN AMERICA SALES +54.11.4521.8630 • +54.11.4523.8483 • mela@omron.com

Authorized Distributor:

Controllers & I/O

Machine Automation Controllers (MAC)
 Motion Controllers

Programmable Logic Controllers (PLC)
 Temperature Controllers
 Remote I/O

Robotics

Industrial Robots
 Mobile Robots

Operator Interfaces

Human Machine Interface (HMI)

Motion & Drives

- Machine Automation Controllers (MAC)
 Motion Controllers
 Servo Systems
- Frequency Inverters

Vision, Measurement & Identification

Vision Sensors & Systems
 Measurement Sensors
 Auto Identification Systems

Sensing

- Photoelectric Sensors Fiber-Optic Sensors Proximity Sensors
- Rotary Encoders
 Ultrasonic Sensors

Safety

- Safety Light Curtains
 Safety Laser Scanners
 Programmable Safety Systems
- Safety Mats and Edges
 Safety Door Switches
 Emergency Stop Devices
- Safety Switches & Operator Controls Safety Monitoring/Force-guided Relays

Control Components

- Power Supplies Timers Counters Programmable Relays
- Digital Panel Meters
 Monitoring Products

Switches & Relays

- Limit Switches Pushbutton Switches Electromechanical Relays
- Solid State Relays

Software

Programming & Configuration • Runtime