



Machine Automation Controller NJ-series

EtherNet/IP™ Connection Guide

OMRON Corporation

FZ5-series Vision System

Network
Connection
Guide

About Intellectual Property Rights and Trademarks

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

Windows is a registered trademark of Microsoft Corporation in the USA and other countries.

ODVA and EtherNet/IP[™] are trademarks of ODVA.

EtherCAT_R is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products.

Company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Table of Contents

1. Related Manuals.....	1
2. Terms and Definitions.....	2
3. Precautions.....	3
4. Overview	4
5. Applicable Devices and Device Configuration	5
5.1. Applicable Devices	5
5.2. Device Configuration	6
6. EtherNet/IP Settings.....	8
6.1. EtherNet/IP Communications Parameters	8
6.2. Data Types for Tag Data Links	8
6.3. Allocating the Tag Data Links	9
7. EtherNet/IP Connection Procedure.....	12
7.1. Work Flow.....	13
7.2. Setting Up the FZ5 Sensor Controller	14
7.3. Setting Up the Controller	19
7.4. Setting Up the Network.....	25
7.5. Checking the EtherNet/IP Communications.....	29
8. Initialization Method.....	33
8.1. Initializing the Controller	33
8.2. Initializing the FZ5 Sensor Controller	35
9. Appendix 1 Detailed Settings of the Tag Data Links.....	36
9.1. Global Variable Table.....	36
9.2. Relationship between Destination Device and Global Variables	37
9.3. Associating the Tag Data Links	39
10. Appendix 2 Setting the Tag Data Links Using the Software.....	40
10.1. Overview of Setting Tag Data Links	40
10.2. Work Flow of "Procedure for Setting Parameters from Beginning" ..	41
10.3. Setting Up the Controller Using the Software	43
10.4. Setting Up the Network Using the Software.....	56
11. Revision History.....	66

1. Related Manuals

The table below lists the manuals related to this document.

To ensure system safety, make sure to always read and heed the information provided in all Safety Precautions, Precautions for Safe Use, and Precaution for Correct Use of manuals for each device which is used in the system.

Cat. No.	Model	Manual name
W472	CJ2H-CPU6[]-EIP CJ2H-CPU6[] CJ2M-CPU[] []	CJ-series CJ2 CPU Unit Hardware User's Manual
W473	CJ2H-CPU6[]-EIP CJ2H-CPU6[] CJ2M-CPU[] []	CJ-series CJ2 CPU Unit Software User's Manual
W465	CJ1W-EIP21 CJ2H-CPU6[]-EIP CJ2M-CPU3[]	EtherNet/IP TM Unit Operation Manual
W446	-	CX-Programmer Operation Manual
9524422-4	FZ5-60[]/60[]-10 FZ5-110[]/110[]-10	Image Processing System Instruction Sheet
9910002-2	FZ5-L35[]/L35[]-10	Image Processing System Instruction Sheet
Z340	FZ5-L35[] FZ5-6[] []/11[] []	Vision Sensor FH/FZ5 Series Vision System User's Manual
Z341	FZ5-L35[] FZ5-6[] []/11[] []	Vision Sensor FH/FZ5 Series Vision System Processing Item Function Reference Manual
Z342	FZ5-L35[] FZ5-6[] []/11[] []	Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)

2. Terms and Definitions

Term	Explanation and Definition
Node	<p>Controllers and devices are connected to the EtherNet/IP network via the EtherNet/IP ports. The EtherNet/IP recognizes each EtherNet/IP port connected to the network as one node.</p> <p>When a device with two EtherNet/IP ports is connected to the EtherNet/IP network, the EtherNet/IP recognizes this device as two nodes.</p> <p>The EtherNet/IP achieves the communications between controllers or the communications between controllers and devices by exchanging data between these nodes connected to the network.</p>
Tag	A minimum unit of the data that is exchanged on the EtherNet/IP network is called a tag. The tag is defined as a network variable or as a physical address, and it is allocated to the memory area of each device.
Tag set	In the EtherNet/IP network, a data unit that consists of two or more tags can be exchanged. The data unit consisting of two or more tags for the data exchange is called a tag set. Up to eight tags can be configured per tag set for OMRON controllers.
Tag data link	In the EtherNet/IP, the tag and tag set can be exchanged cyclically between nodes without using the user program. This standard feature on the EtherNet/IP is called a tag data link.
Connection	<p>A connection is used to exchange data as a unit within which data concurrency is maintained. The connection consists of tags or tag sets. Creating the concurrent tag data link between the specified nodes is called a "connection establishment". When the connection is established, the tags or tag sets that configure the connection are exchanged between the specified nodes concurrently.</p>
Originator and Target	<p>To perform tag data links, one node requests the opening of a communications line called a "connection".</p> <p>The node that requests opening the connection is called an "originator", and the node that receives the request is called a "target".</p>
Tag data link parameter	The tag data link parameter is the setting data to perform the tag data link. It includes the data to set tags, tag sets, and connections.
EDS file	A file that describes the number of I/O points for the EtherNet/IP device and the parameters that can be set via EtherNet/IP.

3. Precautions

- (1) Understand the specifications of devices which are used in the system. Allow some margin for ratings and performance. Provide safety measures, such as installing safety circuit in order to ensure safety and minimize risks of abnormal occurrence.
- (2) To ensure system safety, always read and heed the information provided in all Safety Precautions, Precautions for Safe Use, and Precaution for Correct Use of manuals for each device used in the system.
- (3) The user is encouraged to confirm the standards and regulations that the system must conform to.
- (4) It is prohibited to copy, to reproduce, and to distribute a part or the whole of this document without the permission of OMRON Corporation.
- (5) The information contained in this document is current as of December 2013. It is subject to change without notice for improvement.

The following notation is used in this document.



WARNING

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.



Precautions for Correct Use

Precautions on what to do and what not to do to ensure proper operation and performance.



Additional Information

Additional information to read as required.

This information is provided to increase understanding or make operation easier.

Symbol



The filled circle symbol indicates operations that you must do.
The specific operation is shown in the circle and explained in text.
This example shows a general precaution for something that you must do.

4. Overview

This document describes the procedure for connecting the Vision System (FZ5 Sensor Controller + Camera)(FZ5 series) of OMRON Corporation (hereinafter referred to as OMRON) to NJ-series Machine Automation Controller (hereinafter referred to as the Controller) via EtherNet/IP and provides the procedure for checking their connection.

It also contains the procedure for performing EtherNet/IP tag data link using the EtherNet/IP settings of the project file that is prepared beforehand (hereinafter referred to as the "Procedure for Using the Configuration Files").

Section 9 Appendix 1 and *Section 10 Appendix 2* describe the procedures for setting parameters with software without using files (hereinafter referred to as the "Procedure for Setting Parameters from Beginning").

To follow the "Procedure for Using the Configuration Files", obtain the latest "Sysmac Studio project file" and "Network Configurator v3 network configuration file" (they are referred to as "Configuration Files") from OMRON in advance.

Name	File name	Version
Sysmac Studio project file (extension: smc2)	OMRON_FZ5_EIP_EV100.smc2	Ver.1.00
Network Configurator v3 network configuration file (extension: nvf)	OMRON_FZ5_EIP_EV100.nvf	Ver.1.00

5. Applicable Devices and Device Configuration

5.1. Applicable Devices

The applicable devices are as follows:

Manufacturer	Name	Model
OMRON	NJ-series CPU Unit	NJ501-□□□□ NJ301-□□□□
OMRON	FZ5 Sensor Controller	
	LCD-integrated Controller	FZ5-60□/60□-10 FZ5-110□/110□-10
	Box-type Controller	FZ5-L35□/L35□-10
OMRON	0.3 Megapixel Digital Camera	FZ-SC/S
	0.3 Megapixel Small Digital Camera	FZ-SFC/SF
	0.3 Megapixel Small Digital Pen-Shaped Camera	FZ-SPC/SP
	0.3 Megapixel High-Speed Camera	FZ-SHC/SH
	2 Megapixel Digital Camera	FZ-SC2M/S2M
	5 Megapixel Digital Camera	FZ-SC5M2/S5M2
	Intelligent Camera	FZ-SLC100
	Intelligent Compact Camera	FZ-SQ010F/SQ050F FZ-SQ100F/SQ100N



Precautions for Correct Use

As applicable devices above, the devices with the models and versions listed in *Section 5.2* are actually used in this document to describe the procedure for connecting devices and checking the connection.

You cannot use devices with versions lower than the versions listed in *Section 5.2*.

To use the above devices with versions not listed in *Section 5.2* or versions higher than those listed in *Section 5.2*, check the differences in the specifications by referring to the manuals before operating the devices.




Additional Information

This document describes the procedure to establish the network connection. Except for the connection procedure, it does not provide information on operation, installation or wiring method. It also does not describe the functionality or operation of the devices. Refer to the manuals or contact your OMRON representative.

5.2. Device Configuration

The hardware components to reproduce the connection procedure of this document are as follows:

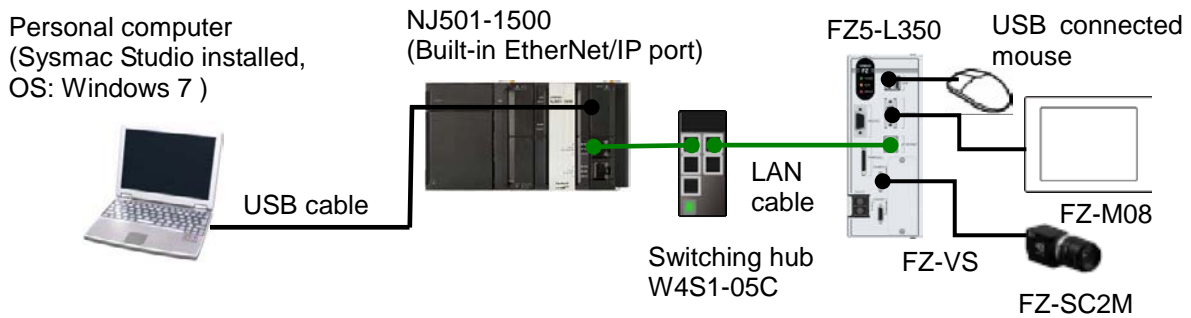

Manufacturer	Name	Model	Version
OMRON	NJ-series CPU Unit (Built-in EtherNet/IP port)	NJ501-1500	Ver.1.07
OMRON	Power Supply Unit	NJ-PA3001	
OMRON	Switching hub	W4S1-05C	Ver.1.00
OMRON	Sysmac Studio	SYSMAC-SE2[] [] [] []	Ver.1.08
OMRON	Network-Configurator	(Included in Sysmac Studio.)	Ver.3.56
OMRON	Sysmac Studio project file	OMRON_FZ5_EIP_EV100.smc2	Ver.1.00
OMRON	Network Configurator v3 network configuration file	OMRON_FZ5_EIP_EV100.nvf	Ver.1.00
-	Personal computer (OS: Windows 7)	-	
-	USB cable (USB 2.0 type B connector)	-	
-	LAN cable (STP (shielded, twisted-pair) cable of Ethernet category 5 or higher)	-	
OMRON	FZ5 Sensor Controller	FZ5-L350	Ver.5.12
OMRON	Camera	FZ-SC2M	
OMRON	Camera cable	FZ-VS	
OMRON	Monitor (analog RGB monitor)	FZ-M08	
-	USB connected mouse	-	



Precautions for Correct Use

Prepare the latest "Sysmac Studio project file" and "Network Configurator v3 network configuration file" from OMRON in advance.

(To obtain the files, contact your OMRON representative.)



Precautions for Correct Use

Update the Sysmac Studio to the version specified in this section or higher version using the auto update function.

If a version not specified in this section is used, the procedures described in *Section 7* and subsequent sections may not be applicable. In that case, use the equivalent procedures described in the *Sysmac Studio Version 1 Operation Manual* (Cat. No. W504) and Network Configurator Online Help.



Additional Information

The system configuration in this document uses USB for the connection to the Controller. For information on how to install a USB driver, refer to *A-1 Driver Installation for Direct USB Cable Connection* of the *Sysmac Studio Version 1 Operation Manual* (Cat. No. W504).

6. EtherNet/IP Settings

This section describes the specifications such as communication parameters and tag data link that are set in this document.

Hereinafter, the FZ5 Sensor Controller is referred to as the "Destination Device" in some descriptions.

6.1. EtherNet/IP Communications Parameters

The communications parameter required connecting the Controller and the Destination Device via EtherNet/IP is given below.

	Controller (node 1)	FZ5 Sensor Controller (node 2)
IP address	192.168.250.1	192.168.250.2
Subnet mask	255.255.255.0	255.255.255.0

6.2. Data Types for Tag Data Links

The following data types are used for the data in the tag data links of the Destination Device. These data types are set in the "Configuration Files".

■ Definition of the data type to access the signals (Union)

These data types are used to access the control signals and status signals.

Data type name	Data type
U_EIPFlag	UNION
F	BOOL[32]
W	DWORD

■ Definition of the data type to access the command area (Structure)

These data types are used to access the command area.

Data type name	Data type	Destination device data
S_EIPOutput	STRUCT	-
ControlFlag	U_EIPFlag	Control signal (32 bits)
CommandCode	DWORD	Command code (CMD-CODE)
CommandParam1	DINT	Command parameter (CMD-PARAM)
CommandParam2	DINT	
CommandParam3	DINT	

■ Definition of the data type to access the response/output areas (Structure)

These data types are used to access the response/output areas.

Data type name	Data type	Destination device data
S_EIPInput	STRUCT	-
StatusFlag	U_EIPFlag	Control output (32 bits)
CommandCodeEcho	DWORD	Command code (CMD-CODE)
ResponseCode	DINT	Response code (RES-CODE)
ResponseData	DINT	Response data (RES-DATA)
OutputData	DINT[8]	Output data 0 to 7 (DATA 0 to 7)

6.3. Allocating the Tag Data Links

The data in the tag data links of the Destination Device is allocated to the global variables of the Controller. The relationship between the destination device data and the global variables is shown below.

The following global variables are set in the "Configuration Files".

■ Output area (from Controller to FZ5 Sensor Controller)

Variable	Data type	Data size
EIP002_OUT	S_EIPOutput	20 bytes

Offset	Destination device data	Global variable	Data type
+0 to +1	Control signal (32 bits) (Data type: U_EIPFlag)	EIP002_OUT.ControlFlag.F ^{*1}	BOOL[32]
		EIP002_OUT.ControlFlag.W ^{*1}	DWORD
+2 to +3	Command code (CMD-CODE)	EIP002_OUT.CommandCode	DWORD
+4 to +5	Command parameter (CMD-PARAM)	EIP002_OUT.CommandParam1	DINT
+6 to +7		EIP002_OUT.CommandParam2	DINT
+8 to +9		EIP002_OUT.CommandParam3	DINT

*1: Details on allocation of control signal

Allocation of ControlFlag.F

Offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	ERCLR							XEXE							STEP	EXE
+1																DSA

EXE: Command Request Bit: Turned ON to execute a command.

STEP: Measure Bit: Turned ON to execute a measurement.

XEXE: Flow Command Request Bit: Turned ON to request execution of a command during execution of fieldbus flow control.

ERCLR: Error Clear Bit: Turned ON to clear the Error Status bit.

DSA: Data Output Request Bit: Turned ON to request data output.

Allocation of ControlFlag.W.

Offset	15	14	13	. . .											2	1	0
+0	15	14	13	. . .											2	1	0
+1	31	30	29	. . .											18	17	16

Bits 31 to 0: ControlFlag.W uses DWORD data from the offset +0 word.

■ Input area (from FZ5 Sensor Controller to Controller)

Variable	Data type	Data size
EIP002_IN	S_EIPInput	48 bytes

Offset	Destination device data	Global variable	Data type
+0 to +1	Control output (32 bits) (Data type: U_EIPFlag)	EIP002_IN.StatusFlag.F ^{*1}	BOOL[32]
		EIP002_IN.StatusFlag.W ^{*1}	DWORD
+2 to +3	Command code (CMD-CODE)	EIP002_IN.CommandCodeEcho	DWORD
+4 to +5	Response code (RES-CODE)	EIP002_IN.ResponseCode	DINT
+6 to +7	Response data (RES-DATA)	EIP002_IN.ResponseData	DINT
+8 to +9	Output data 0 (DATA0)	EIP002_IN.OutputData[0] to EIP002_IN.OutputData[7]	DINT[8]
+10 to +11	Output data 1 (DATA1)		
+12 to +13	Output data 2 (DATA2)		
+14 to +15	Output data 3 (DATA3)		
+16 to +17	Output data 4 (DATA4)		
+18 to +19	Output data 5 (DATA5)		
+20 to +21	Output data 6 (DATA6)		
+22 to +23	Output data 7 (DATA7)		

*1: Details on allocation of control signal

Allocation of StatusFlag.F

Offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	ERR					XWAIT	XBUSY	XFLG				RUN	OR		BUSY	FLG
+1																GATE

FLG: Command Completion Bit: Turned ON when command execution is completed.

BUSY: Command Busy Bit: Turned ON when command execution is in progress.

OR: Overall Judgement Bit: Turned ON when the overall judgement is NG.

RUN: Run Mode Bit: Turned ON while the Sensor Controller is in Run Mode.

XFLG: Flow Command Completion Bit: Turned ON when execution of a command that was input during the execution of fieldbus flow control has been completed (i.e., when XBUSY turns OFF).

XBUSY: Flow Command Busy Bit: Turned ON when execution of a command that was input during execution of fieldbus flow control is in progress.

XWAIT: Flow Command Wait Bit: Turned ON when a command can be input during the execution of fieldbus flow control.

ERR: Error Signal: Turned ON when the Sensor Controller detects an error signal.

GATE: Data Output Completion Bit: Turned ON when data output is completed.

Allocation of StatusFlag.W

Offset	15	14	13	. . .									2	1	0
+0	15	14	13	. . .									2	1	0
+1	31	30	29	. . .									18	17	16

Bits 31 to 0: EIPInput.StatusFlag.W uses DWORD data from the offset +0 word.

**Precautions for Correct Use**

If the data size in tag data links of the Destination Device is an odd-numbered byte, use BYTE type to define, but not BOOL type.

**Additional Information**

For details on the command codes and response codes, refer to *Accessing Communications Areas Using Variables with NJ-series Controllers* in *Section 2 Methods for Connecting and Communicating with External Devices - Communicating with EtherNet/IP - Memory Allocation* of the *Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)* (Cat. No. Z342).

**Additional Information**

With the Sysmac Studio, two methods can be used to specify an array for a data type. After specifying, (1) is converted to (2) and the data type is always displayed as (2).

(1)WORD[3]/(2)ARRAY[0..2]OF WORD

In this document, the data type is simplified by describing WORD[3].

(The example above means a WORD data type with three array elements.)


7. EtherNet/IP Connection Procedure

This section describes the procedure for connecting the FZ5 Sensor Controller to the Controller via EtherNet/IP using the "Procedure for Using the Configuration Files".

This document explains the procedures for setting up the Controller and the FZ5 Sensor Controller from the factory default setting. For the initialization, refer to *Section 8 Initialization Method*.

■ Setting Overview

The following figure shows the relationship of operating the EtherNet/IP tag data link using the "Procedure for Using the Configuration Files".

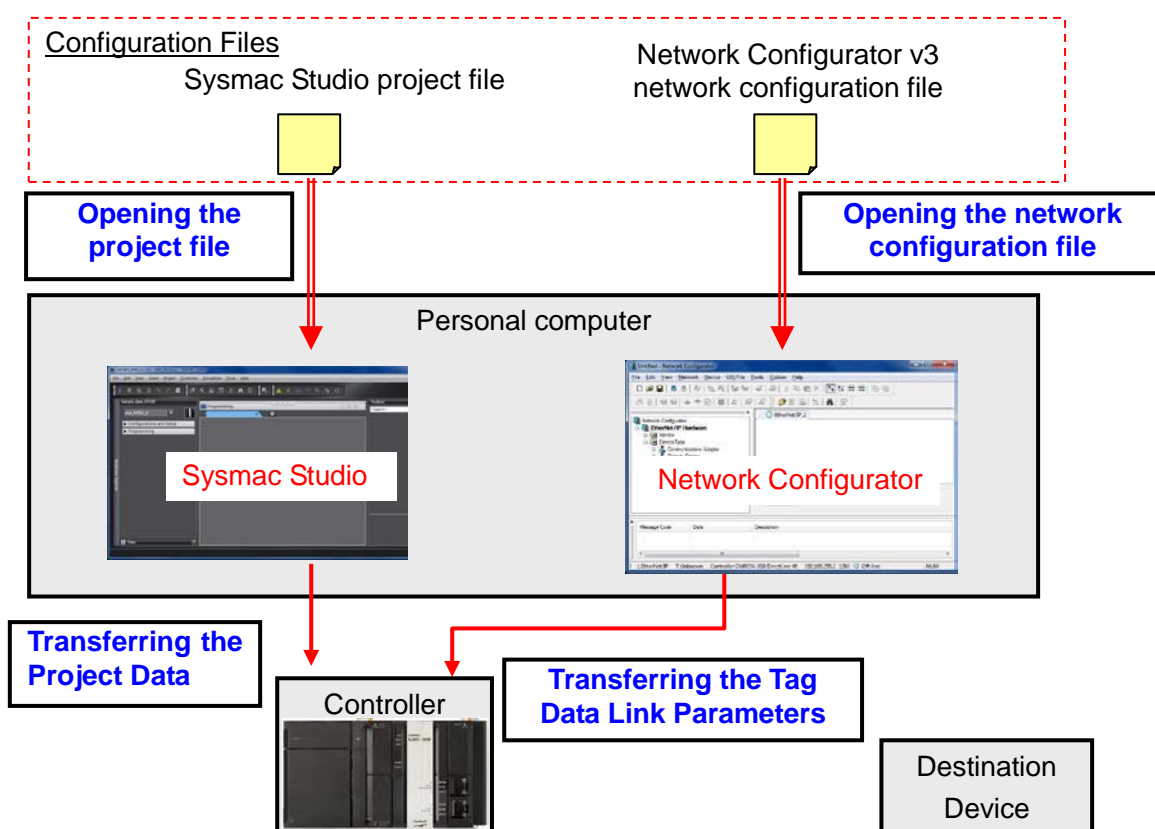


Precautions for Correct Use

Prepare the latest "Sysmac Studio project file" and "Network Configurator v3 network configuration file" from OMRON in advance.

(To obtain the files, contact your OMRON representative.)

7.1. Work Flow

Take the following steps to operate the tag data link for EtherNet/IP.



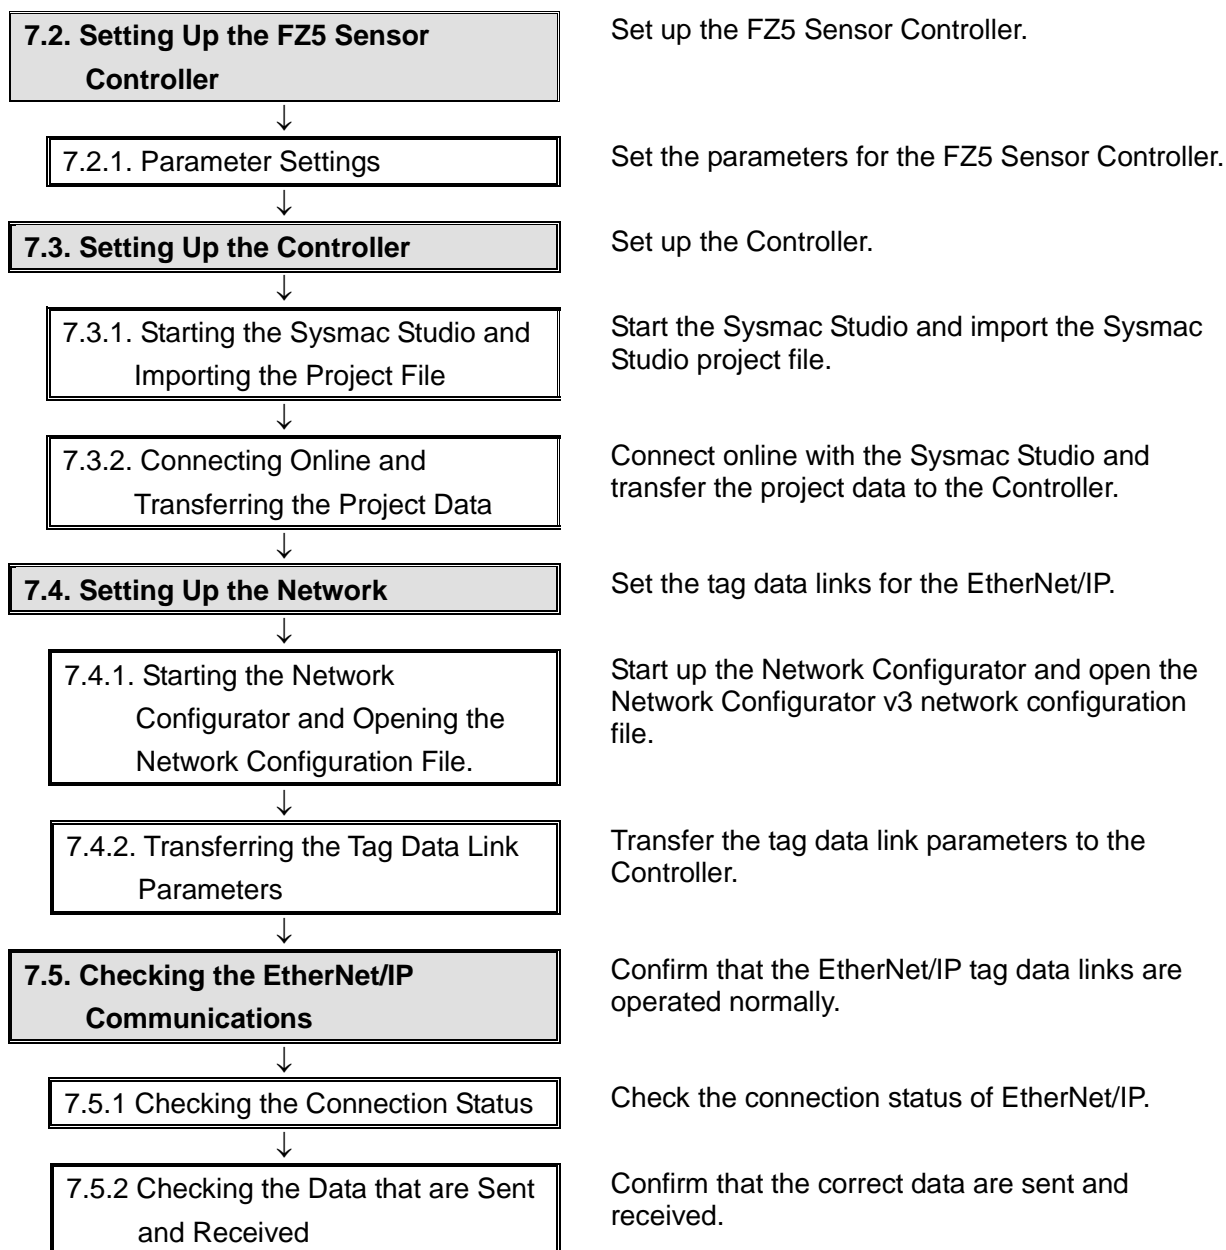


7.2. Setting Up the FZ5 Sensor Controller


Set up the FZ5 Sensor Controller.

7.2.1. Parameter Settings


Set the parameters for the FZ5 Sensor Controller.
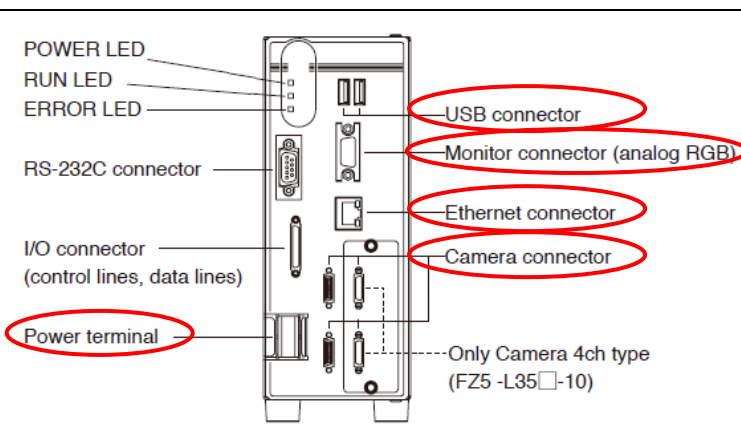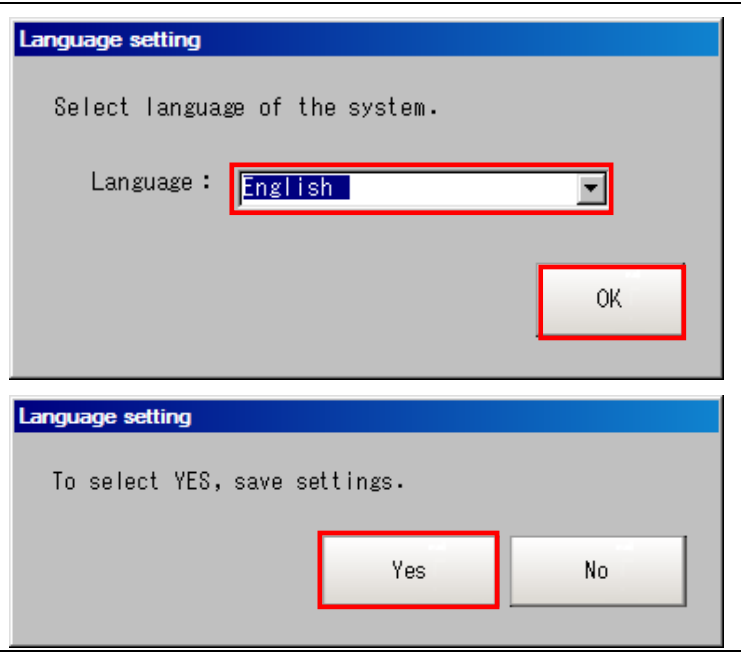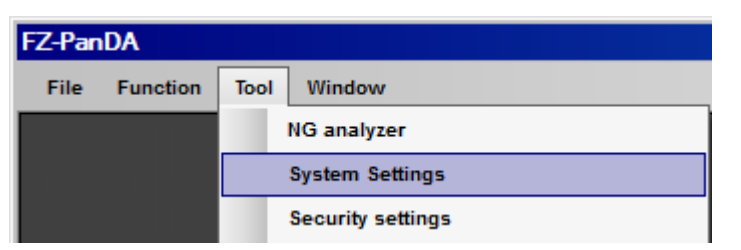
<p>1 Connect the Camera, Monitor, USB connected mouse, and the LAN cable to the FZ5 Sensor Controller.</p> <p>Connect the LAN cable at the other end to the Switching hub.</p> <p>Connect the power supply cable to the Power terminal.</p>	 <p>POWER LED RUN LED ERROR LED</p> <p>RS-232C connector</p> <p>I/O connector (control lines, data lines)</p> <p>Power terminal</p> <p>USB connector</p> <p>Monitor connector (analog RGB)</p> <p>Ethernet connector</p> <p>Camera connector</p> <p>Only Camera 4ch type (FZ5-L35□-10)</p>
<p>2 Turn ON the power supply to the FZ5 Sensor Controller.</p>	
<p>3 The Language setting Dialog Box is displayed on the Monitor connected to the FZ5 Sensor Controller only at the initial start. Select English and click the OK Button.</p> <p>Confirm that your desired Language is selected and click the Yes Button.</p>	
<p>4 Select System Settings from the Tool Menu in the FZ-PanDA Dialog Box on the Monitor.</p>	


- 5 Select **System Settings-Startup-Startup setting** from the tree. The setting dialog box is displayed. Select the **Communication** Tab.

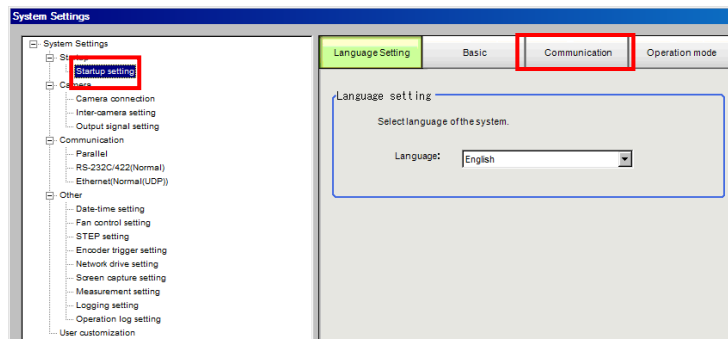

- 6 The Communication module select Dialog Box is displayed. Select **EtherNet/IP** from the Fieldbus pull-down list.

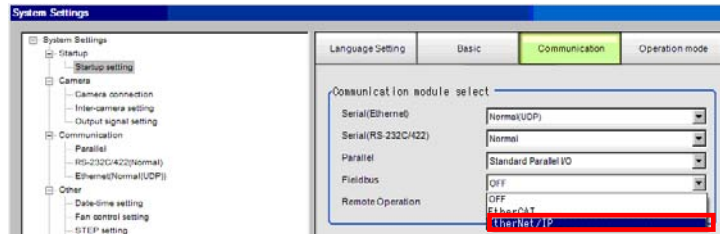


Then, click the **Apply** Button. Click the **Close** Button to close the System Settings Dialog Box.

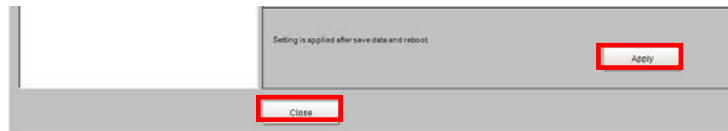






* The data set in the System Settings Dialog Box as shown on the right becomes enabled after the settings are saved, and then the FZ5 Sensor Controller is restarted.

- 7 Select **Data save** from the Function Menu.

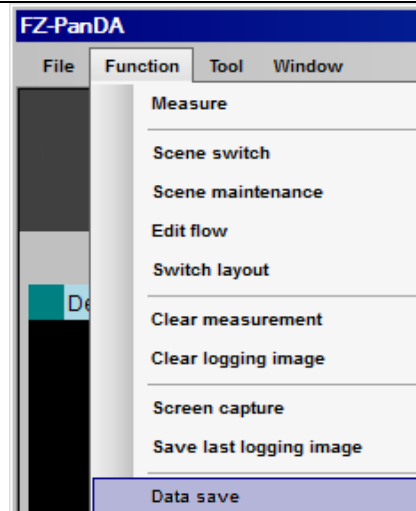

- 8 The Data save Dialog Box is displayed. Click the **OK** Button.

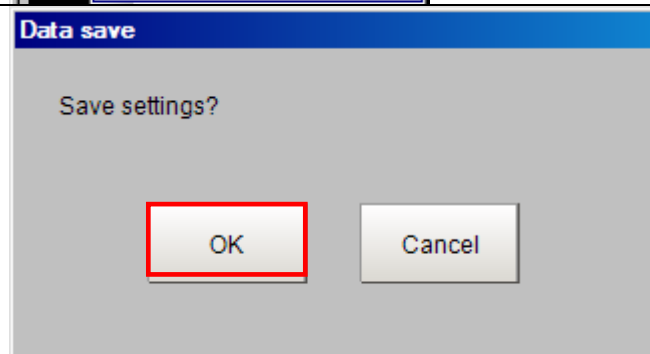

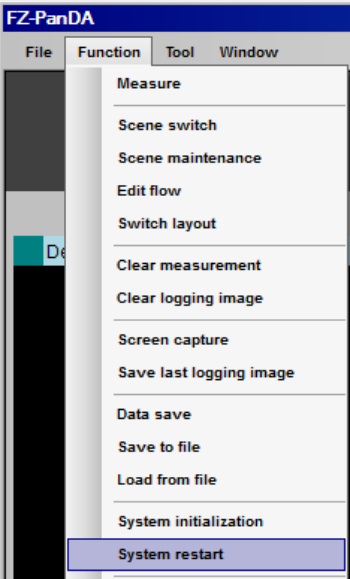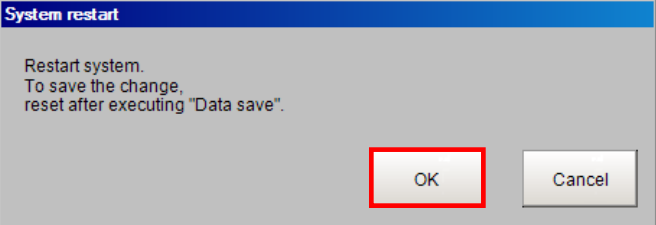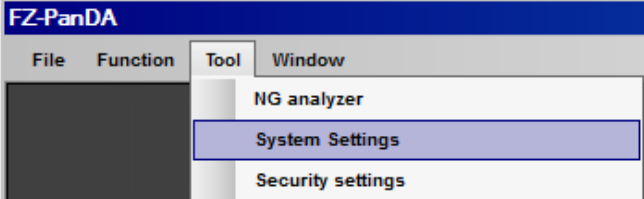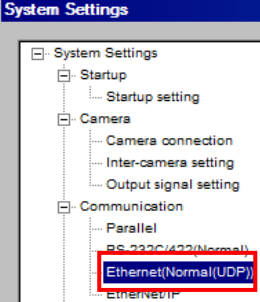9	Select System restart from the Function Menu.	
10	The System restart Dialog Box is displayed. Check the contents and click the OK Button.	
11	After restarting, select System Settings from the Tool Menu.	
12	Select System Settings - Communication - Ethernet:Normal(UDP) from the tree.	

- 13 The dialog box on the right is displayed. Select the *Use the following IP address* Option for Address setting and set the following values.


IP address: 192.168.250.2

Subnet Mask: 255.255.255.0

The dialog box shows the following settings:

- Address setting:**
 - ☒ Obtain an IP address automatically
 - ☒ Use the following IP address
 - IP address: 192.168.250.2
 - Subnet mask: 255.255.255.0
 - Default gateway: 10.5.5.110
 - DNS server: 10.5.5.1
- Address setting 2:**
 - ☐ Obtain an IP address automatically
 - ☒ Use the following IP address
 - IP address: 10.5.6.100
 - Subnet mask: 255.255.255.0
 - Default gateway: 10.5.6.110
 - DNS server: 10.5.6.1
- Input/Output setting:**
 - Input mode: Normal
 - Input form: ASCII
 - Output IP address: 0.0.0.0
 - Input port No.: 3800
 - Output port No.: -1 (-1: Same number input port No)

Buttons: Close, Apply


* To change a value, click the  Button in the item in which a value is to be set. The numeric keyboard is displayed. Enter values using the mouse. After entering the values, click the **OK** Button on the numeric keyboard.

* How to change values.

The numeric keypad shows the following layout:

CLR	BS	
7	8	9
4	5	6
1	2	3
.	0	+/-
OK	Cancel	

The background shows the IP address field with '192' entered, and the 'OK' button on the keypad is highlighted.

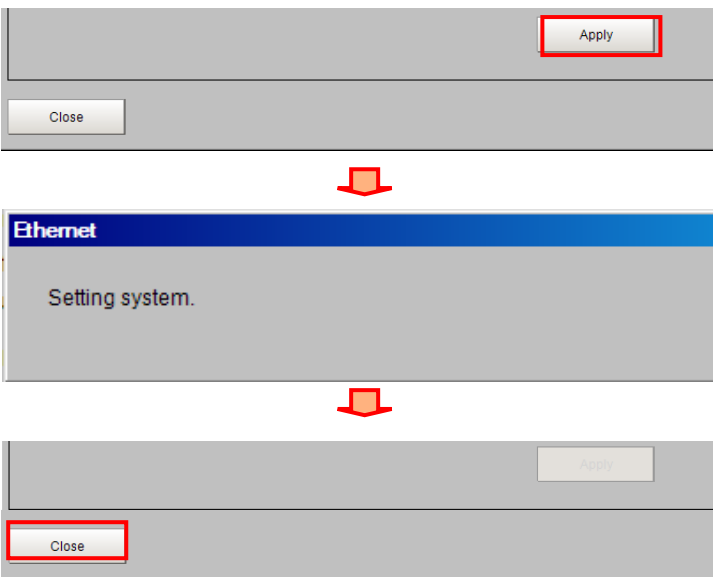14	<p>When a value is changed, the Apply Button is displayed. Click the Apply Button.</p> <p>While the setting is being processed, the dialog box on the right is displayed.</p> <p>After the dialog box disappears, click the Close Button to close the System Settings Dialog Box.</p>	 <p>The sequence of screenshots illustrates the process of applying settings and closing the dialog box. The first screenshot shows a dialog box with an 'Apply' button highlighted by a red rectangle. A red arrow points down to the second screenshot, which shows a dialog box titled 'Ethernet' with the text 'Setting system.' and a red arrow pointing down to the third screenshot. The third screenshot shows the same dialog box with the 'Close' button highlighted by a red rectangle.</p>
15	<p>In the same way as steps 7 and 8, select Data save from the Function Menu.</p>	
16	<p>In the same way as steps 9 and 10, select System restart from the Function Menu.</p>	

7.3. Setting Up the Controller


Set up the Controller.

7.3.1. Starting the Sysmac Studio and Importing the Project File

Start the Sysmac Studio and import the Sysmac Studio project file.

Install the Sysmac Studio and USB driver in the Personal computer beforehand.

- 1 Connect the LAN cable to the Built-in EtherNet/IP port (PORT1) of the Controller and the USB cable to the peripheral (USB) port. Then connect the Controller, Personal computer, and Switching hub by referring to 5.2. *Device Configuration*.

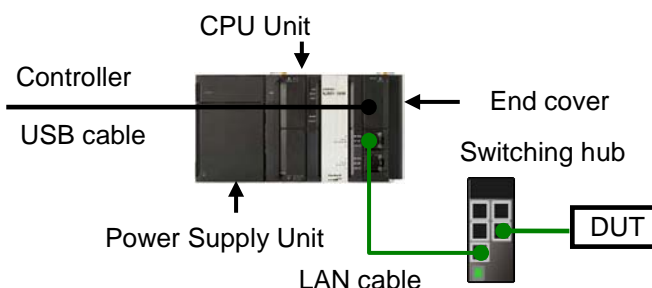


- 2 Turn ON the power supply to the Controller and Switching hub.

- 3 Start the Sysmac Studio.

Click the **Import** Button.


* If a confirmation dialog for an access right is displayed at start, select to start.

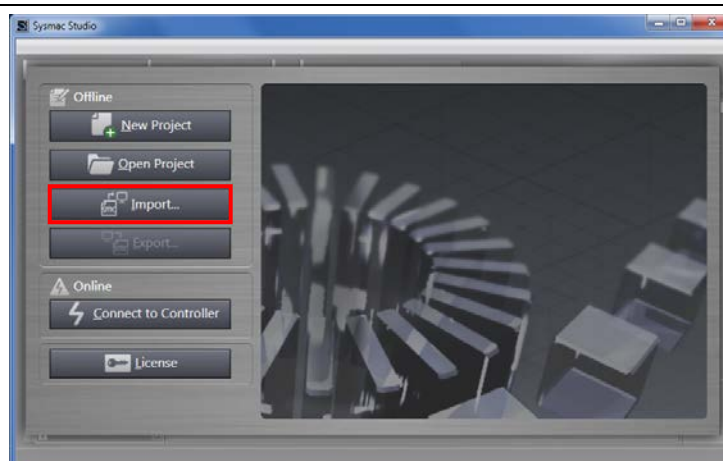

- 4 The Import file Dialog Box is displayed.

Select *OMRON_FZ5_EIP_EV100.smc2* (Sysmac Studio project file) and click the **Open** Button.


* Obtain the Sysmac Studio project file from OMRON.

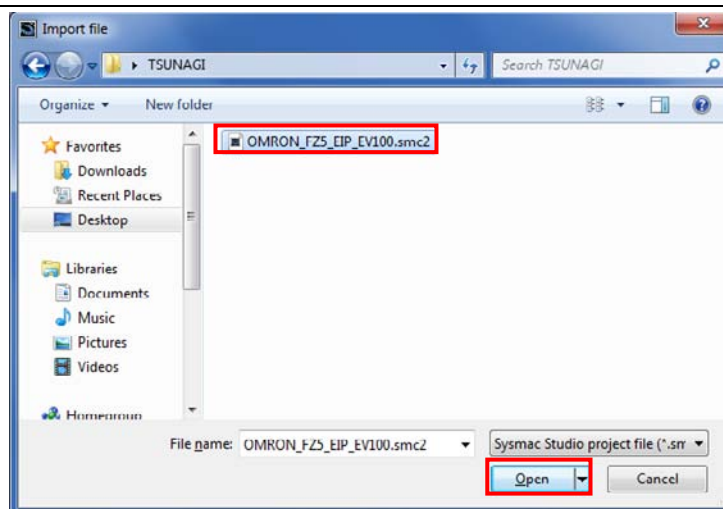


- 5 The OMRON_FZ5_EIP_EV100 project is displayed.

The left pane is called Multiview Explorer, the right pane is called Toolbox and the middle pane is called Edit Pane.

* If an error message is displayed stating "Failed to Load Descendants", change the version of the Sysmac Studio to the version specified in 5.2. *Device Configuration* or higher version.

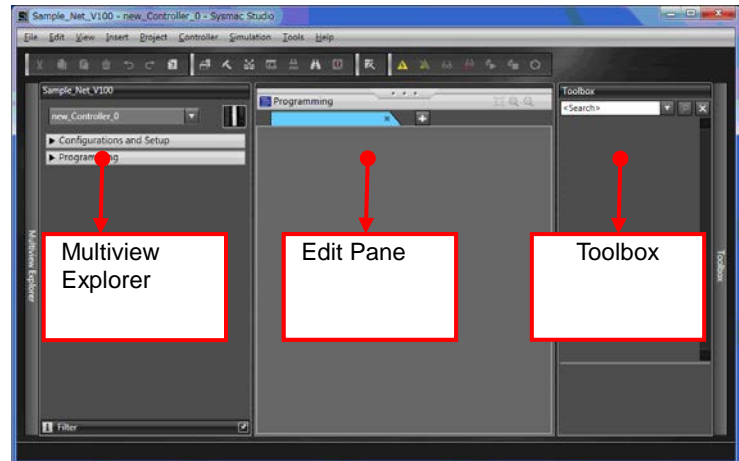


- 6 Select **Check All Programs** from the Project Menu.

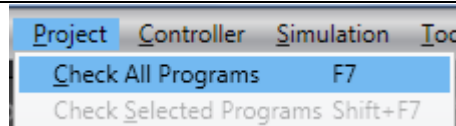


- 7 The Build Tab Page is displayed on the Edit Pane.


Confirm that "0 Errors" and "0 Warnings" are displayed.

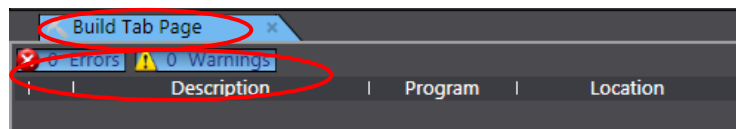


- 8 Select **Rebuild Controller** from the Project Menu.

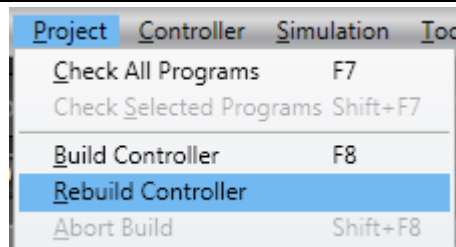

- 9 A confirmation dialog box is displayed. Confirm that there is no problem and click the **Yes** Button.

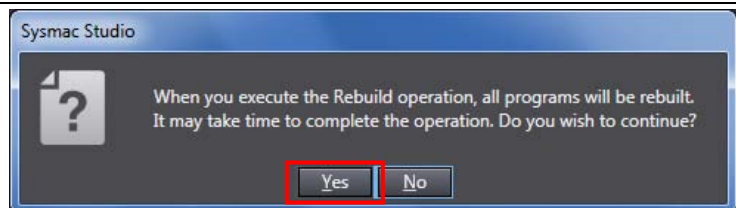

- 10 Confirm that "0 Errors" and "0 Warnings" are displayed in the Build Tab Page.

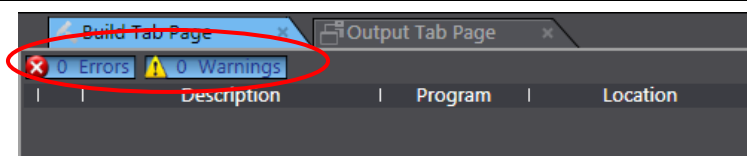

7.3.2. Connecting Online and Transferring the Project Data

Connect online with the Sysmac Studio and transfer the project data to the Controller.


WARNING

Always confirm safety at the Destination Device before you transfer a user program, configuration data, setup data, device variables, or values in memory used for CJ-series Units from the Sysmac Studio.

The devices or machines may perform unexpected operation regardless of the operating mode of the CPU Unit.




- 1 Select **Change Device** from the Controller Menu.

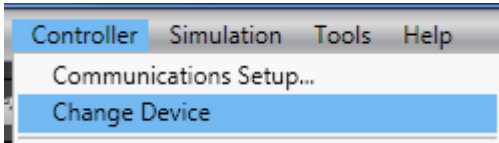

- 2 The Change Device Dialog Box is displayed.


Confirm that the *Device* and *Version* Fields are set as shown on the right.

* If the settings are different, select the setting items from the pull-down list.

Click the **OK** Button.

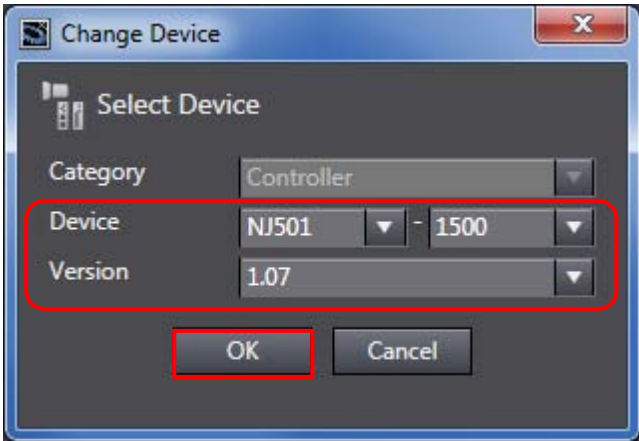
- 3 If you changed the settings in step 2, the Build Dialog Box is displayed. Check the contents and click the **Yes** Button.

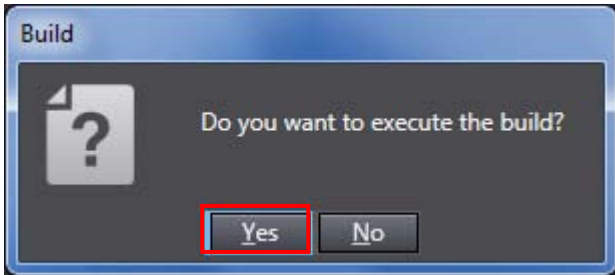

- 4 Select **Communications Setup** from the Controller Menu.

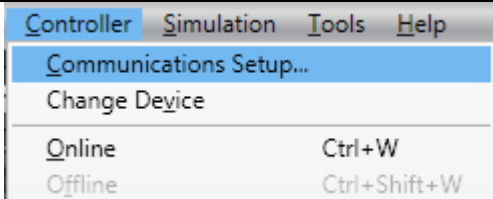

5 The Communications Setup Dialog Box is displayed.

Confirm that the *Direct connection via USB* Option is selected for Connection type.


Click the **OK** Button.

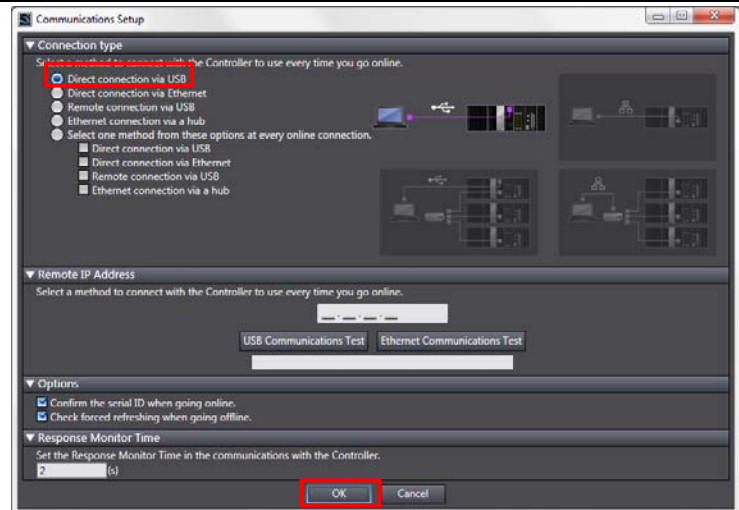



6 Select **Online** from the Controller Menu.

* If the dialog on the right is displayed, the model or version of the Controller does not match that of the project file. Match the Controller model and version by changing the device settings of the project file, and then repeat the procedure from step 1 in this section. Close the dialog box by clicking the **OK** Button.

* The model and version displayed on the confirmation dialog box differ depending on the Controller used and the device setting of the project file.



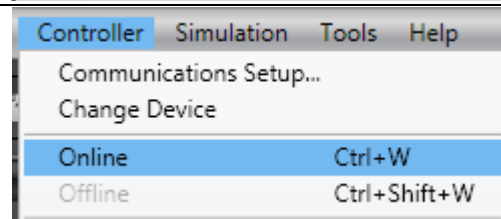

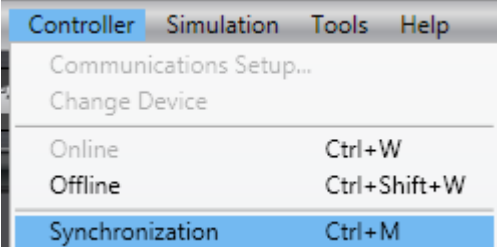
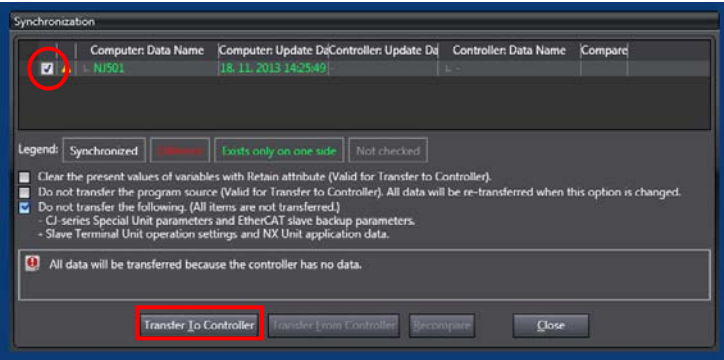


*Example of confirmation dialog box

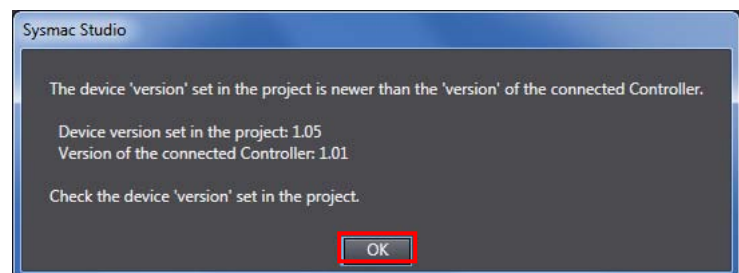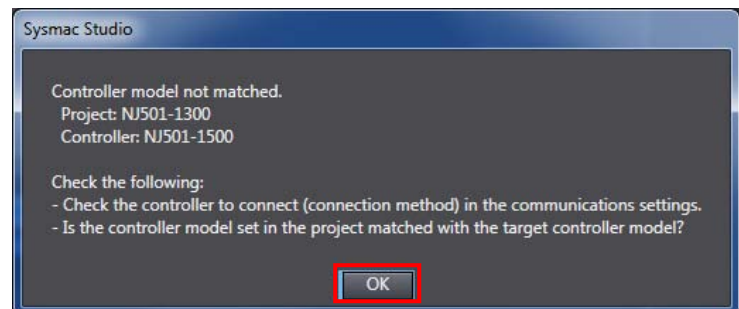


Additional Information


For details on online connections to a Controller, refer to *Section 5 Online Connections to a Controller* of the *Sysmac Studio Version 1 Operation Manual* (Cat. No. W504).
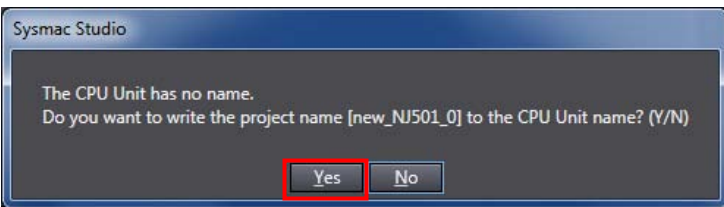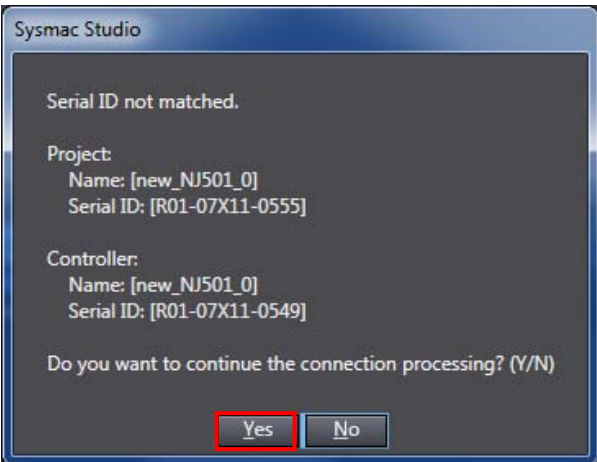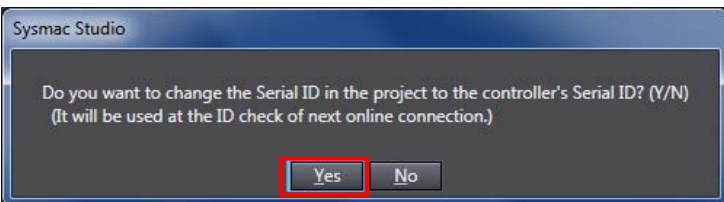
<p>7 A confirmation dialog box is displayed as shown on the right. Confirm that there is no problem and click the Yes Button.</p> <p>* The displayed dialog depends on the status of the Controller used. Click the Yes Button to proceed with the processing.</p> <p>* The displayed serial ID differs depending on the device.</p>	  
<p>8 When an online connection is established, a yellow bar is displayed on the top of the Edit Pane.</p>	
<p>9 Select Synchronization from the Controller Menu.</p>	
<p>10 The Synchronization Dialog Box is displayed.</p> <p>Confirm that the data to transfer (NJ501 in the right dialog) is selected. Then, click the Transfer To Controller Button.</p> <p>* After executing the Transfer To Controller, the Sysmac Studio data is transferred to the Controller and the data is compared.</p>	


- 11 A confirmation dialog box is displayed. Confirm that there is no problem and click the **Yes** Button.

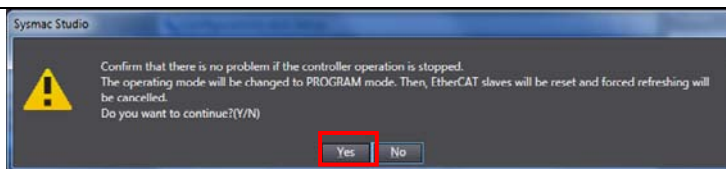

A screen stating "Synchronizing" is displayed.

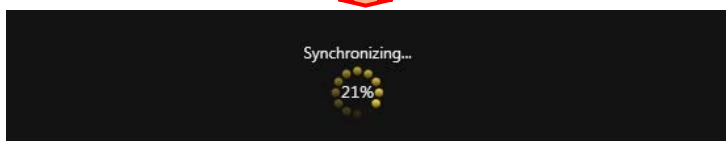


A confirmation dialog box is displayed. Confirm that there is no problem and click the **No** Button.

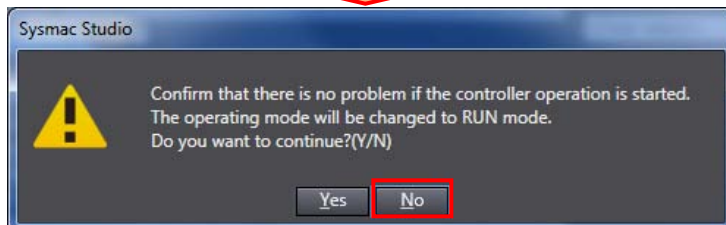

* Do not return it to RUN mode.

- 12 Confirm that the synchronized data is displayed with the color specified by "Synchronized", and that a message is displayed stating "The synchronization process successfully finished".

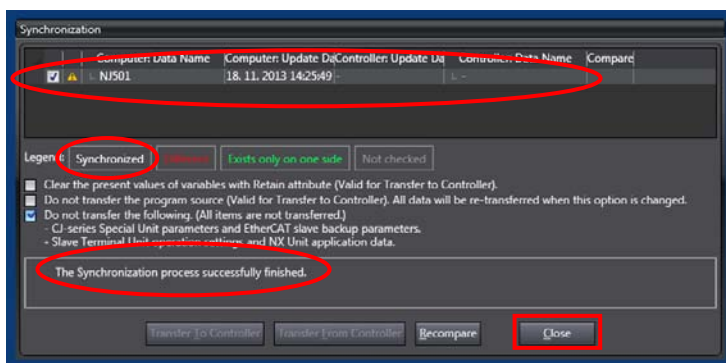

If there is no problem, click the **Close** Button.

* A message stating "The synchronization process successfully finished" is displayed if the Sysmac Studio project data and the data in the Controller match.

* If the synchronization fails, check the wiring and repeat from step 1.

7.4. Setting Up the Network

Set the tag data links for the EtherNet/IP.

7.4.1. Starting the Network Configurator and Opening the Network Configuration File

Start up the Network Configurator and open the Network Configurator v3 network configuration file.




Precautions for Correct Use


Confirm that the LAN cable is connected before taking the following procedure.

When it is not connected, turn OFF the power supply to each device and then connect the LAN cable.

- 1 Start the Network Configurator.

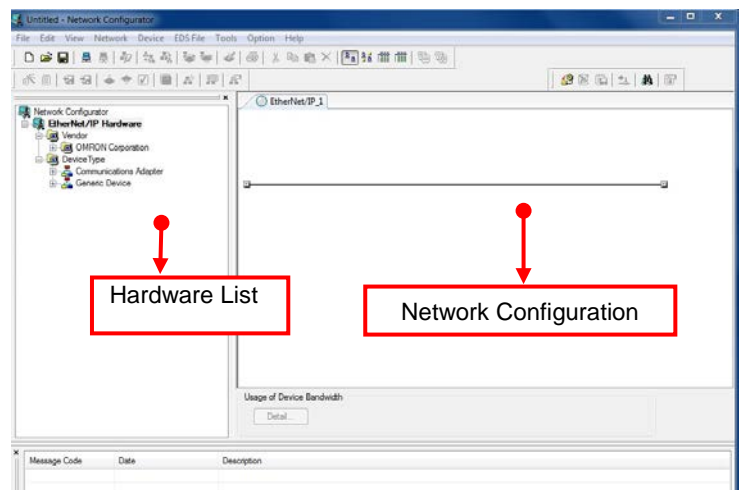


- 2 Select **Open** from the File Menu.

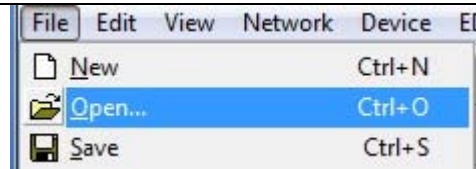

- 3 The Open Dialog Box is displayed.

Select *OMRON_FZ5_EIP_EV100.nvf* (Network Configurator v3 network configuration file) and click the **Open** Button.

* Obtain the Network Configurator v3 network configuration file from OMRON.

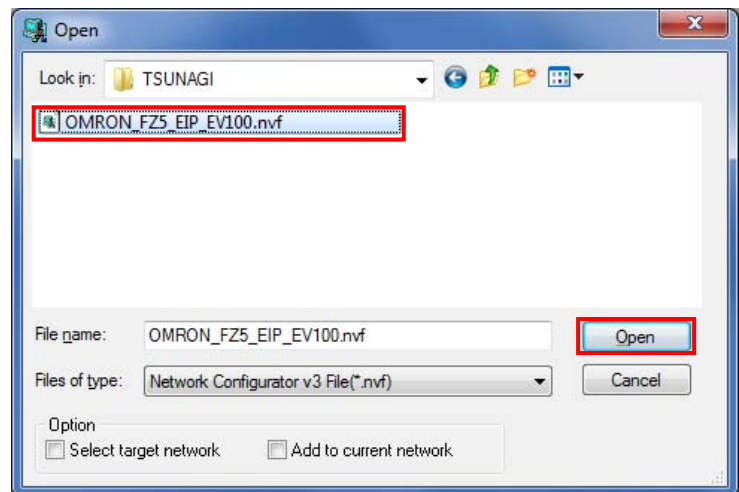

- 4 The following devices are displayed in the Network Configuration Pane as shown on the right.


IP address of node 1:

192.168.250.1


IP address of node 2:

192.168.250.2


* The destination device icon changes to the FZ Series device.

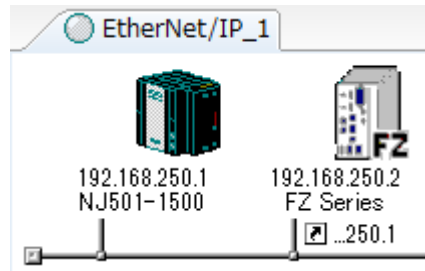

- 5 Select **Select Interface - NJ Series USB Port** from the Option Menu.

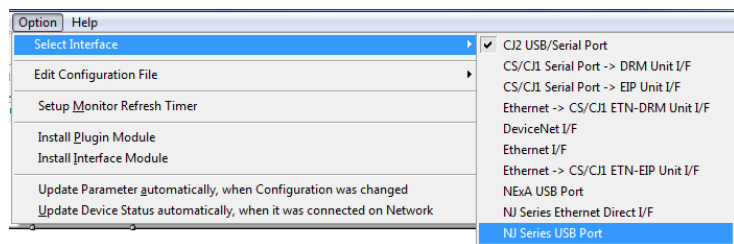


- 6 Select **Connect** from the Network Menu.




- 7 The Select Connect Network Port Dialog Box is displayed. Select **TCP:2**.


Click the **OK** Button.

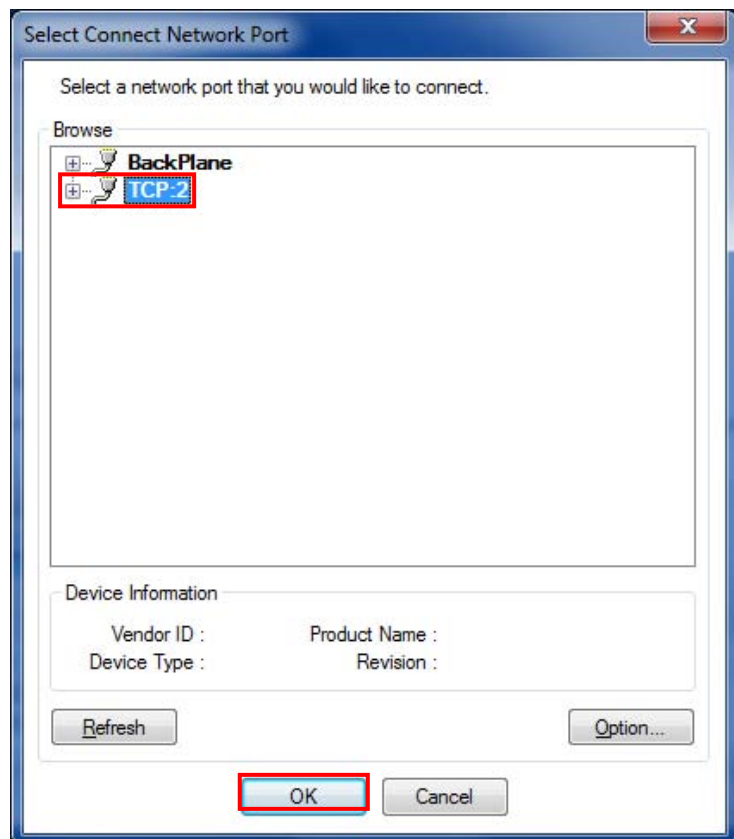

- 8 The Select Connected Network Dialog Box is displayed. Check the contents and click the **OK** Button.

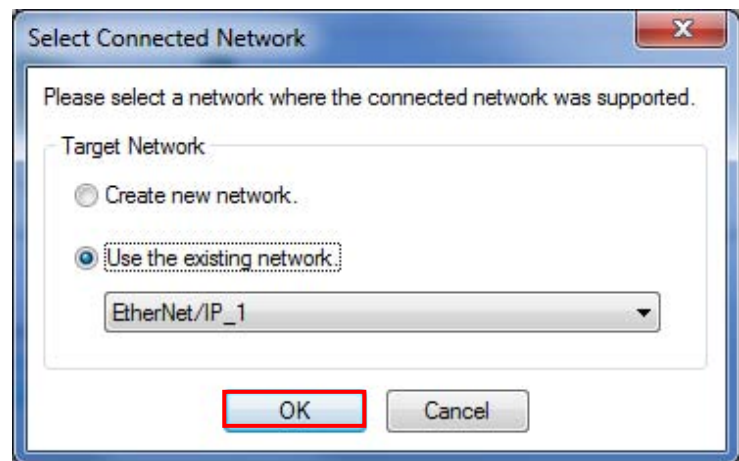

- 9 When an online connection is established normally, the color of the icon on the right figure changes to blue.



Additional Information


If an online connection cannot be made to the Controller, check the cable connection. Or, return to step 4, check the settings and repeat each step.

For details, refer to *7.2.8 Connecting the Network Configurator to the Network* in *Section 7 Tag Data Link Functions of the NJ-series CPU Unit Built-in EtherNet/IP Port User's Manual* (Cat. No. W506).


7.4.2. Transferring the Tag Data Link Parameters

Transfer the tag data link parameters to the Controller.


- 1 Right-click the device icon of node 1 on the Network Configuration Pane and select **Parameter - Download**.

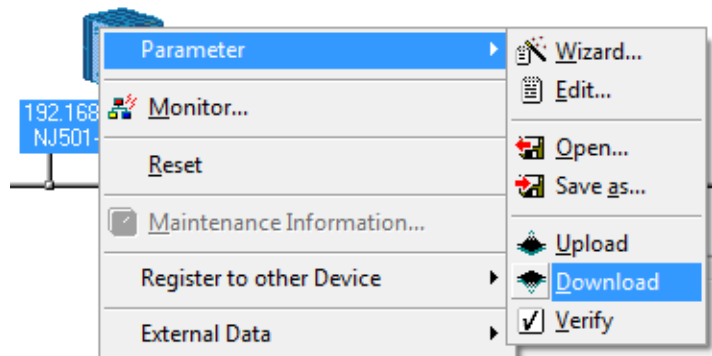


The dialog box on the right is displayed. Confirm that there is no problem and click the **Yes** Button.

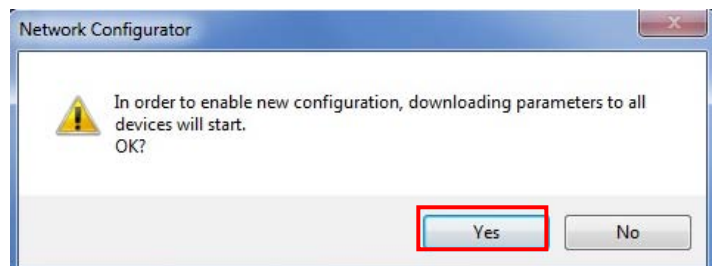

- 2 Tag data link parameters are downloaded from the Network Configurator to the Controller.

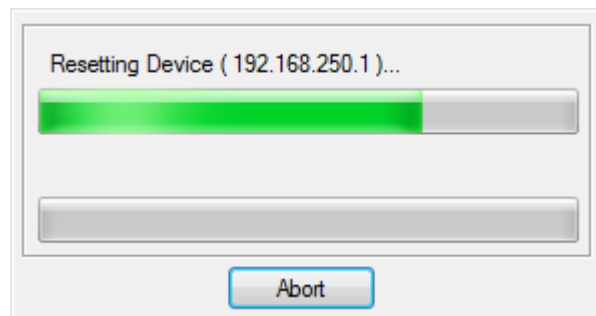

- 3 The dialog box on the right is displayed. Check the contents and click the **OK** Button.

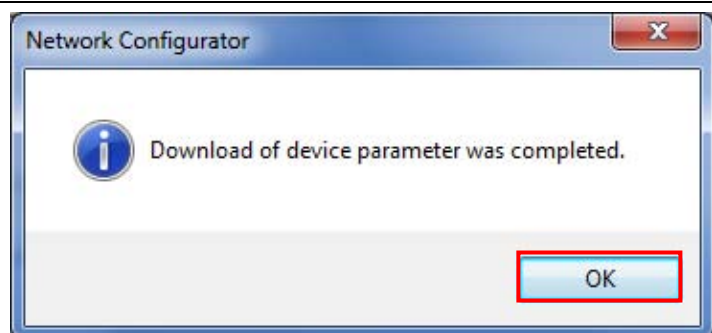

7.5. Checking the EtherNet/IP Communications

Confirm that the EtherNet/IP tag data links are operated normally.

7.5.1. Checking the Connection Status

Check the connection status of EtherNet/IP.

- 1 Confirm that the tag data links are normally in operation by checking the LED indicators on each device.


- Controller (Built-in EtherNet/IP port)

The LED indicators in normal status are as follows:

[NET RUN]: Lit green

[NET ERR]: Not lit

[LINK/ACT]: Flashing yellow
(Flashing while packets are being sent and received)

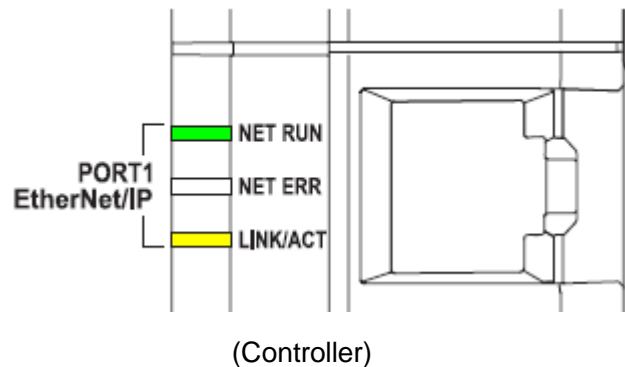

- 2 Confirm that the tag data links are normally in operation by checking the status information on the Monitor Device Window of the Network Configurator.




Right-click the device icon of node 1 on the Network Configuration Pane and select **Monitor**.

- 3 The dialog box on the right displays the Status 1 Tab Page of the Device Monitor Dialog Box.


When the same items as shown on the right are selected in the *Data Link Status* Field, the data links are normally in operation.

* The *Tag Data Link* Check Box in the *Ethernet Status* Field can not be checked shortly after tag data link parameters have been transferred.


Click the **Close** Button.

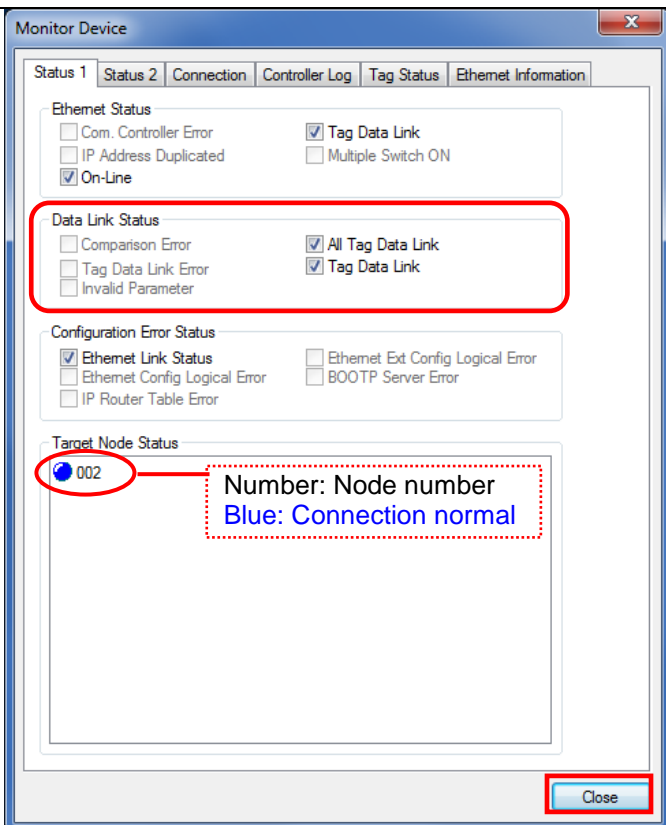


- 4 Select **Disconnect** from the Network Menu to go offline.

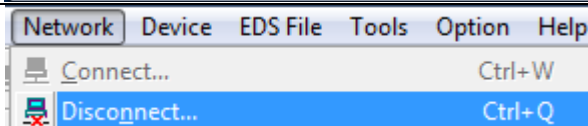

- 5 The color of the icon on the figure changes from blue.




- 6 Select **Exit** from the File Menu to exit the Network Configurator.

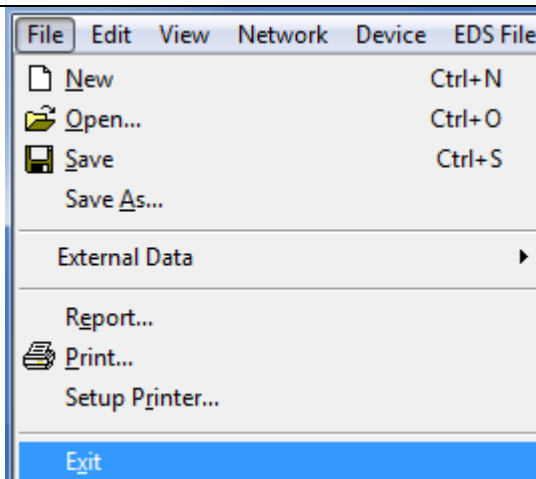

7.5.2. Checking the Data that are Sent and Received


Confirm that the correct data are sent and received.



WARNING


Always confirm safety at the Destination Device before you transfer a user program, configuration data, setup data, device variables, or values in memory used for CJ-series Units from the Sysmac Studio.

The devices or machines may perform unexpected operation regardless of the operating mode of the CPU Unit.




1

Select **Watch Tab Page** from the View Menu.

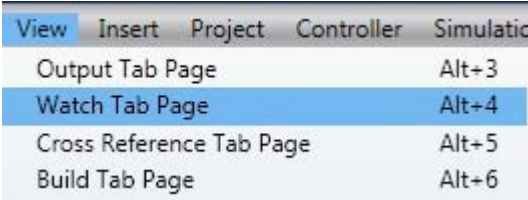

2

The Watch Window1 Tab Page is displayed in the lower section of the Edit Pane.



3

The following names are entered in the Watch Window1 Tab Page for monitoring.


EIP002_OUT.ControlFlag.F[0]:
Command Request Bit (EXE)

EIP002_OUT.CommandCode:
Command code (CMD-CODE)

EIP002_IN.StatusFlag.F[0]:
Command Completion Bit (FLG)

EIP002_IN.CommandCodeEcho:
Command code (CMD-CODE)

EIP002_IN.ResponseCode:
Response code (RES-CODE)

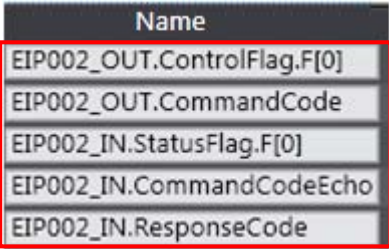

- 4 Enter 00101010 in the *Modify* Column of *EIP002_OUT.CommandCode*. (CommandCode [00101010]: Measurement)

By pressing the **Enter** Key, the value is set and the Online value of *EIP002_OUT.CommandCode* changes to 00101010.

Click **TRUE** in the *Modify* Column of *EIP002_OUT.ControlFlag.F[0]*. The Online value changes to True. (EIPOutput.ControlFlag.F[0]: Command Request Bit)

Name	Online value	Modify		Data type
EIP002_OUT.ControlFlag.F[0]	False	TRUE	FALSE	BOOL
EIP002_OUT.CommandCode	0000 0000	00101010		DWORD
EIP002_IN.StatusFlag.F[0]	False	TRUE	FALSE	BOOL
EIP002_IN.CommandCodeEcho	0000 0000			DWORD
EIP002_IN.ResponseCode	0			DINT



Name	Online value	Modify		Data type
EIP002_OUT.ControlFlag.F[0]	False	TRUE	FALSE	BOOL
EIP002_OUT.CommandCode	0010 1010	00101010		DWORD
EIP002_IN.StatusFlag.F[0]	False	TRUE	FALSE	BOOL
EIP002_IN.CommandCodeEcho	0000 0000			DWORD
EIP002_IN.ResponseCode	0			DINT



Name	Online value	Modify		Data type
EIP002_OUT.ControlFlag.F[0]	True	TRUE	FALSE	BOOL
EIP002_OUT.CommandCode	0010 1010	00101010		DWORD
EIP002_IN.StatusFlag.F[0]	False	TRUE	FALSE	BOOL
EIP002_IN.CommandCodeEcho	0010 1010			DWORD
EIP002_IN.ResponseCode	0			DINT

- 5 After the measurement is completed, OK is displayed on the dialog box.



- 6 The execution results are reflected in the following variables.

- *EIP002_IN.StatusFlag.F[0]*: True (It returns to False after a certain time)
- *EIP002_IN.CommandCodeEcho*: 00101010 (The sent command code is returned)
- *EIP002_IN.ResponseCode*: 0 (The execution result of the command (0: OK, -1: NG))

Name	Online value	Modify		Data type
EIP002_OUT.ControlFlag.F[0]	True	TRUE	FALSE	BOOL
EIP002_OUT.CommandCode	0010 1010	00101010		DWORD
EIP002_IN.StatusFlag.F[0]	False	TRUE	FALSE	BOOL
EIP002_IN.CommandCodeEcho	0010 1010			DWORD
EIP002_IN.ResponseCode	0			DINT

8. Initialization Method

This document explains the setting procedure from the factory default setting.

Some settings may not be applicable as described in this document unless you use the devices with the factory default setting.

8.1. Initializing the Controller


To initialize the settings of the Controller, the CPU Unit and EtherNet/IP port need to be initialized. Change the Controller to PROGRAM mode before the initialization.

8.1.1. EtherNet/IP port

Delete the connection information and tag information that are set for the EtherNet/IP port. Follow the procedure below to set blank connection information and blank tag information and delete them using the Network Configurator.

(1) Deleting connection information


Select the **Connections** Tab of the Edit Device Parameters Dialog Box and move all devices registered in the *Register Device List* Field to the *Unregister Device List* Field. If a confirmation dialog is displayed when you remove devices from the registration list, click the **Yes** Button.

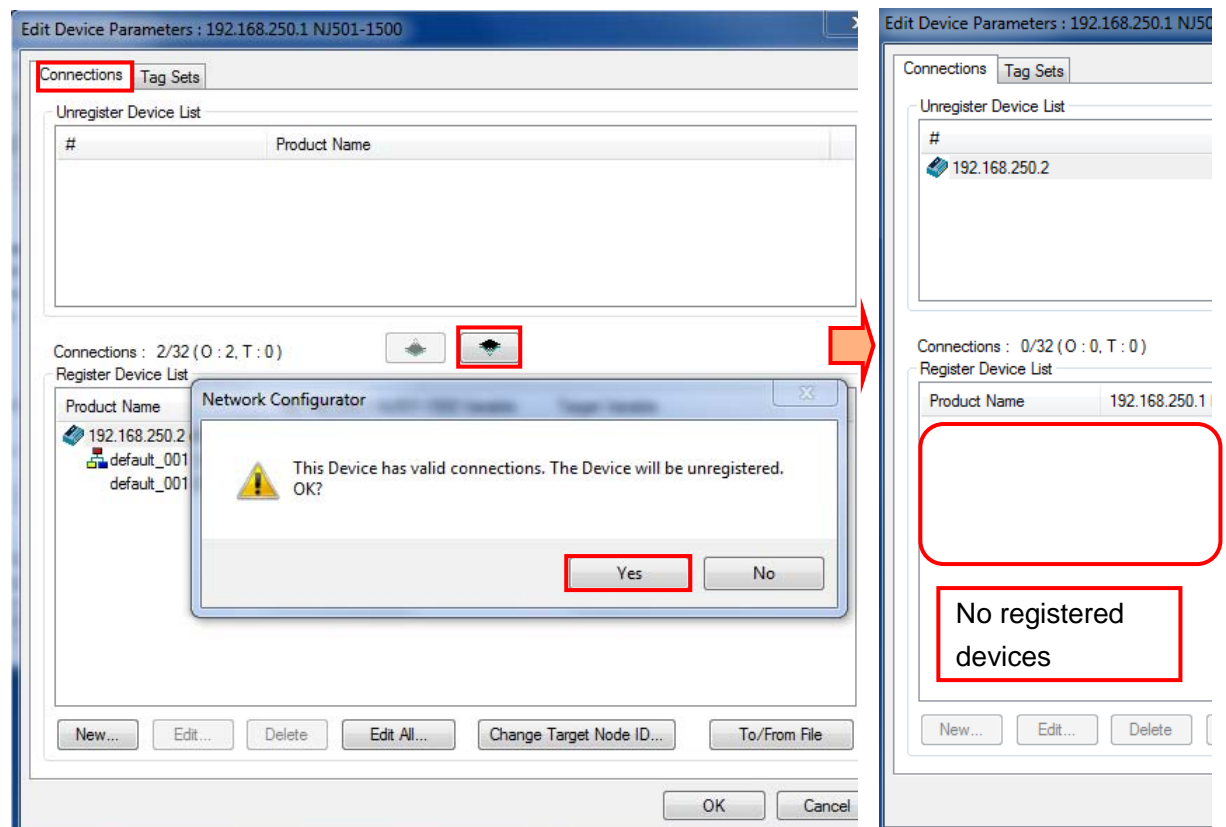

(2) Deleting tag information


Select the **Tag Sets** Tab of the Edit Device Parameters Dialog Box and click the **Delete all of unused Tag Sets** Button.

If a confirmation dialog is displayed when you delete tag sets from the registration list, confirm that there is no problem and click the **Yes** Button.

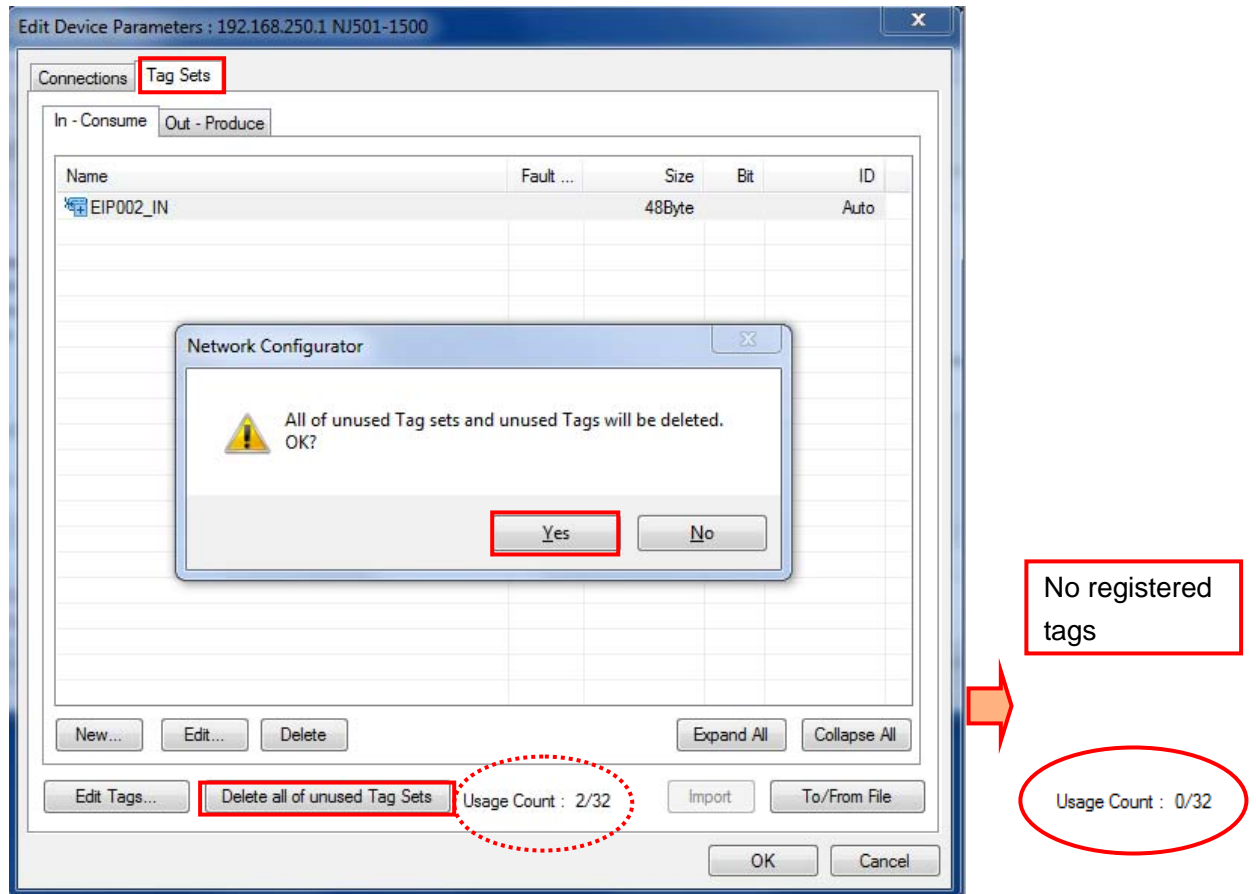


(3) Download

Right-click the Controller and select **Parameter - Download** from the menu that is displayed.

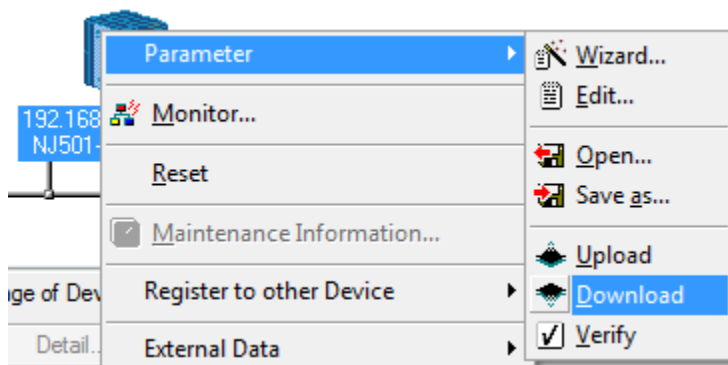

8.1.2. CPU Unit

To initialize the settings of the CPU Unit, select **Clear All Memory** from the Controller Menu of the Sysmac Studio. The Clear All Memory Dialog Box is displayed. Check the contents and click the **OK** Button.

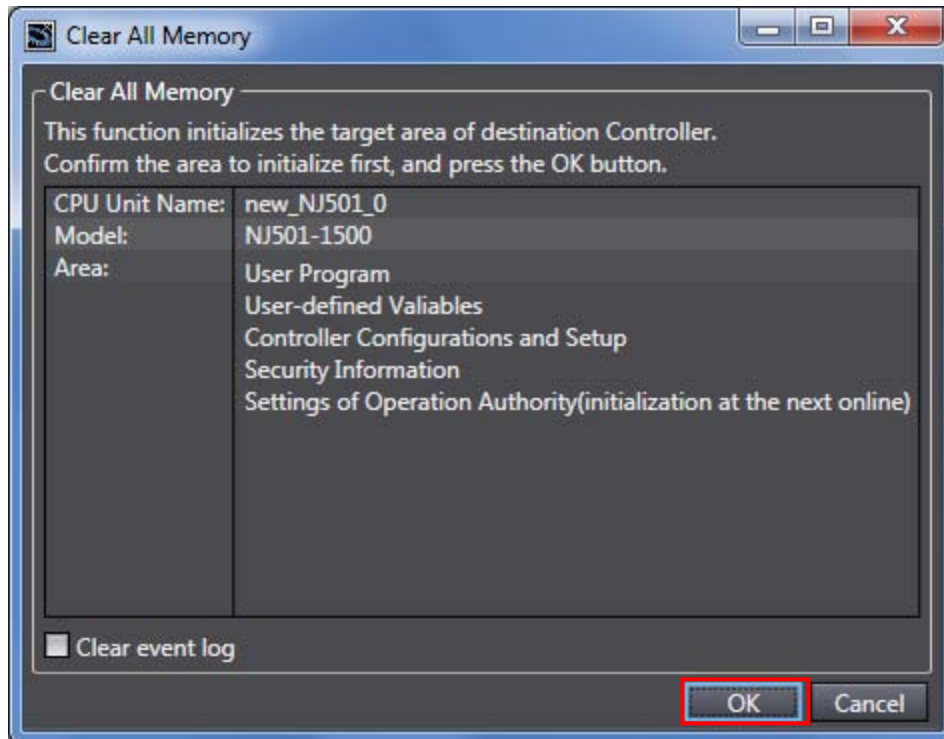

8.2. Initializing the FZ5 Sensor Controller

For how to initialize the FZ5 Sensor Controller, refer to *Initializing the Controller* in *Section 1 Before Operation* of the *Vision Sensor FH/FZ5 Series Vision System User's Manual* (Cat.No.Z340).

9. Appendix 1 Detailed Settings of the Tag Data Links

This section provides the detailed settings necessary to perform tag data links which are set in this document.

9.1. Global Variable Table

The Controller accesses the data in tag data links as global variables. The following are the settings of the global variables. Use the Sysmac Studio to register a global variable table.

Name	Data type	Network publish	Destination device allocation
EIP002_OUT	S_EIPOutput	Output	Output data (20Bytes)
EIP002_IN	S_EIPInput	Input	Input data (48Bytes)

* For details on data types, refer to 6.2 *Data Types for Tag Data Links*.



Precautions for Correct Use

If the data size in tag data links of the Destination Device is an odd-numbered byte, use BYTE type to define, but not BOOL type.



Additional Information

For details on the command codes and response codes, refer to *Accessing Communications Areas Using Variables with NJ-series Controllers* in *Section 2 Methods for Connecting and Communicating with External Devices - Communicating with EtherNet/IP - Memory Allocation* of the *Vision Sensor FH/FZ5 Series Vision System User's Manual (Communications Settings)* (Cat. No. Z342).



Additional Information

With the Sysmac Studio, two methods can be used to specify an array for a data type. After specifying, (1) is converted to (2) and the data type is always displayed as (2).

(1)WORD[3]/(2)ARRAY[0..2]OF WORD

In this document, the data type is simplified by describing WORD[3].

(The example above means a WORD data type with three array elements.)

9.2. Relationship between Destination Device and Global Variables

Global variables need to be arranged in offset order of the Destination Device before setting the tag data link parameters. The order of offset is the same as that of described in 6.2. *Data Types for Tag Data Links*.

The relationship between the memory allocation of the Destination Device and the global variables is shown below.

■ Output area (from Controller to FZ5 Sensor Controller)

Variable	Data type	Data size
EIP002_OUT	S_EIPOutput	20 bytes

Offset	Destination device data	Global variable	Data type
+0 to +1	Control signal (32 bits) (Data type: U_EIPFlag)	EIP002_OUT.ControlFlag.F ^{*1}	BOOL[32]
		EIP002_OUT.ControlFlag.W ^{*1}	DWORD
+2 to +3	Command code (CMD-CODE)	EIP002_OUT.CommandCode	DWORD
+4 to +5	Command parameter (CMD-PARAM)	EIP002_OUT.CommandParam1	DINT
+6 to +7		EIP002_OUT.CommandParam2	DINT
+8 to +9		EIP002_OUT.CommandParam3	DINT

*1: Details on allocation of control signal

Allocation of ControlFlag.F

Offset (word)	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	ERCLR							XEXE							STEP	EXE
+1																DSA

EXE: Command Request Bit: Turned ON to execute a command.

STEP: Measure Bit: Turned ON to execute a measurement.

XEXE: Flow Command Request Bit: Turned ON to request execution of a command during execution of fieldbus flow control.

ERCLR: Error Clear Bit: Turned ON to clear the Error Status bit.

DSA: Data Output Request Bit: Turned ON to request data output.

Allocation of ControlFlag.W

Offset	15	14	13	. . .											2	1	0
+0	15	14	13	. . .											2	1	0
+1	31	30	29	. . .											18	17	16

Bits 31 to 0: ControlFlag.W uses DWORD data from the offset +0 word.

■ Input area (from FZ5 Sensor Controller to Controller)

Variable	Data type	Data size
EIP002_IN	S_EIPInput	48 bytes

Offset	Destination device data	Global variable	Data type
+0 to +1	Control output (32 bits) (Data type: U_EIPFlag)	EIP002_IN.StatusFlag.F ^{*1}	BOOL[32]
		EIP002_IN.StatusFlag.W ^{*1}	DWORD
+2 to +3	Command code (CMD-CODE)	EIP002_IN.CommandCodeEcho	DWORD
+4 to +5	Response code (RES-CODE)	EIP002_IN.ResponseCode	DINT
+6 to +7	Response data (RES-DATA)	EIP002_IN.ResponseData	DINT
+8 to +9	Output data 0 (DATA0)	EIP002_IN.OutputData[0] to EIP002_IN.OutputData[7]	DINT[8]
+10 to +11	Output data 1 (DATA1)		
+12 to +13	Output data 2 (DATA2)		
+14 to +15	Output data 3 (DATA3)		
+16 to +17	Output data 4 (DATA4)		
+18 to +19	Output data 5 (DATA5)		
+20 to +21	Output data 6 (DATA6)		
+22 to +23	Output data 7 (DATA7)		

*1: Details on allocation of control signal

Allocation of StatusFlag.F

Offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
+0	ERR					XWAIT	XBUSY	XFLG				RUN	OR		BUSY	FLG
+1																GATE

FLG: Command Completion Bit: Turned ON when command execution is completed.

BUSY: Command Busy Bit: Turned ON when command execution is in progress.

OR: Overall Judgement Bit: Turned ON when the overall judgement is NG.

RUN: Run Mode Bit: Turned ON while the Sensor Controller is in Run Mode.

XFLG: Flow Command Completion Bit: Turned ON when execution of a command that was input during the execution of fieldbus flow control has been completed (i.e., when XBUSY turns OFF).

XBUSY: Flow Command Busy Bit: Turned ON when execution of a command that was input during execution of fieldbus flow control is in progress.

XWAIT: Flow Command Wait Bit: Turned ON when a command can be input during the execution of fieldbus flow control.

ERR: Error Signal: Turned ON when the Sensor Controller detects an error signal.

GATE: Data Output Completion Bit: Turned ON when data output is completed.

Allocation of StatusFlag.W

Offset	15	14	13	. . .									2	1	0
+0	15	14	13	. . .									2	1	0
+1	31	30	29	. . .									18	17	16

Bits 31 to 0: EIPInput.StatusFlag.W uses DWORD data from the offset +0 word.

9.3. Associating the Tag Data Links

Tag data link parameters are required to perform tag data links with a Destination Device.

Follow the procedures below to associate the tag data links.

- (1) Use the Sysmac Studio to define the global variables to publish on the network.
Store the created global variables in a CSV file to use in the Network Configurator.
- (2) Read the CSV file (tag list) created in step (1) to the Network Configurator.
- (3) Install the EDS file for the Destination Device in the Network Configurator.
- (4) Make a single tag set that includes the tag lists.
- (5) Link the tag set with the destination device information and create tag data link parameters.

The numbers shown in the tables below correspond to the steps above.

■ Output area (from Controller to FZ5 Sensor Controller)

Controller setting (Set with Sysmac Studio.)		Data link table setting (Set with Network Configurator.)		Destination device information	
(1)		Tag set: EIP002_OUT	20Byte (4)	<=	Output_100-[20Byte]
Global variable (Data type)		(3)	Tag list		
EIP002_OUT	S_EIPOutput	=> (2)	EIP002_OUT	(20Byte)	

■ Input area (from FZ5 Sensor Controller to Controller)

Controller setting (Set with Sysmac Studio.)		Data link table setting (Set with Network Configurator.)		Destination device information	
(1)		Tag set: EIP002_IN	48Byte (4)	<=	Input_101-[48Byte]
Global variable (Data type)		(3)	Tag list		
EIP002_IN	S_EIPInput	=> (2)	EIP002_IN	(48Byte)	


10. Appendix 2 Setting the Tag Data Links Using the Software

This section describes the procedure for setting the Controller without the Configuration Files (Procedure for Setting Parameters from Beginning).

You can also refer to this section to change parameter settings of the Configuration Files.

10.1. Overview of Setting Tag Data Links

The following figure shows the relationship of operating the tag data links using the "Procedure for Setting Parameters from Beginning".

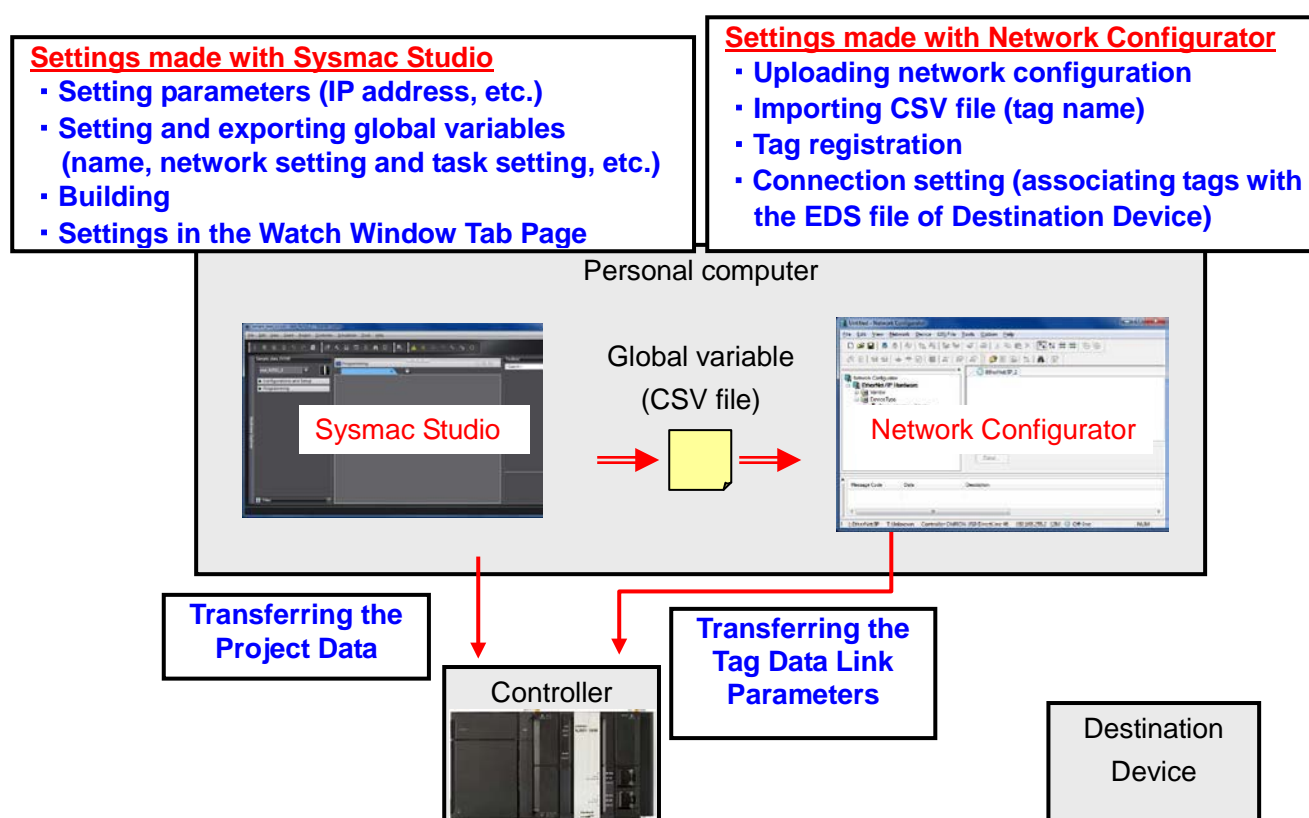



10.2. Work Flow of "Procedure for Setting Parameters from Beginning"

Take the following steps to make the tag data link settings for EtherNet/IP using the "Procedure for Setting Parameters from Beginning"

10.3. *Setting Up the Controller Using the Software* and 10.4. *Setting Up the Network Using the Software* (in red frames below) explain the connection procedures by setting with the software in stead of using the Configuration Files.

The proceeding for the "Procedure for Using the Configuration Files" described in 7.2. *Setting Up the FZ5 Sensor Controller* and 7.5. *Checking the EtherNet/IP Communications* applies to those of "Procedure for Setting Parameters from Beginning". Refer to the procedures in Section 7.

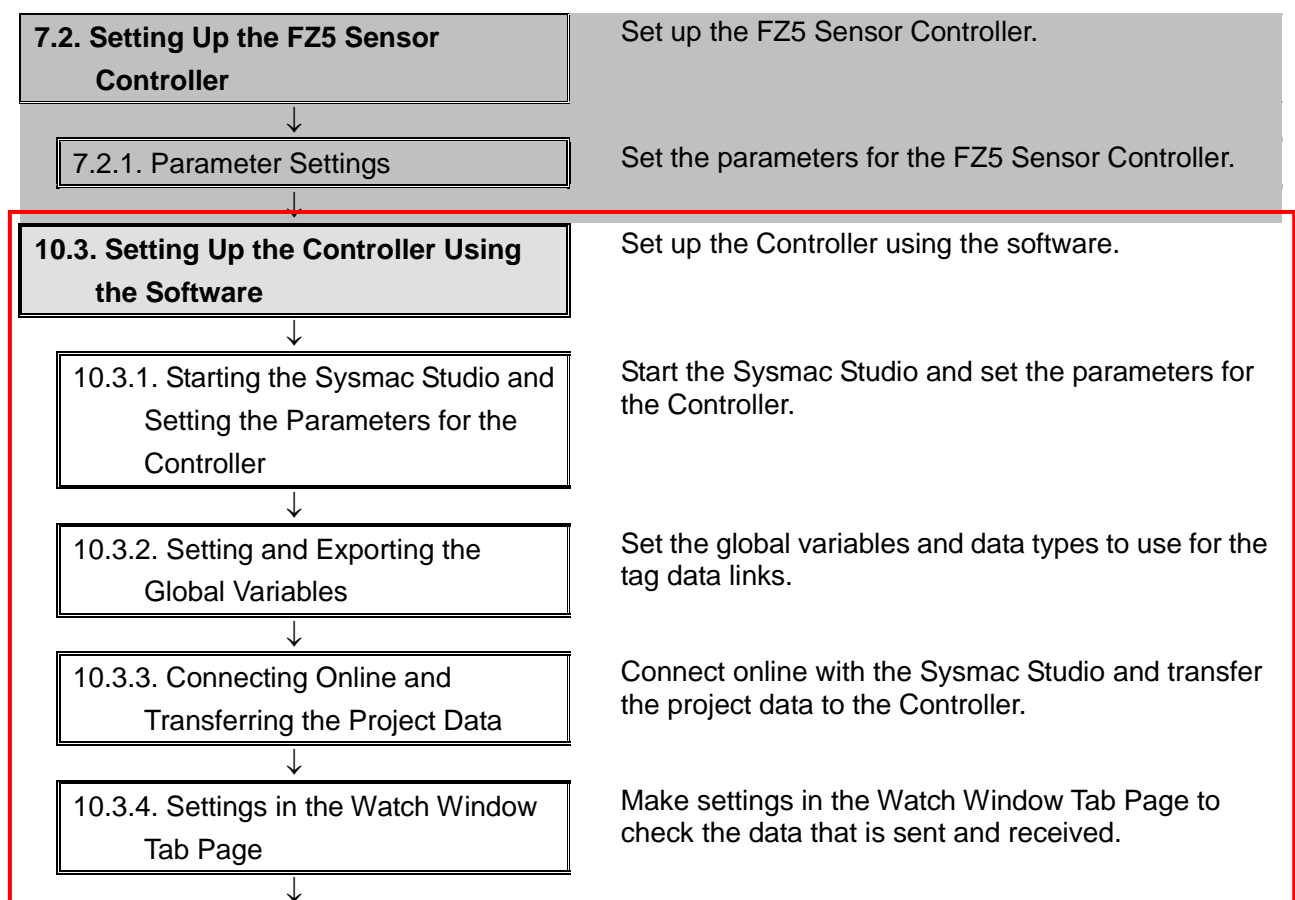

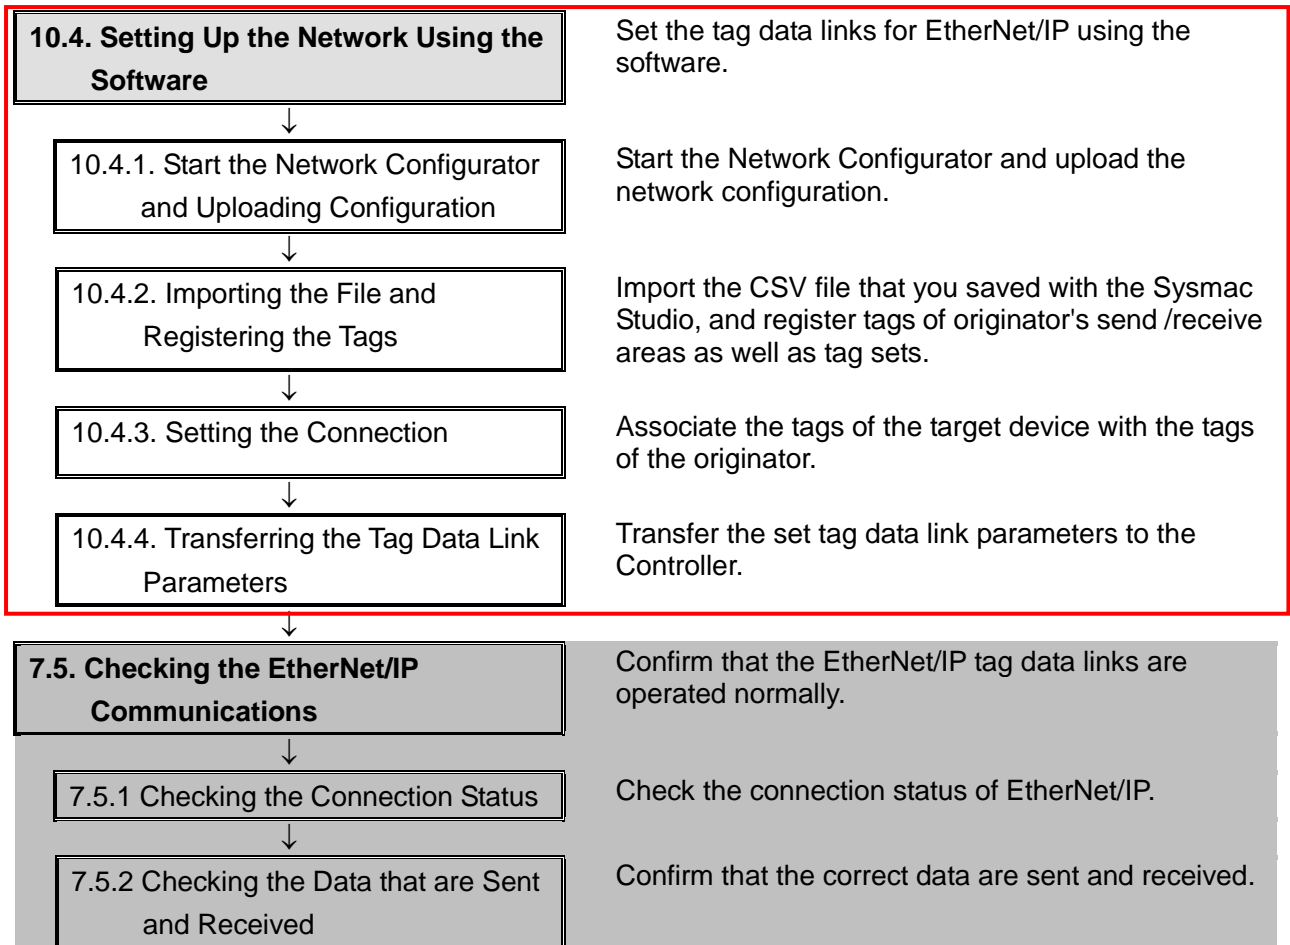

10.3. Setting Up the Controller Using the Software

Set up the Controller using the software.


10.3.1. Starting the Sysmac Studio and Setting the Parameters for the Controller

Start the Sysmac Studio and set the parameters for the Controller.

Install the Sysmac Studio and USB driver in the Personal computer beforehand.

- 1 Connect the LAN cable and the USB cable to the Controller.

* For details, refer to step 1 of 7.3.1. *Starting the Sysmac Studio and Importing the Project File.*

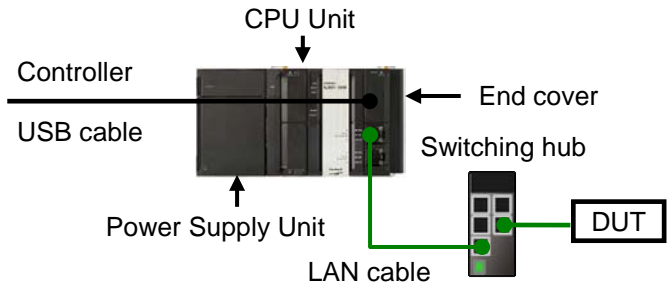


- 2 Turn ON the power supply to the Controller and Switching hub.

- 3 Start the Sysmac Studio.

Click the **New Project** Button.

* If a confirmation dialog for an access right is displayed at start, select to start.

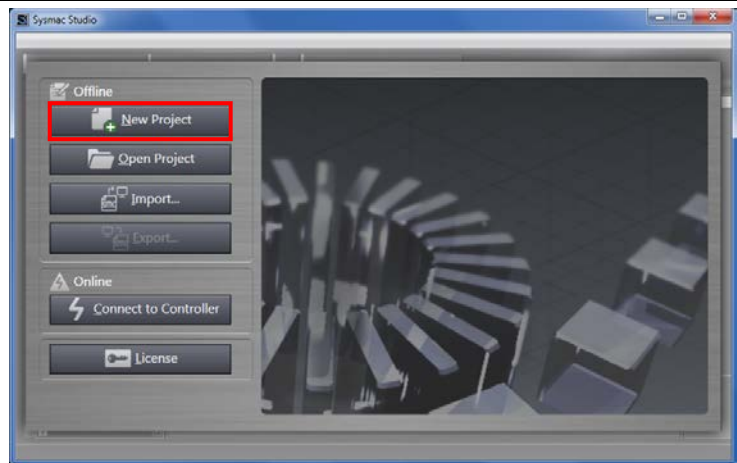



3 The Project Properties Dialog Box is displayed.

* In this document, New Project is used as the Project name.


Confirm that the device you use is shown in the *Category* and *Device* Fields of Select Device.

Select version **1.07** from the pull-down list of Version.

* Although 1.07 is selected in this document for example, select the version you actually use.

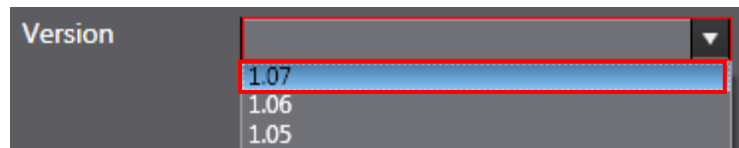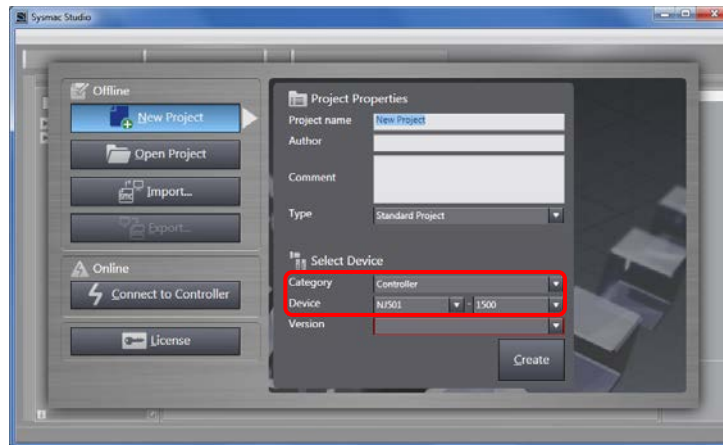




4 Click the **Create** Button.

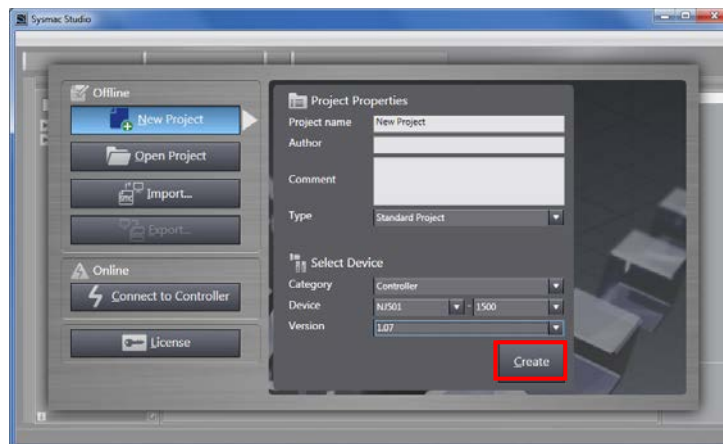

5 The New Project is displayed.

The left pane is called Multiview Explorer, the right pane is called Toolbox and the middle pane is called Edit Pane.



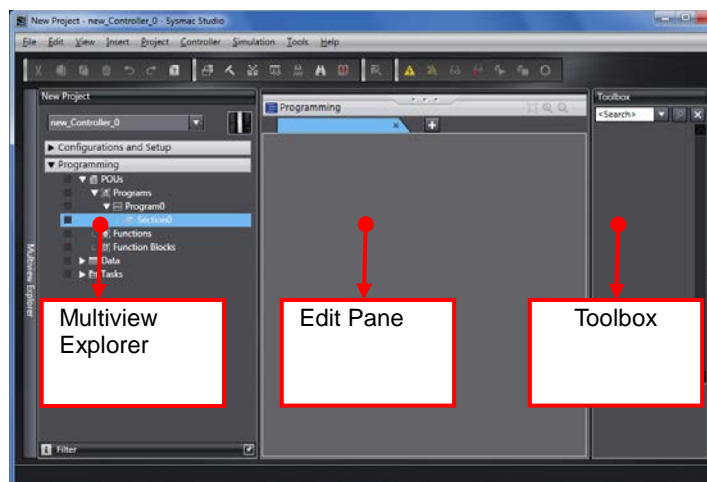


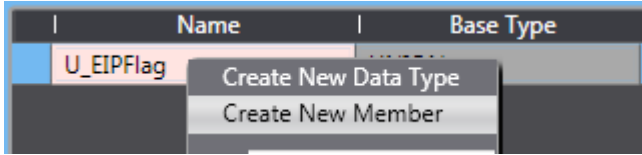
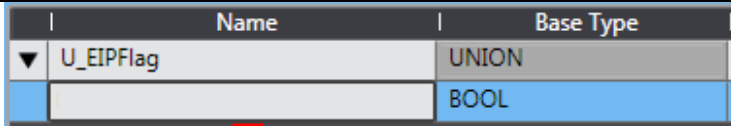


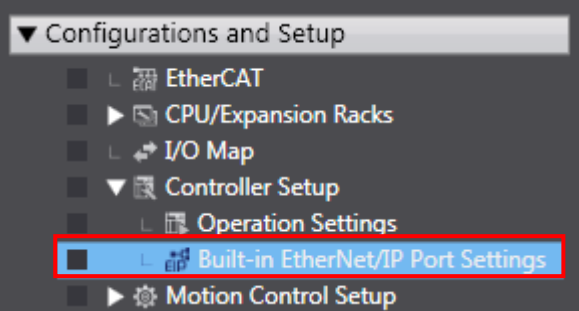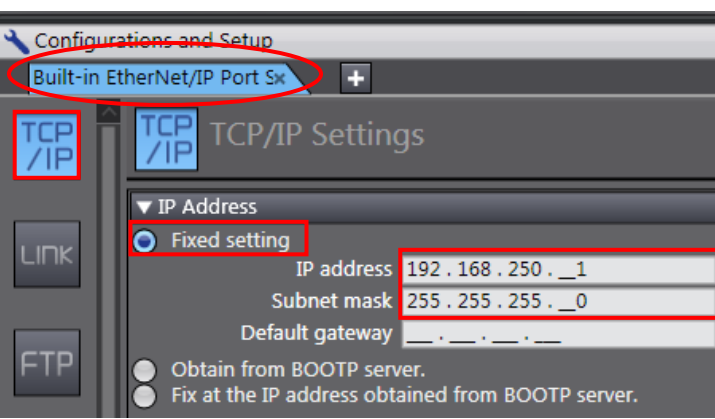


6	<p>Double-click Built-in EtherNet/IP Port Settings under Configurations and Setup - Controller Setup in the Multiview Explorer.</p>	
7	<p>The Built-in EtherNet/IP Port Settings Tab Page is displayed in the Edit Pane.</p> <p>Confirm that the following settings are made in the <i>IP Address</i> Field.</p> <p>IP address: 192.168.250.1 Subnet mask: 255.255.255.0</p>	

10.3.2. Setting and Exporting the Global Variables

Set the global variables and data types to use for the tag data links.

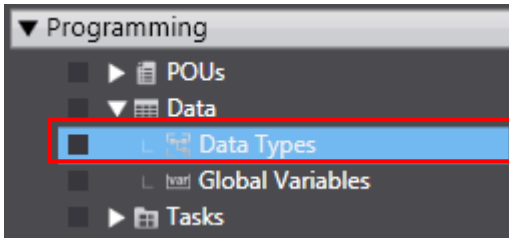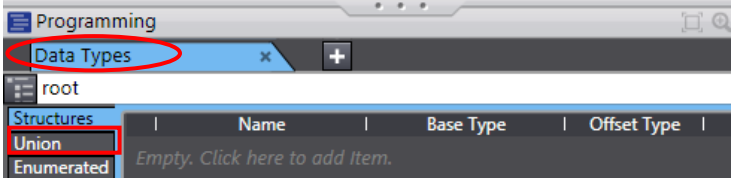Export the global variables in a CSV file to use as tags in the Network Configurator.

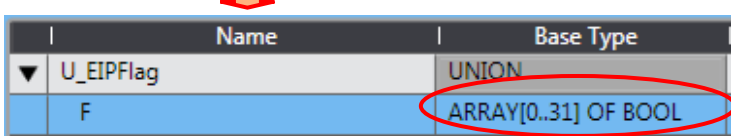1	Double-click Data Types under Programming - Data in the Multiview Explorer.	
2	<p>The Data types Tab Page is displayed in the Edit Pane. Select the Union Tab.</p> <p>Click a <i>Name</i> Column to enter a new data type.</p> <p>Enter <i>U_EIPFlag</i> in the <i>Name</i> Column.</p>	   
3	While the <i>Base Type</i> Column is being selected, right-click and select Create New Member from the menu.	
4	<p>The Down Arrow Button is displayed, allowing you to enter a new member.</p> <p>Enter <i>F</i> in the <i>Name</i> Column.</p> <p>Enter <i>BOOL[32]</i> in the <i>Base Type</i> Column.</p> <p>After entering, confirm that the Base Type changes to <i>ARRAY[0..31] OF BOOL</i>.</p>	   

5

In the same way as steps 3 and 4, enter the following data in the new columns.

- Name: *W*
- Base Type: *DWORD*

Name	Base Type	Comment
U_EIPFlag	UNION	
F	ARRAY[0..31] OF BOOL	
W	DWORD	

6

Select the **Structures** Tab.

Click a *Name* Column to enter a new base type.

Enter *S_EIPOutput* in the *Name* Column.

7

While the *Base Type* Column is being selected, right-click and select **Create New Member** from the menu.

8

The **Down Arrow** Button is displayed, allowing you to enter a new member.

In the same way as step 4, enter the following data in the new columns.

- Name: *ControlFlag*
- Base Type: *U_EIPFlag*

9

In the same way as steps 7 and 8, enter the following data in the new member columns.

- Name: *CommandCode*
- Base Type: *DWORD*
- Name: *CommandParam1*
- Base Type: *DINT*
- Name: *CommandParam2*
- Base Type: *DINT*
- Name: *CommandParam3*
- Base Type: *DINT*

Name	Base Type	Offset Type	Offset Byte	Offset Bit
S_EIPOutput	STRUCT	NJ		
ControlFlag	U_EIPFlag			
CommandCode	DWORD			
CommandParam1	DINT			
CommandParam2	DINT			
CommandParam3	DINT			

* Make sure that members are displayed in order of the offsets listed in Section 9.2.

10

Right-click and select **Create New Data Type** from the menu.

11

Enter *S_EIPInput* in the *Name* Column.


Name	Base Type	Offset Type	Offset Byte	Offset Bit
S_EIPOutput	STRUCT	NJ		
ControlFlag	U_EIPFlag			
CommandCode	DWORD			
CommandParam1	DINT			
CommandParam2	DINT			
CommandParam3	DINT			
S_EIPInput	STRUCT	NJ		

- 12 In the same way as steps 7 and 8, enter the following data in the new member columns.
- Name: *StatusFlag*
Base Type: *U_EIPFlag*
 - Name: *CommandCodeEcho*
Base Type: *DWORD*
 - Name: *ResponseCode*
Base Type: *DINT*
 - Name: *ResponseData*
Base Type: *DINT*
 - Name: *OutputData*
Base Type: *DINT [8]*


Name	Base Type	Offset Type	Offset Byte	Offset Bit
▼ S_EIPOutput	STRUCT	NJ		
ControlFlag	U_EIPFlag			
CommandCode	DWORD			
CommandParam1	DINT			
CommandParam2	DINT			
CommandParam3	DINT			
▼ S_EIPInput	STRUCT	NJ		
StatusFlag	U_EIPFlag			
CommandCodeEcho	DWORD			
ResponseCode	DINT			
ResponseData	DINT			
OutputData	ARRAY[0..7] OF DINT			

* Make sure that members are displayed in order of the offsets listed in *Section 9.2*.

- 13 Double-click **Global Variables** under **Programming - Data** in the Multiview Explorer.

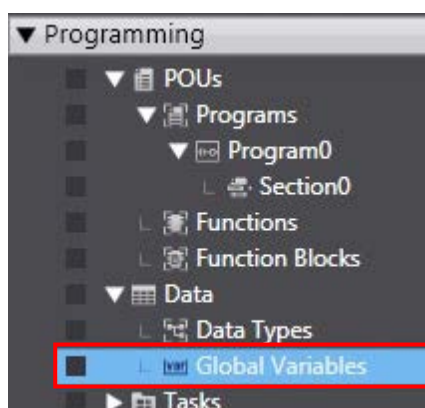

- 14 The Global Variables Tab Page is displayed in the Edit Pane. Click a column under the *Name* Column to enter a new variable. Enter *EIP002_OUT* in the *Name* Column.

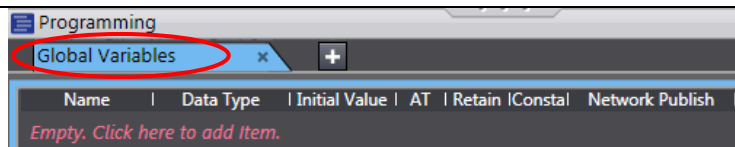

Name	Data Type	Initial Value	AT	Retain	IConstal	Network Publish
	BOOL			<input type="checkbox"/>	<input type="checkbox"/>	Do not publish

Name	Data Type	Initial Value	AT	Retain	IConstal	Network Publish
EIP002_OUT	BOOL			<input type="checkbox"/>	<input type="checkbox"/>	Do not publish


Enter *S_EIPOutput* in the *Data Type* Column.

Name	Data Type	Initial Value	AT	Retain	IConstal	Network Publish
EIP002_OUT	S_EIPOutput			<input type="checkbox"/>	<input type="checkbox"/>	Do not publish

Select **Output** from the Network Publish Menu.

Name	Data Type	Initial Value	AT	Retain	IConstal	Network Publish
EIP002_OUT	S_EIPOutput			<input type="checkbox"/>	<input type="checkbox"/>	Do not publish
						Do not publish Publish Only Input Output


- 15 After entering, right-click and select **Create New** from the menu.

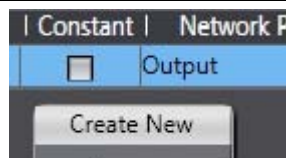


- 16 In the same way as step 14, enter the following data in the new columns.
- Name: *EIP002_IN*
 - Data Type: *S_EIPInput*
 - Network Publish: *Input*

Name	Data Type	Initial Value	AT	Retain	Constal	Network Publish
EIP002_OUT	S_EIPOutput			<input type="checkbox"/>	<input type="checkbox"/>	Output
EIP002_IN	S_EIPInput			<input type="checkbox"/>	<input type="checkbox"/>	Input


- 17 Select **Export Global Variables** - **Network Configurator** from the Tools Menu.

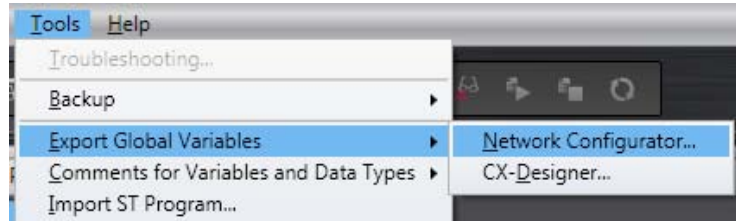


- 18 The Save As Dialog Box is displayed. Enter *EIP002* in the *File name* Field. Click the **Save** Button.

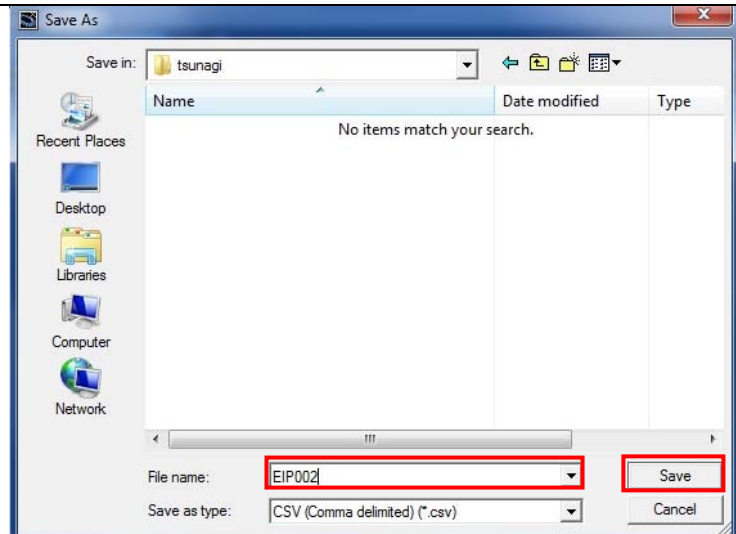


- 19 Double-click **Task Settings** under **Configurations and Setup** in the Multiview Explorer. The Task Settings Tab Page is displayed in the Edit Pane. Click the **VAR** Button. Click the **+** Button.

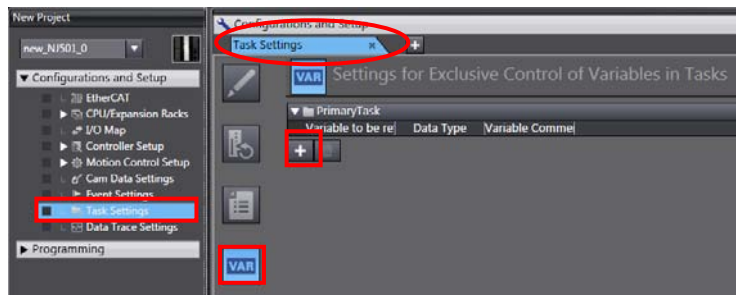

- 20 Click the **Down Arrow** Button of the *Variable to be refreshed* Field. The variables set in steps 14 to 16 are displayed. Select **EIP002_OUT**.

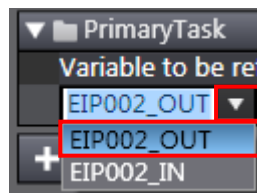


- 21 Click the **+** Button.

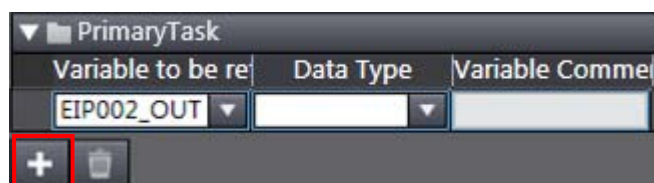

22 New columns appear. In the same way as step 20, add the same variable as you set in step 16 to the *Variable to be refreshed* Field.


* Since the data types are displayed automatically, you do not have to set them.

Confirm that all variables set in steps 14 to 16 as shown on the right are displayed.

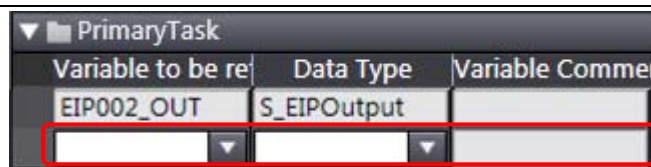

The screenshot shows a table titled 'PrimaryTask' with three columns: 'Variable to be re', 'Data Type', and 'Variable Commel'. The first row contains 'EIP002_OUT', 'S_EIPOutput', and an empty field. A red rectangle highlights the first row.

Variable to be re	Data Type	Variable Commel
EIP002_OUT	S_EIPOutput	

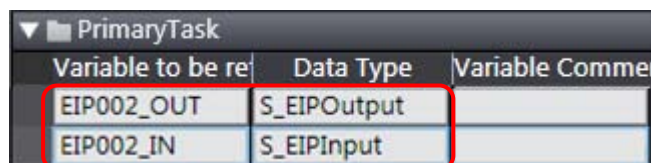

The screenshot shows the same 'PrimaryTask' table, but now with two rows. The second row contains 'EIP002_IN' and 'S_EIPInput'. A red rectangle highlights both rows.

Variable to be re	Data Type	Variable Commel
EIP002_OUT	S_EIPOutput	
EIP002_IN	S_EIPInput	

10.3.3. Connecting Online and Transferring the Project Data







Connect online with the Sysmac Studio and transfer the project data to the Controller.

WARNING

Always confirm safety at the Destination Device before you transfer a user program, configuration data, setup data, device variables, or values in memory used for CJ-series Units from the Sysmac Studio.

The devices or machines may perform unexpected operation regardless of the operating mode of the CPU Unit.

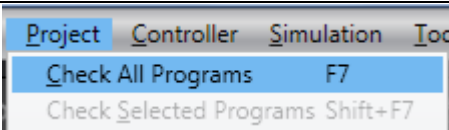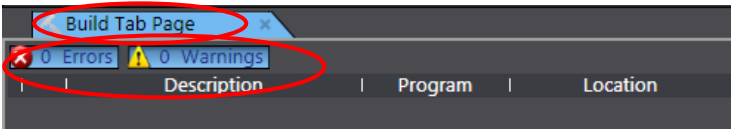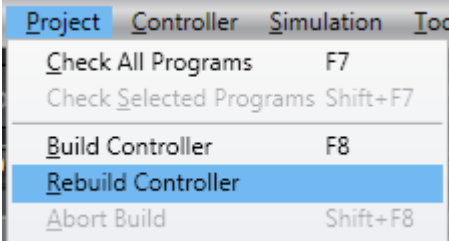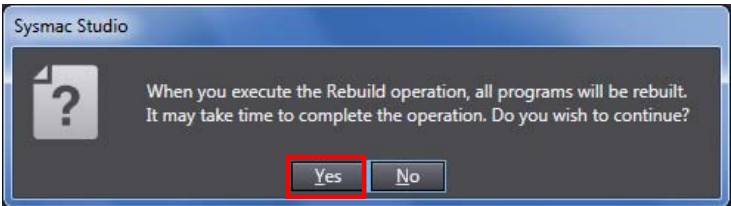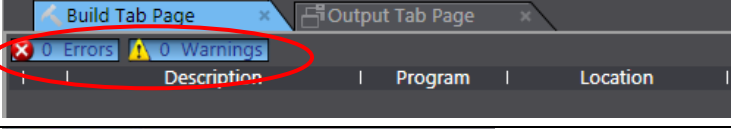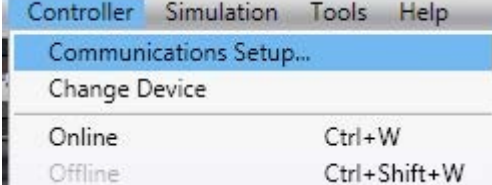


1	Select Check All Programs from the Project Menu.	
2	The Build Tab Page is displayed on the Edit Pane. Confirm that "0 Errors" and "0 Warnings" are displayed.	
3	Select Rebuild Controller from the Project Menu.	
4	A confirmation dialog box is displayed. Check the contents and click the Yes Button.	
5	Confirm that "0 Errors" and "0 Warnings" are displayed in the Build Tab Page.	
6	Select Communications Setup from the Controller Menu.	

- 7 The Communications Setup Dialog Box is displayed.



Confirm that the *Direct connection via USB* Option is selected for Connection type.

Click the **OK** Button.

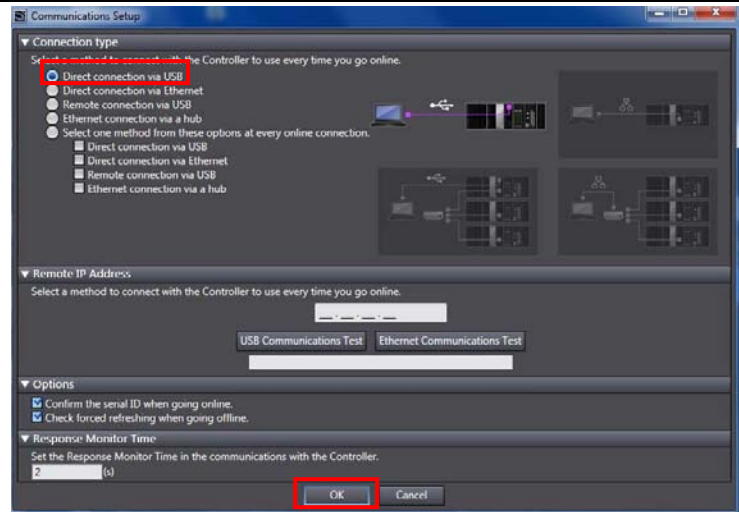

- 8 Select **Online** from the Controller Menu.
A confirmation dialog box is displayed. Check the contents and click the **Yes** Button.

* The displayed dialog depends on the status of the Controller used. Check the contents and click the **Yes** Button to proceed with the processing.

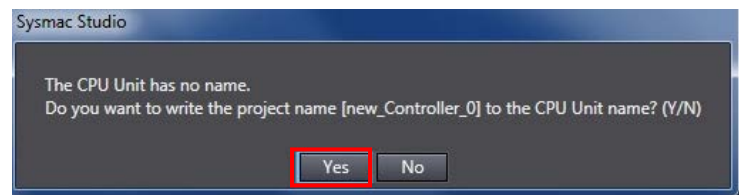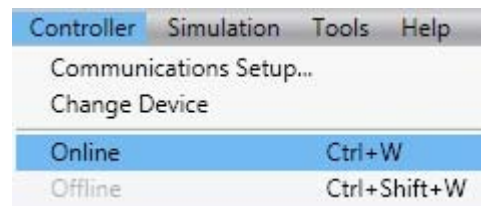

- 9 When an online connection is established, a yellow bar is displayed on the top of the Edit Pane.



Additional Information

For details on online connections to a Controller, refer to *Section 5 Online Connections to a Controller* of the *Sysmac Studio Version 1 Operation Manual* (Cat. No. W504).


- 10 Select **Synchronization** from the Controller Menu.



11 The Synchronization Dialog Box is displayed.

Confirm that the data to transfer (NJ501 in the right dialog) is selected. Then, click the **Transfer To Controller** Button.

* After executing the Transfer To Controller, the Sysmac Studio data is transferred to the Controller and the data is compared.


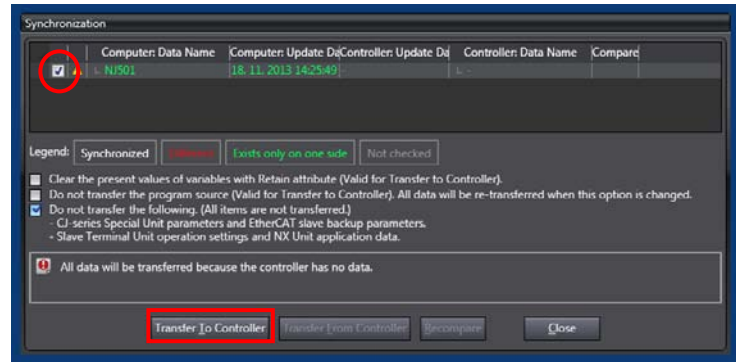


12 A confirmation dialog box is displayed. Confirm that there is no problem and click the **Yes** Button.

A screen stating "Synchronizing" is displayed.

A confirmation dialog box is displayed. Confirm that there is no problem and click the **No** Button.

* Do not return it to RUN mode.

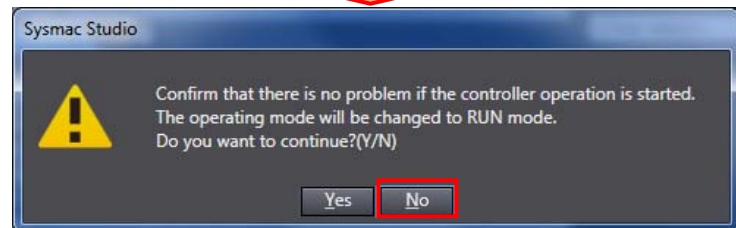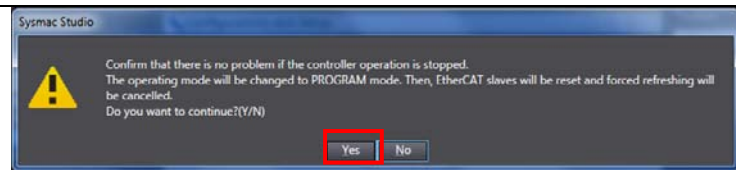


- 13 Confirm that the synchronized data is displayed with the color specified by "Synchronized", and that a message is displayed stating "The synchronization process successfully finished".

If there is no problem, click the **Close** Button.




* A message stating "The synchronization process successfully finished" is displayed if the Sysmac Studio project data and the data in the Controller match.

* If the synchronization fails, check the wiring and repeat from step 1.

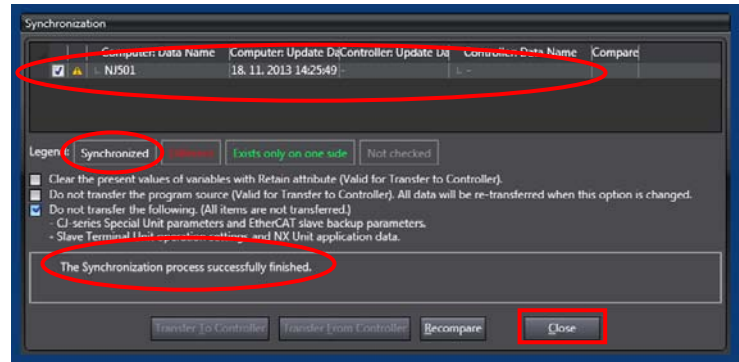

10.3.4. Settings in the Watch Window Tab Page

Make settings in the Watch Window Tab Page to check the data that is sent and received.

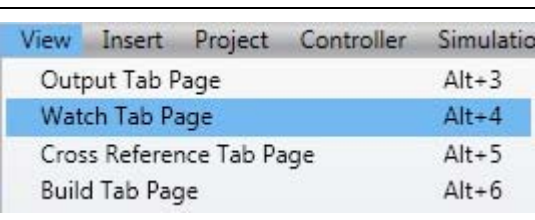1	Select Watch Tab Page from the View Menu.	
2	The Watch Window1 Tab Page is displayed in the lower section of the Edit Pane.	
3	<p>Enter the following names in the Watch Window1 Tab Page for monitoring.</p> <p>Click a column under the <i>Name</i> Column to enter a new name.</p> <p><i>EIP002_OUT.ControlFlag.F[0]</i> <i>EIP002_OUT.CommandCode</i> <i>EIP002_IN.StatusFlag.F[0]</i> <i>EIP002_IN.CommandCodeEcho</i> <i>EIP002_IN.ResponseCode</i></p> <p>* You will use the settings in 7.5.2. <i>Checking the Data That are Sent and Received.</i></p>	

10.4. Setting Up the Network Using the Software

Set the tag data links for EtherNet/IP using the software.

10.4.1. Starting the Network Configurator and Uploading the Configuration

Start the Network Configurator and upload the network configuration.




Precautions for Correct Use


Confirm that the LAN cable is connected before taking the following procedure.

When it is not connected, turn OFF the power supply to each device and then connect the LAN cable.


- 1 Start the Network Configurator.

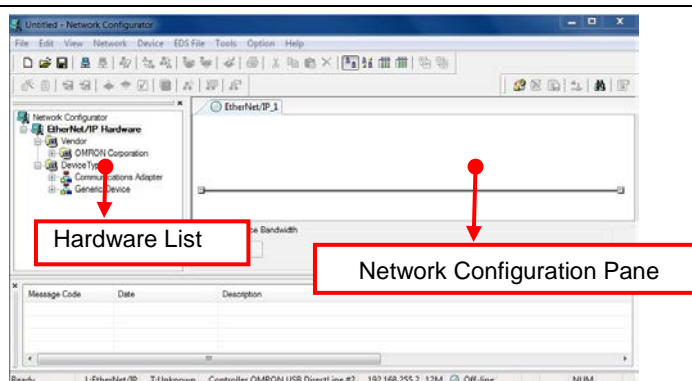

- 2 Select **Select Interface - NJ Series USB Port** from the Option Menu.

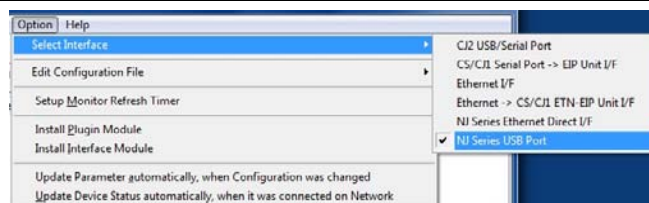


- 3 Select **Connect** from the Network Menu.




- 4 The Select Connect Network Port Dialog Box is displayed. Select **TCP:2**.


Click the **OK** Button.

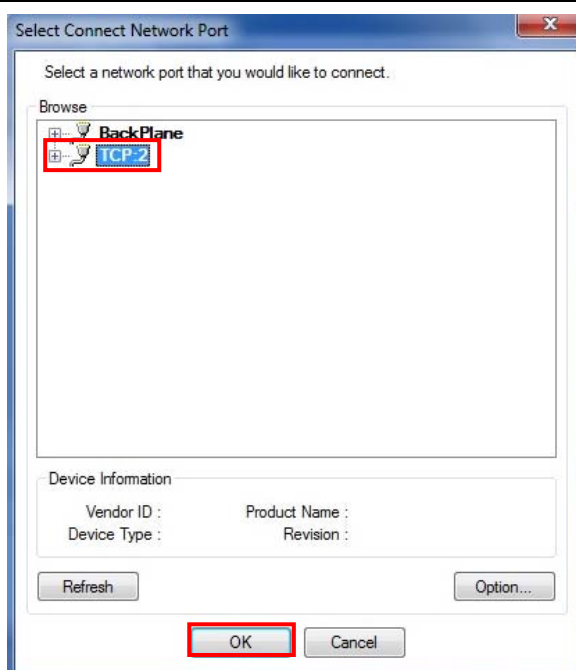

- 5 The Select Connected Network Dialog Box is displayed. Check the contents and click the **OK** Button.

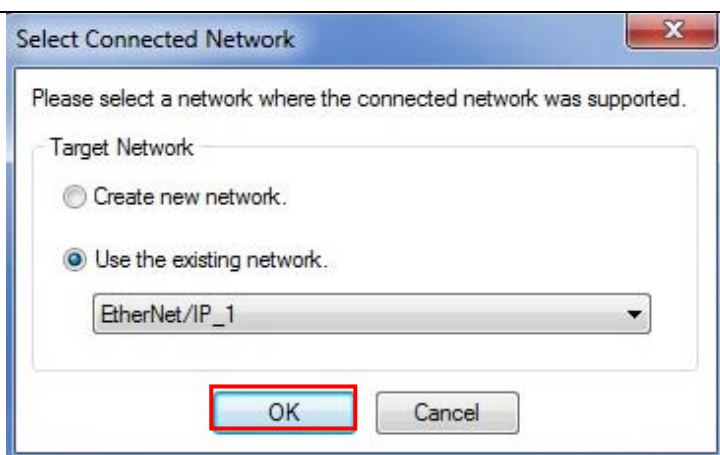





- 6 When an online connection is established normally, the color of the icon on the right figure changes to blue.



Additional Information

If an online connection cannot be made to the Controller, check the cable connection. Or, return to step 1, check the settings and repeat each step.

For details, refer to 7-2-8 *Connecting the Network Configurator to the Network* in Section 7 *Tag Data Link Functions of the NJ-series CPU Unit Built-in EtherNet/IP™ Port User's Manual* (Cat. No. W506).
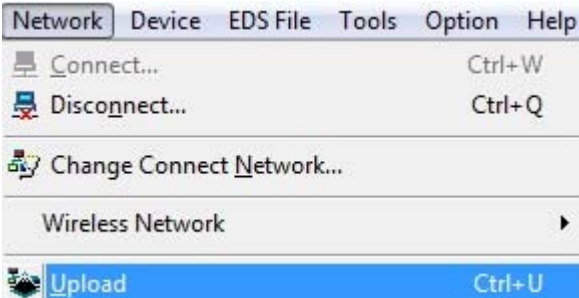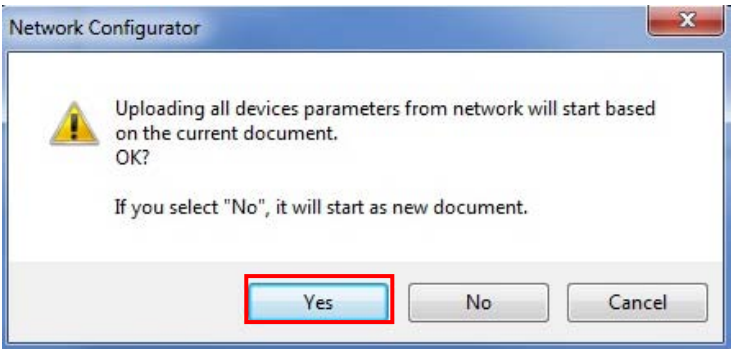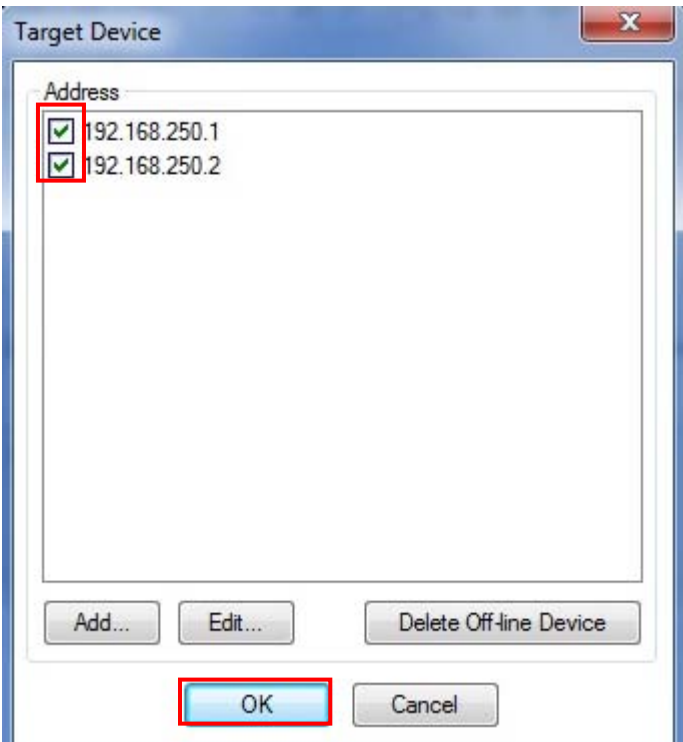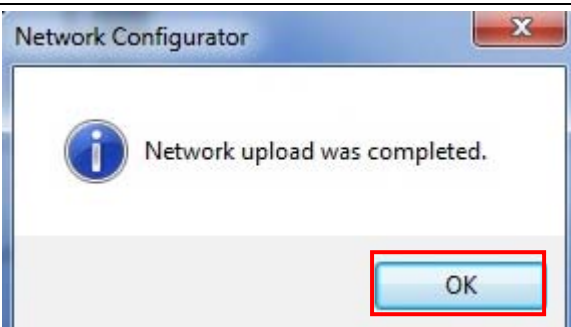
<p>7 Select Upload from the Network Menu to upload the device information on the network.</p>	 <p>The screenshot shows the 'Network' menu with options: Connect..., Disconnect..., Change Connect Network..., Wireless Network, and Upload (highlighted in blue). Keyboard shortcuts Ctrl+W, Ctrl+Q, and Ctrl+U are shown next to the first three options.</p>
<p>8 The dialog box on the right is displayed. Confirm that there is no problem and click the Yes Button.</p>	 <p>The screenshot shows a 'Network Configurator' dialog box with a warning icon and the text: 'Uploading all devices parameters from network will start based on the current document. OK? If you select "No", it will start as new document.' The 'Yes' button is highlighted with a red rectangle.</p>
<p>9 The Target Device Dialog Box is displayed. Select the 192.168.250.1 Check Box and the 192.168.250.2 Check Box.</p> <p>Click the OK Button.</p> <p>* If 192.168.250.1 and 192.168.250.2 are not displayed on the dialog box, click the Add Button to add the address.</p> <p>* The displayed addresses depend on the status of the Network Configurator.</p>	 <p>The screenshot shows a 'Target Device' dialog box with a list of addresses: 192.168.250.1 and 192.168.250.2. Both checkboxes are checked and highlighted with a red rectangle. The 'OK' button is also highlighted with a red rectangle.</p>
<p>10 The device parameters are uploaded. When uploading is completed, the dialog box on the right is displayed. Check the contents and click the OK Button.</p>	 <p>The screenshot shows a 'Network Configurator' dialog box with an information icon and the text: 'Network upload was completed.' The 'OK' button is highlighted with a red rectangle.</p>

11 After uploading is completed, confirm that the IP address of each node is updated on the Network Configuration Pane as follows:


IP address of node 1:

192.168.250.1

IP address of node 2:

192.168.250.2

* The destination device icon changes to the FZ Series device.

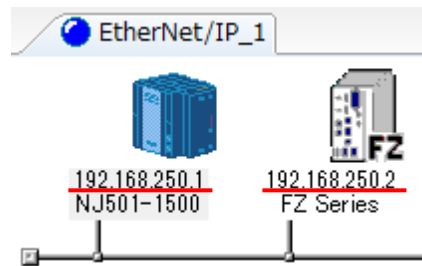



10.4.2. Importing the File and Registering the Tags


Import the CSV file that you saved with the Sysmac Studio, and register tags of originator's send /receive areas as well as tag sets.

This section explains the receive settings and send settings of the target node in order.


- 1 On the Network Configuration Pane of the Network Configurator, right-click the node 1 device and select **Parameter - Edit**.


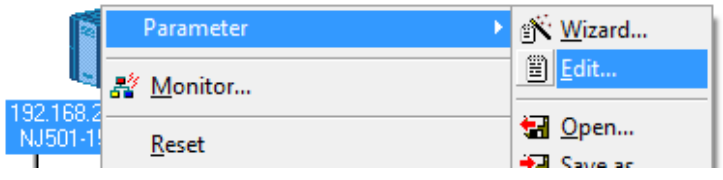

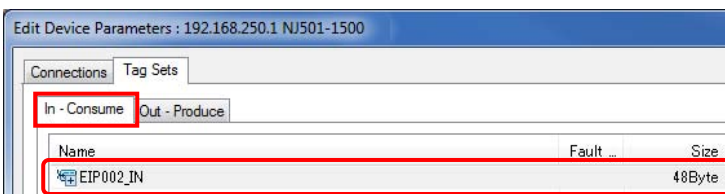
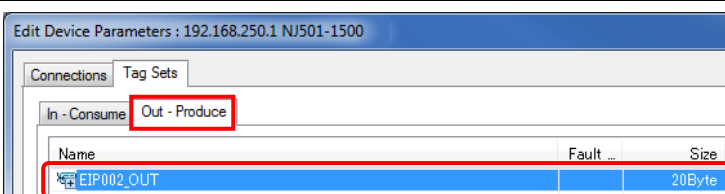


- 2 The Edit Device Parameters Dialog Box is displayed. Click the **To/From File** Button.

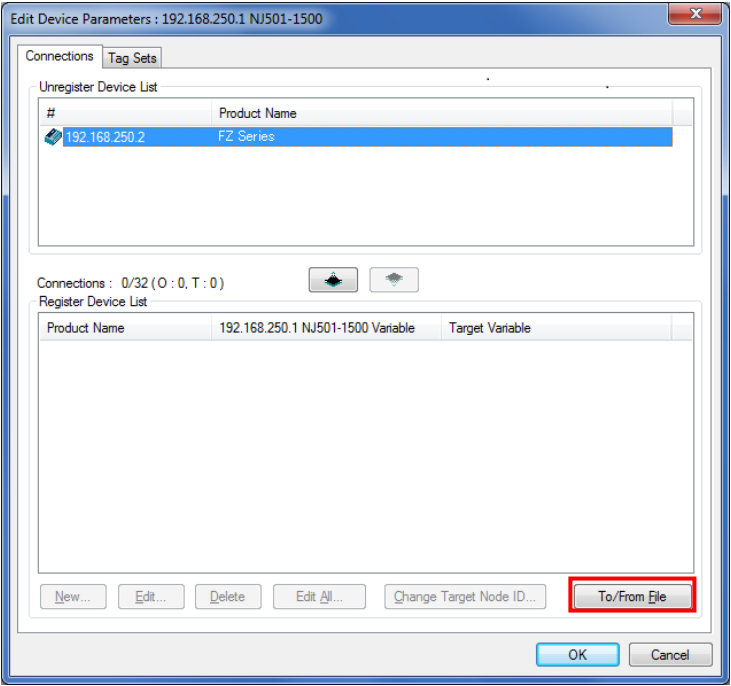
- 3 Select **Import from File**.

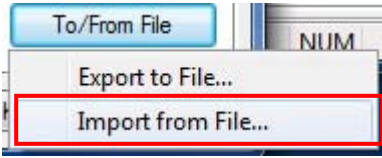
- 4 The Import Tag/Tag Set Dialog Box is displayed. Select **EIP002.csv** and click the **Open** Button.




* In the *Look in* Field, specify the folder in which the file was saved in *Section 10.3.3 Exporting the Global Variables*.

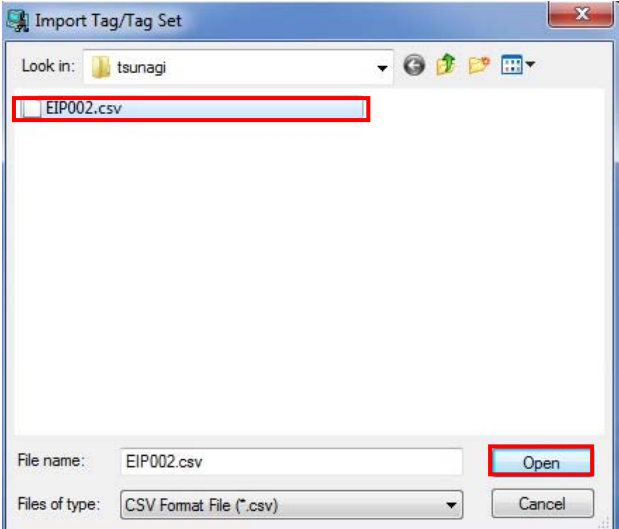

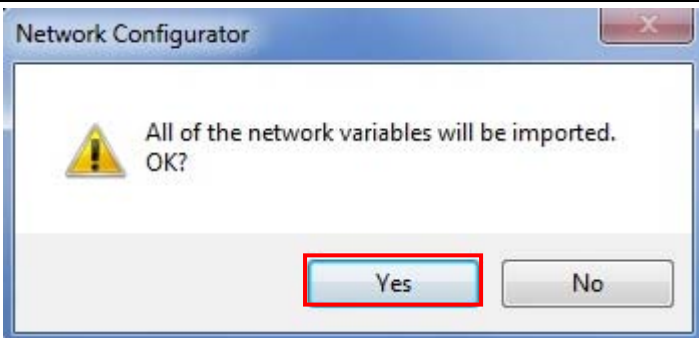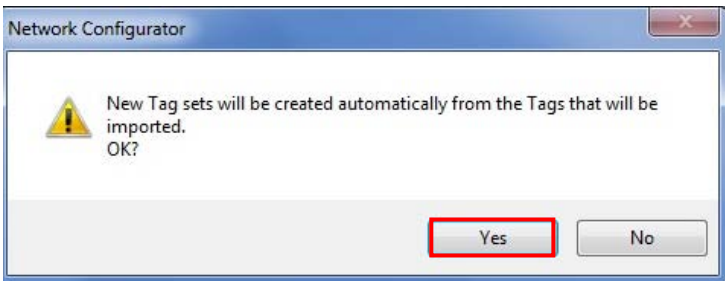5	<p>The right dialog boxes may not be displayed depending on the status of the Controller and software used. In such a case, proceed to the next step.</p> <p>The right dialog box is displayed. Confirm that there is no problem and click the Yes Button.</p> <p>The right dialog box is displayed. Confirm that there is no problem and click the Yes Button.</p>	 						
6	<p>The Edit Device Parameters Dialog Box is displayed again. Click the Tag Sets Tab.</p>							
7	<p>Select the In-Consume Tab. EIP002_IN and 48 Byte are displayed.</p>	 <table><thead><tr><th>Name</th><th>Fault ...</th><th>Size</th></tr></thead><tbody><tr><td>EIP002_IN</td><td></td><td>48Byte</td></tr></tbody></table>	Name	Fault ...	Size	EIP002_IN		48Byte
Name	Fault ...	Size						
EIP002_IN		48Byte						
8	<p>Select the Out-Produce Tab. EIP002_OUT and 20 Byte are displayed.</p>	 <table><thead><tr><th>Name</th><th>Fault ...</th><th>Size</th></tr></thead><tbody><tr><td>EIP002_OUT</td><td></td><td>20Byte</td></tr></tbody></table>	Name	Fault ...	Size	EIP002_OUT		20Byte
Name	Fault ...	Size						
EIP002_OUT		20Byte						
9	<p>Select the Connections Tab.</p>							

10.4.3. Setting the Connection

Associate the tags of the target device (that receives the open request) with the tags of the originator (that requests opening).

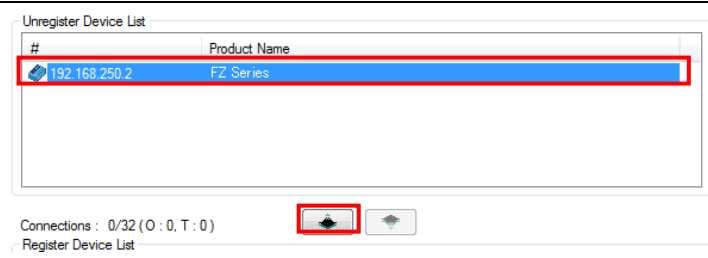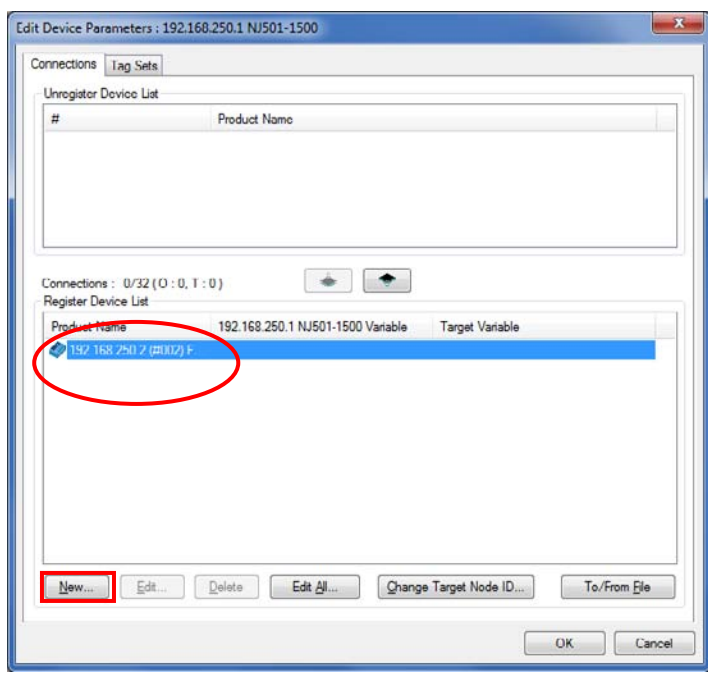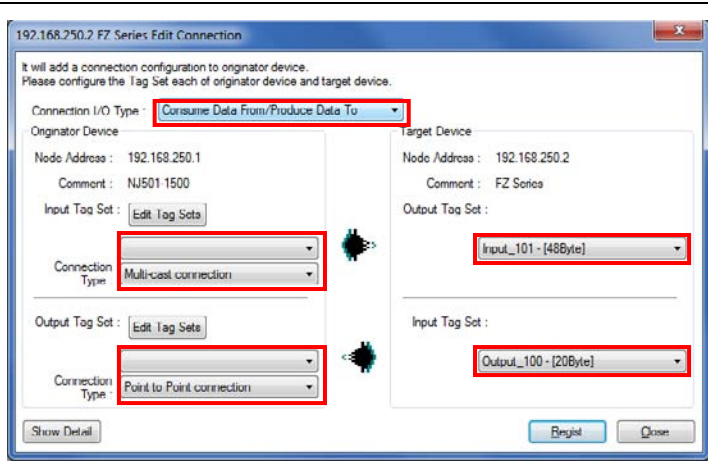1	<p>Select 192.168.250.2 in the <i>Unregister Device List</i> Field. Click the Down Arrow Button that is shown in the dialog box.</p>	
2	<p>192.168.250.2 is registered in the <i>Register Device List</i> Field.</p> <p>Select 192.168.250.2 and click the New Button.</p>	
3	<p>The Edit Connection Dialog Box is displayed. Select Consume Data From/Produce Data To from the Connection I/O Type pull-down list.</p> <p>Set the values listed in the following table to the <i>Originator Device</i> Field and the <i>Target Device</i> Field.</p>	

■ Settings of connection

Connection allocation		Setting value
Connection I/O type		Consume Data From/Produce Data To
Originator device	Input Tag Set	EIP002_IN-[48 Byte]
	Connection Type	Multi-cast connection

10. Appendix 2 Setting the Tag Data Links Using the Software

Target device	Output Tag Set	EIP002_OUT-[20 Byte]
	Connection Type	Point to Point connection
	Output Tag Set	Input_101-[48 Byte]
	Input Tag Set	Output_100-[20 Byte]

- 4 Confirm that the settings are correct.
Click the **Show Detail** Button.

192.168.250.2 FZ Series Edit Connection

It will add a connection configuration to originator device.
Please configure the Tag Set each of originator device and target device.

Connection I/O Type : Consume Data From/Produce Data To

Originator Device

Node Address : 192.168.250.1
Comment : NJ501 1500

Input Tag Set : Edit Tag Sets

EIP002_IN - [48Byte]

Connection Type : Multi-cast connection

Output Tag Set : Edit Tag Sets

EIP002_OUT - [20Byte]

Connection Type : Point to Point connection

Target Device

Node Address : 192.168.250.2
Comment : FZ Series

Output Tag Set : Input_101 - [48Byte]

Input Tag Set : Output_100 - [20Byte]

Show Detail

Register Close

- 5 Confirm that the Packet Interval (RPI) is set to 4 ms or longer and click the **Register** Button.
- * The same dialog box as step 4 is displayed again if you click the **Hide Detail** Button.

192.168.250.2 FZ Series Edit Connection

It will add a connection configuration to originator device.
Please configure the Tag Set each of originator device and target device.

Connection I/O Type : Consume Data From/Produce Data To

Originator Device

Node Address : 192.168.250.1
Comment : NJ501-1500

Input Tag Set : Edit Tag Sets

EIP002_IN - [48Byte]

Connection Type : Multi-cast connection

Output Tag Set : Edit Tag Sets

EIP002_OUT - [20Byte]

Connection Type : Point to Point connection

Target Device

Node Address : 192.168.250.2
Comment : FZ Series

Output Tag Set : Input_101 - [48Byte]

Input Tag Set : Output_100 - [20Byte]

Hide Detail

Detail Parameter

Packet Interval (RPI) : 50.0 ms (1.0 - 10000.0 ms)

Timeout Value : Packet Interval (RPI) x 4

Connection Name : (Possible to omit)

Connection Structure

192.168.250.1 NJ501-1500 *

Register


Close

- 6 The Edit Connection Dialog Box is displayed again. Click the **Close** Button.


Register

Close

- 7 The Edit Device Parameters Dialog Box is displayed again. Click the **OK** Button.


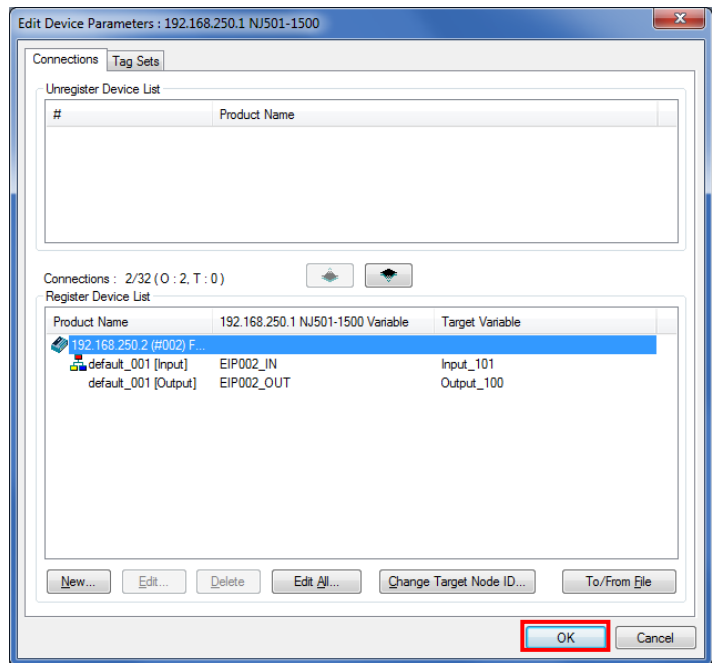

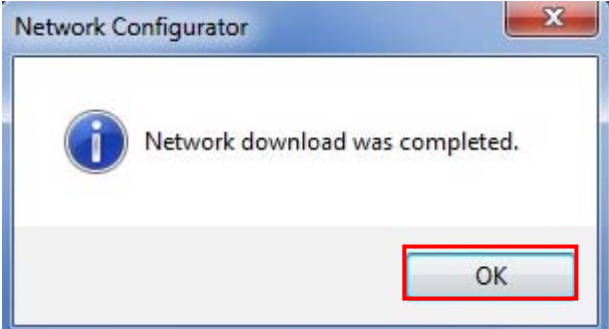


- 8 When the connection is completely allocated, the registered node address is displayed under the device icon of the Destination Device on the Network Configuration Pane.

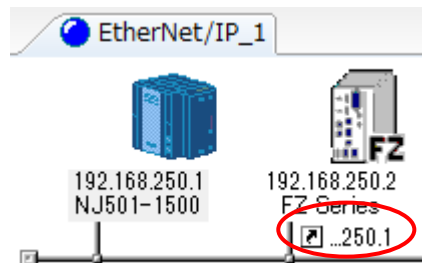

10.4.4. Transferring the Tag Data Link Parameters

Transfer the set tag data link parameters to the Controller.
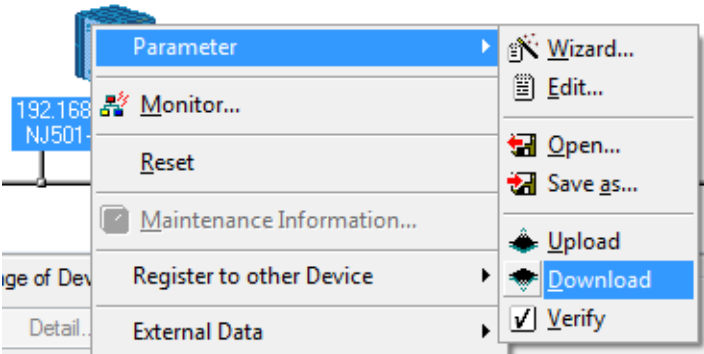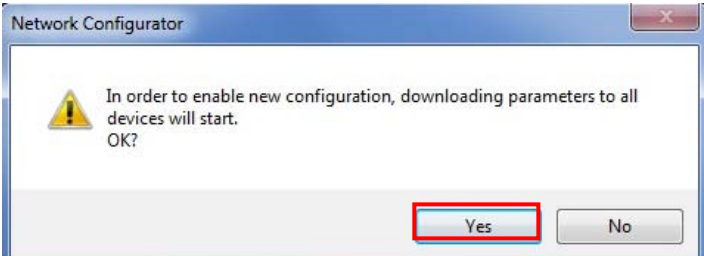
<p>1</p>	<p>Right-click the device icon of node 1 on the Network Configuration Pane and select Parameter - Download.</p> <p>The dialog box on the right is displayed. Confirm that there is no problem and click the Yes Button.</p>	 
<p>2</p>	<p>Tag data link parameters are downloaded from the Network Configurator to the Controller.</p>	
<p>3</p>	<p>The dialog box on the right is displayed. Check the contents and click the OK Button.</p>	

11. Revision History

Revision code	Date of revision	Revision reason and revision page
01	Dec. 20, 2013	First edition

Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms.
2. **Prices; Payment Terms.** All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.
4. **Interest.** Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the stated terms.
5. **Orders.** Omron will accept no order less than \$200 net billing.
6. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
7. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.
8. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
9. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.
10. **Force Majeure.** Omron shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
11. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Omron:
 - a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship except in "break down" situations.
 - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
 - c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
 - d. Delivery and shipping dates are estimates only; and
 - e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.
12. **Claims.** Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
13. **Warranties.** (a) **Exclusive Warranty.** Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied. (b) **Limitations.** OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) **Buyer Remedy.** Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See <http://www.omron247.com> or contact your Omron representative for published information.
14. **Limitation on Liability; Etc.** OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
15. **Indemnities.** Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
16. **Property; Confidentiality.** Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
17. **Export Controls.** Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (ii) sale of products to "forbidden" or other proscribed persons; and (iii) disclosure to non-citizens of regulated technology or information.
18. **Miscellaneous.** (a) **Waiver.** No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) **Assignment.** Buyer may not assign its rights hereunder without Omron's written consent. (c) **Law.** These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) **Amendment.** These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) **Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) **Setoff.** Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) **Definitions.** As used herein, "including" means "including without limitation"; and "Omron Companies" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

Certain Precautions on Specifications and Use

1. **Suitability of Use.** Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:
 - (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
 - (ii) Use in consumer products or any use in significant quantities.
 - (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
 - (iv) Systems, machines and equipment that could present a risk to life or property. Please know and observe all prohibitions of use applicable to this Product.
 NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
2. **Programmable Products.** Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.
3. **Performance Data.** Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.
4. **Change in Specifications.** Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.
5. **Errors and Omissions.** Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

OMRON AUTOMATION AND SAFETY • THE AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE

México DF • 52.55.59.01.43.00 • 01-800-226-6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

Apodaca, N.L. • 52.81.11.56.99.20 • 01-800-226-6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

OMRON ARGENTINA • SALES OFFICE

Cono Sur • 54.11.4783.5300

OMRON CHILE • SALES OFFICE

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES

54.11.4783.5300

OMRON EUROPE B.V. • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • +31 (0) 23 568 13 00 • www.industrial.omron.eu

Authorized Distributor:

Automation Control Systems

- Machine Automation Controllers (MAC) • Programmable Controllers (PLC)
- Operator interfaces (HMI) • Distributed I/O • Software

Drives & Motion Controls

- Servo & AC Drives • Motion Controllers & Encoders

Temperature & Process Controllers

- Single and Multi-loop Controllers

Sensors & Vision

- Proximity Sensors • Photoelectric Sensors • Fiber-Optic Sensors
- Amplified Photomicrosensors • Measurement Sensors
- Ultrasonic Sensors • Vision Sensors

Industrial Components

- RFID/Code Readers • Relays • Pushbuttons & Indicators
- Limit and Basic Switches • Timers • Counters • Metering Devices
- Power Supplies

Safety

- Laser Scanners • Safety Mats • Edges and Bumpers • Programmable Safety Controllers • Light Curtains • Safety Relays • Safety Interlock Switches